

## Instruction Manual and Replacement Parts List

---

# Stationary Integrated Systems

## High Pressure Breathing Air System

UNICUS 4i - 25




September 23, 2020

2nd Edition, Rev. 0 Chg. 8  
© Bauer Compressors, Inc.

MNL-0021

This information is believed to be accurate by Bauer Compressors, Inc., as of its date of publication, but Bauer offers NO WARRANTY regarding the accuracy, or continuing accuracy, of the information set forth herein. Bauer shall not be liable for inaccuracies in, or consequences resulting from, your use of this information. All information supplied is in connection with sales of Bauer's products, and is thus subject to Bauer's standard terms and conditions of sale. Bauer reserves the right to change this information and has no obligation to update these materials. This information is copyrighted by Bauer Compressors, Inc., and Bauer reserves to itself all rights to this publication. Bauer's customers have no right to reproduce, rewrite, modify, license or permit anyone else's use of this information, without the express written permission of Bauer Compressors, Inc.

	<b>WARNING</b>
<p>This Instruction Manual and Replacement Parts List contains safety information and instructions for the UNICUS 4i High Pressure Breathing Air System. You must read, understand and follow all safety precautions and instructions.</p>	

**1st Edition May 1993**

Rev	Chg	Date	Notes	Auth
1	0	Aug. 1993		
2	0	May 1997		
3	0	Dec. 1999	Area Code Change	JH

**2nd Edition; March 15, 2017**

Rev	Chg	Date	Notes	Auth
0	0	Mar. 15, 2017	Converted from UN II 13, 19 & 25 to UN 4i - 25	SS
0	1	Mar. 30, 2017	Added RFID Chapter, updated Electrical	SS
0	2	Apr. 26, 2017	Updated Drive Chapter	SS
0	3	Nov. 6, 2017	Added and Reworded RFID Notes	SS
0	4	Jun. 26, 2018	Added CO mnr Calibration	SS
0	5	Aug. 20, 2018	Updated RFID Chapter	SS
0	6	Jan. 9, 2019	Converted to Mod 9 Block	SS
0	7	Apr. 5, 2019	Updated CO mnr Calibration	SS
0	8	Sep. 23, 2020	Converted to ASY-5012, Enmet Sensor	SS

## FCC Compliance Statement

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate this equipment.

This product meets the applicable FCC Part 15 rules and Industry Canada's license exempt RSSs. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent matériel est conforme aux CNR exemptions de licence d'Industrie Canada. Son fonctionnement est soumis aux deux conditions suivantes: (1) cet appareil ne peut pas provoquer d'interférences, et (2) cet appareil doit accepter toute interférence, y compris celles susceptibles de provoquer le fonctionnement du dispositif

To limit RF exposure, please ensure 4 inches (10 cm) of separation from the transmitter antennas at all times.

# Table of Contents

## CHAPTER 1:- - - - - INTRODUCTION

<b>1.1</b>	<b>HOW TO USE THIS MANUAL</b> .....	1
1.1.1	Manual Safety Notices .....	1
<b>1.2</b>	<b>HOW TO USE THE REPLACEMENT PARTS LIST</b> .....	2
<b>1.3</b>	<b>HOW TO USE THE APPENDIX</b> .....	3
<b>1.4</b>	<b>UNIT SPECIFICATIONS</b> .....	4
1.4.1	UNICUS 4i - 25.....	4
1.4.1.1	Compressor Block,.....	4
1.4.1.2	Compressor Drive .....	4
1.4.1.3	Purification System Applicability.....	4
<b>1.5</b>	<b>COMPONENT LOCATIONS</b> .....	5

## CHAPTER 2:- - - - - OPERATING INSTRUCTIONS

<b>2.1</b>	<b>EMERGENCY STOP BUTTON</b> .....	8
<b>2.2</b>	<b>OPERATOR INTERFACE</b> .....	8
2.2.1	Badge Screen .....	8
2.2.2	Admin. Main Menu Screen .....	9
2.2.2.1	PERSONNEL .....	10
2.2.2.2	Cylinders.....	11
2.2.2.3	Settings.....	12
2.2.2.3.1	Setup .....	13
2.2.2.3.2	Parameters.....	13
2.2.2.3.3	Maintenance.....	14
2.2.2.3.4	Gas Sensor .....	14
2.2.2.4	Reports .....	14
2.2.2.5	Diagnose .....	14
2.2.3	Home Screen .....	15
2.2.3.1	Compressor Status .....	16
2.2.3.2	Fill Cylinders .....	16
2.2.3.3	Remote Fill .....	17
<b>2.3</b>	<b>FILL STATION OPERATION.</b> .....	18
2.3.1	Remote Fill Connection.....	19
2.3.1.1	Connecting an Air Bottle .....	20
2.3.1.2	Filling the Air Bottle.....	20
2.3.1.3	Removing the Air Bottle.....	20

## CHAPTER 3:- - - - - IK 18.1 II COMPRESSOR BLOCK

<b>3.1</b>	<b>DESCRIPTION</b> .....	21
3.1.1	Component Location .....	21
3.1.2	Air Flow Diagram.....	22
3.1.3	Lubrication System.....	22
3.1.3.1	Description.....	22
3.1.3.2	Oil Level Check .....	23
3.1.3.3	Oil Change Interval.....	23
3.1.3.4	Oil Capacity .....	23
3.1.3.5	Oil Change .....	23
3.1.3.6	Venting the Oil Pump .....	25

3.1.4	Intake Filter .....	25
3.1.4.1	Description.....	25
3.1.4.2	Maintenance.....	25
3.1.5	Interstage Separators .....	26
3.1.5.1	Description.....	26
3.1.5.2	Maintenance.....	27
3.1.6	Compressor Valves and Valve Heads .....	28
3.1.6.1	Functional Description.....	28
3.1.6.2	Initial Operational Check of the Valves .....	28
3.1.6.3	General Instructions for Changing the Valves.....	28
3.1.6.4	Changing the 1st Stage Valves. ....	29
3.1.6.4.1	Removal Procedure.....	29
3.1.6.4.2	Installation Procedure .....	30
3.1.6.5	Changing the 2nd Stage Valves.....	30
3.1.6.5.1	Removal Procedure.....	30
3.1.6.5.2	Installation Procedure .....	30
3.1.6.6	Changing the 3rd Stage Valves.....	31
3.1.6.6.1	Removal Procedure.....	31
3.1.6.6.2	Installation Procedure .....	31
3.1.6.7	Changing the 4th/5th Stage Valves.....	32
3.1.6.7.1	Discharge Valve Removal Procedure .....	33
3.1.6.7.2	Discharge Valve Installation Procedure .....	33
3.1.6.7.3	Inlet Valve Removal and Installation .....	34
3.1.7	Repair and Troubleshooting .....	34
3.1.7.1	Repair.....	34
3.1.7.2	Troubleshooting.....	37
3.1.8	Replacement Parts List.....	38
<b>3.2</b>	<b>AUTOMATIC CONDENSATE DRAIN SYSTEM; ASY-4011.....</b>	<b>65</b>
3.2.1	Description .....	65
3.2.2	120 II Block Regulator Assembly.....	66
3.2.2.1	ACD Operation.....	66
3.2.2.2	Start Unloading.....	67
3.2.2.3	Standstill Drainage.....	67
3.2.2.4	Condensate Drain Separator .....	67
3.2.3	ACD Maintenance.....	67
<b>3.3</b>	<b>CONDENSATE COLLECTOR.....</b>	<b>68</b>
3.3.1	ACD Replacement Parts List .....	70
3.3.2	Trouble shooting .....	76

---

**CHAPTER 4:- - - - - PURIFICATION SYSTEM**

---

<b>4.1</b>	<b>INTRODUCTION .....</b>	<b>77</b>
4.1.1	General Purification System Procedures.....	77
4.1.2	Chamber Safety Bore .....	77
4.1.3	Manual Condensate Drainage .....	78
4.1.4	Model, Serial Number and Part Number Identification .....	78
4.1.4.1	Compressor Data Plate .....	78
4.1.4.2	Purification System Data Plate .....	79
4.1.4.3	Cartridge Installation Data Plate.....	79
4.1.5	Purification System Configurations .....	79
4.1.6	Industrial Purification System Configurations.....	80
4.1.7	Cartridge Operating Life .....	80
4.1.7.1	Calculating the Maximum Cartridge Operating Hours .....	81
4.1.7.2	Calculating the Adjusted Cartridge Operating Hours.....	81

4.1.8	Chambers .....	81
4.1.8.1	Purification Cartridge Operating Hours Form .....	83
<b>4.2</b>	<b>IP55 SECURUS II® PURIFICATION SYSTEM .....</b>	<b>84</b>
4.2.1	P5S Securus II® Purification System Major Components.....	84
<b>4.3</b>	<b>COMPONENT DESCRIPTION .....</b>	<b>85</b>
4.3.1	Oil and Water Separator .....	85
4.3.2	Chamber .....	85
4.3.3	Cartridge .....	85
4.3.3.1	Cartridge Construction.....	85
4.3.3.2	Cartridge Handling .....	86
4.3.4	Condensate Drain Valve.....	86
4.3.5	Check Valves.....	86
4.3.6	Bleed Valve .....	86
4.3.7	Pressure Maintaining Valve .....	86
4.3.8	Safety Valve .....	86
4.3.9	Securus II® Electronic Moisture Monitor System .....	86
4.3.9.1	Securus® Cartridge.....	86
4.3.9.2	Securus II® Transmitter.....	86
<b>4.4</b>	<b>MAINTENANCE .....</b>	<b>87</b>
4.4.1	Oil and Water Separator .....	87
4.4.1.1	Removal of the Securus II® Transmitter.....	89
4.4.2	Cartridge Replacement .....	89
4.4.2.1	Leaking at the Safety Bore.....	90
<b>4.5</b>	<b>REPLACEMENT PARTS LIST .....</b>	<b>91</b>

**CHAPTER 5:- - - - - COMPRESSOR DRIVE; UNICUS 4I**

<b>5.1</b>	<b>VERTICAL COMPRESSOR DRIVE.....</b>	<b>96</b>
<b>5.2</b>	<b>MAINTENANCE OF THE V-BELT AND SHEAVES .....</b>	<b>96</b>
5.2.1	Check The Sheaves.....	96
5.2.2	Check the V-belt.....	97
5.2.3	Replacing the Belt .....	97
5.2.4	Replacing the Sheave .....	97
<b>5.3</b>	<b>REPLACEMENT PART LIST .....</b>	<b>98</b>

**CHAPTER 6:- - - - - ELECTRICAL PANEL, ASY-1191**

<b>6.1</b>	<b>OVERVIEW .....</b>	<b>99</b>
<b>6.2</b>	<b>ELECTRICAL PANEL .....</b>	<b>99</b>
6.2.1	Wiring Diagram.....	99
6.2.2	Electrical Panel Interior Access.....	99
<b>6.3</b>	<b>AC POWER REQUIREMENTS .....</b>	<b>100</b>
<b>6.4</b>	<b>ELECTRICAL PANEL COMPONENTS.....</b>	<b>100</b>
6.4.1	Programmable Logic Controller (PLC).....	100
6.4.1.1	Replacing the PLC .....	101
6.4.1.2	Installing a New Program .....	101
6.4.1.3	Installing a Memory Card .....	102
6.4.2	Hour Meter .....	102
6.4.3	Motor Starter. ....	102
6.4.4	Overload Relay.....	103
6.4.5	Power Supply.....	103
<b>6.5</b>	<b>ALARMS .....</b>	<b>104</b>

6.5.1	Final Separator Warning .....	104
6.5.2	Compressor High Temperature .....	104
6.5.3	Compressor Low Oil Pressure.....	105
<b>6.6</b>	<b>REPLACEMENT PARTS LIST.....</b>	<b>106</b>

**CHAPTER 7: - - - - -RFID OPTION**

<b>7.1</b>	<b>DESCRIPTION.....</b>	<b>108</b>
<b>7.2</b>	<b>COMPONENTS.....</b>	<b>108</b>
<b>7.3</b>	<b>FUNCTIONS.....</b>	<b>109</b>
7.3.1	Assigning the Cylinder.....	109
7.3.2	Filling the Cylinder with RFID Option.....	109
7.3.3	Kit-0585 .....	109
<b>7.4</b>	<b>REPLACEMENT PARTS LIST.....</b>	<b>111</b>

**CHAPTER 8: - - - - -ENMET GAS MONITORS**

<b>8.1</b>	<b>DESCRIPTION.....</b>	<b>113</b>
<b>8.2</b>	<b>OPERATION.....</b>	<b>113</b>
<b>8.3</b>	<b>CALIBRATION.....</b>	<b>114</b>
<b>8.4</b>	<b>REPLACEMENT PARTS.....</b>	<b>116</b>

**CHAPTER 9: - - - - -CFS III MAINTENANCE**

<b>9.1</b>	<b>DESCRIPTION.....</b>	<b>119</b>
<b>9.2</b>	<b>FILL STATION AIR FLOW.....</b>	<b>119</b>
<b>9.3</b>	<b>MAINTENANCE.....</b>	<b>119</b>
9.3.1	General Maintenance.....	119
9.3.2	Nonadjustable Valves.....	120
9.3.3	Pressure Gauges .....	120
9.3.4	Safety Valves.....	120
9.3.5	Pneumatic Connections.....	120
9.3.6	Bearings for Bottle Door Pivot.....	121
9.3.7	Pressure Hoses.....	121
9.3.8	Door Gas Spring.....	121
<b>9.4</b>	<b>REPLACEMENT PARTS LIST.....</b>	<b>122</b>
9.4.1	CFS III Assemblies .....	122
<b>9.5</b>	<b>FILL HOSE ASSEMBLIES.....</b>	<b>127</b>

**CHAPTER 10: - - - - -UNICUS III HP AIR STORAGE**

<b>10.1</b>	<b>BOTTLE SPECIFICATIONS .....</b>	<b>130</b>
10.1.1	ISO/UN; ISO 9809-PART2 / United Nations.....	130
10.1.2	ASME; American Society of Mechanical Engineers.....	130
<b>10.2</b>	<b>DESCRIPTION AND MAINTENANCE.....</b>	<b>131</b>
10.2.1	Description .....	131
10.2.2	Maintenance .....	132
10.2.2.1	Storage Bottles.....	132
10.2.2.2	Pressure Gauges.....	132
10.2.2.3	Tube Connections.....	133
10.2.2.4	Safety Valve .....	133

---

10.2.2.5	Pressure Hoses .....	133
<b>10.3</b>	<b>AUTOCASCADE SYSTEM .....</b>	<b>134</b>
10.3.1	General .....	134
10.3.2	Electrical.....	135
10.3.3	Filling the Storage Banks .....	135
10.3.4	Filling Bottles from the Storage Banks .....	135
10.3.5	Manual Bypass .....	135

---

**CHAPTER 11: - - - - -APPENDIX**

---

<b>11.1</b>	<b>SAFETY .....</b>	<b>136</b>
11.1.1	General Safety Precautions.....	136
11.1.2	Safety Warning Labels .....	138
<b>11.2</b>	<b>UNPACKING, HANDLING AND INSTALLATION .....</b>	<b>139</b>
11.2.1	Unpacking and Handling.....	139
11.2.2	Installation of the Compressor Unit .....	140
11.2.2.1	General.....	140
11.2.2.2	Ventilation .....	141
11.2.2.2.1	Outdoor Installation .....	141
11.2.2.2.2	Indoor Installation .....	141
11.2.2.2.3	Natural Ventilation .....	141
11.2.2.2.4	Forced Ventilation .....	142
11.2.3	Intake Gas.....	142
11.2.3.1	Inside Gas Source .....	142
11.2.3.2	Outside Gas Source.....	143
11.2.4	Compressor Intake Piping .....	143
11.2.5	Installation Procedures .....	144
11.2.6	Electrical Installation.....	144
11.2.6.1	Electric Drive.....	144
11.2.6.2	Electrical Supply.....	144
11.2.7	Pneumatic Leaks.....	146
<b>11.3</b>	<b>LONG TERM STORAGE .....</b>	<b>147</b>
11.3.1	General .....	147
11.3.2	Preparations .....	147
11.3.2.1	Units Equipped with a Filter System .....	147
11.3.3	Preserving the Compressor.....	147
11.3.4	Preventive Maintenance During Storage.....	148
11.3.5	Lubrication Oils for Preservation .....	148
11.3.6	Reactivating the Compressor Unit.....	148
<b>11.4</b>	<b>REPRODUCIBLE FORMS .....</b>	<b>149</b>
11.4.1	Scheduled Maintenance Form .....	149
11.4.2	Cartridge Operating Hours .....	152
11.4.3	Record of Operating Hours .....	153
<b>11.5</b>	<b>REFERENCE DATA .....</b>	<b>154</b>
11.5.1	Tightening Torque Values.....	154
11.5.2	Torque Sequence Diagrams.....	154
11.5.3	Conversion Formulas.....	154
11.5.4	Approved Lubricants Chart.....	155
11.5.5	Glossary of Abbreviations and Acronyms .....	155
<b>11.6</b>	<b>ADDITIONAL DOCUMENTS .....</b>	<b>156</b>
11.6.1	Diagrams and Drawings .....	156
11.6.2	Other Documents.....	156

---

# List of Figures

## CHAPTER 1: - - - - - INTRODUCTION

Figure 1-1	Compressor Identification Label .....	3
Figure 1-2	UNICUS 4i .....	5
Figure 1-3	UNICUS 4i Rear.....	6
Figure 1-4	UNICUS 4i Front Panel.....	7

## CHAPTER 2: - - - - - OPERATING INSTRUCTIONS

Figure 2-1	Control Panel .....	8
Figure 2-2	Initial Screen.....	9
Figure 2-3	Admin. Main Menu Screen .....	9
Figure 2-4	Personnel .....	10
Figure 2-5	Add New.....	11
Figure 2-6	Cylinders.....	11
Figure 2-7	Add New Cylinder.....	12
Figure 2-8	Settings .....	12
Figure 2-9	Setup .....	13
Figure 2-10	Parameters .....	13
Figure 2-11	Reports.....	14
Figure 2-12	Diagnostic.....	15
Figure 2-13	Home Screen, Operator .....	15
Figure 2-14	Compressor Status .....	16
Figure 2-15	Fill Cylinders .....	17
Figure 2-16	Bottle Riser.....	18
Figure 2-17	Bottle Valve Sequences.....	19

## CHAPTER 3: - - - - - IK 18.1 II COMPRESSOR BLOCK

Figure 3-1	Compressor Block (Front View) .....	21
Figure 3-2	Five Stage Compressor Air Flow .....	22
Figure 3-3	Lubrication Oil System.....	23
Figure 3-4	Oil Sight Gauge .....	23
Figure 3-5	Oil Sight Gauge & Drain.....	24
Figure 3-6	Removing the Oil Filter Cover .....	24
Figure 3-7	Replacing the Oil Filter .....	24
Figure 3-8	Intake Filter .....	25
Figure 3-9	2nd Stage Interstage Separator .....	27
Figure 3-10	3rd & 4th Stage Interstage Separator.....	27
Figure 3-11	1st Stage Valve Function.....	28
Figure 3-12	Valve Function .....	28
Figure 3-13	1st Stage Valve and Head.....	29
Figure 3-14	2nd Valve Head and Valves .....	30
Figure 3-15	3rd Stage Valve Head and Valves .....	31
Figure 3-16	4th/5th Stage Valve and Head .....	32

Figure 3-17	Discharge Valve Removal .....	33
Figure 3-18	Assembly Tool.....	34
Figure 3-19	Using Special Tool .....	34
Figure 3-20	Crankcase Assembly.....	38
Figure 3-21	Complete Crankshaft Assembly .....	40
Figure 3-22	1st Stage Piston and Cylinder .....	41
Figure 3-23	2nd & 4th Stage Piston and Cylinder .....	42
Figure 3-24	3rd Stage Piston and Cylinder .....	44
Figure 3-25	5th Stage Cylinder and Piston .....	45
Figure 3-26	1st Stage Valve Head.....	46
Figure 3-27	2nd Stage Valve Head .....	47
Figure 3-28	3rd Stage Valve Head .....	48
Figure 3-29	4th Stage Valve Head .....	49
Figure 3-30	5th Stage Valve Head .....	50
Figure 3-31	Flywheel Drive Assembly .....	51
Figure 3-32	Intake Filter Assembly.....	52
Figure 3-33	1st Stage Interfilter (Optional).....	54
Figure 3-34	2nd Stage Interstage Separator .....	56
Figure 3-35	3rd Stage Interstage Separator .....	57
Figure 3-36	4th Stage Interstage Separator .....	58
Figure 3-37	Cooling System Assembly.....	60
Figure 3-38	Lubricating System Assembly.....	62
Figure 3-39	Lubricating System.....	63
Figure 3-40	Crankcase Venting.....	64
Figure 3-41	Automatic Condensate Drain System.....	65
Figure 3-42	120 II Block Regulator Assembly .....	66
Figure 3-43	ACD Operation Diagrams .....	66
Figure 3-44	Condensate Collector.....	68
Figure 3-45	ASY-4011 Replacement Parts List.....	70
Figure 3-46	ACD Assembly, ASY-4001.....	72
Figure 3-47	ACD O-Rings .....	74
Figure 3-48	Regulator Assembly .....	75

**CHAPTER 4:- - - - -PURIFICATION SYSTEM**

Figure 4-1	Cartridge Safety Venting .....	78
Figure 4-2	P0 & P31 Safety Venting.....	78
Figure 4-3	Purification System Data Plates (typical).....	78
Figure 4-4	Correction Factor for Cartridge Operating Hours .....	82
Figure 4-5	Example Record of Adjusted Operating Hours .....	82
Figure 4-6	P5S Securus II® Purification System.....	84
Figure 4-7	Oil and Water Separator Labels.....	85
Figure 4-8	Oil and Water Separator .....	88
Figure 4-9	Sintered Metal Filter Assembly .....	88
Figure 4-10	Removal of the Securus II® Transmitter.....	89
Figure 4-11	Cartridge Replacement .....	89
Figure 4-12	P5 Purification System Parts List .....	91

---

Figure 4-13	Oil and Water Separator Parts List.....	92
Figure 4-14	27” Chamber Assembly Parts List .....	93
Figure 4-15	Securus II® Electronic Moisture Monitor System Parts List.....	94

---

**CHAPTER 5: - - - - - COMPRESSOR DRIVE; UNICUS 4I**

---

Figure 5-1	Vertical Drive with Idler (typical).....	96
Figure 5-2	Tensioning 1 .....	97
Figure 5-3	Tensioning 2 .....	97
Figure 5-4	UNICUS 4i, Vertical Drive with Idler .....	98

---

**CHAPTER 6: - - - - - ELECTRICAL PANEL, ASY-1191**

---

Figure 6-1	ASY-1191.....	99
Figure 6-2	Electrical Panel Label.....	100
Figure 6-3	PLC, CNT-0104 .....	100
Figure 6-4	Connector Block Removal .....	101
Figure 6-5	Hour Meter .....	102
Figure 6-6	Motor Starter (typical).....	103
Figure 6-7	Overload Relay (typical) .....	103
Figure 6-8	Power Supply.....	103
Figure 6-9	High Temperature Switch.....	104
Figure 6-10	Pressure Sensor (Typical).....	104
Figure 6-11	Electrical Panel, Interior.....	106

---

**CHAPTER 7: - - - - -RFID OPTION**

---

Figure 7-1	Components.....	108
Figure 7-2	Add New Cylinder.....	109
Figure 7-3	KIT-0585 .....	110
Figure 7-4	RFID Assembly .....	111
Figure 7-5	KIT-0585 .....	112

---

**CHAPTER 8: - - - - - ENMET GAS MONITORS**

---

Figure 8-1	Regulator & Monitors.....	113
Figure 8-2	Basic Calibration Kit & Test Gases.....	114
Figure 8-3	Regulator and Monitors.....	116
Figure 8-4	Monitors .....	117
Figure 8-5	Calibration Components.....	118

---

**CHAPTER 9: - - - - - CFS III MAINTENANCE**

---

Figure 9-1	Safety Valves.....	120
Figure 9-2	Special Tool, TOO-0020 .....	121
Figure 9-3	CFS III Assembly .....	122
Figure 9-4	Fill Whips & Brackets.....	123
Figure 9-5	CFS III Door Lock Assembly.....	124

---

---

Figure 9-6	Door Handle, Pivot and Bracket.....	125
Figure 9-7	CFS III Door Interlock.....	126
Figure 9-8	Standard Fill Hose Assemblies.....	127
Figure 9-9	Fill Whips with Options .....	128

---

**CHAPTER 10: - - - - - UNICUS III HP AIR STORAGE**

---

Figure 10-1	UNICUS III Storage Systems.....	132
Figure 10-2	Safety Valve; VAL-0022.....	133
Figure 10-3	Autocascade System.....	134

---

**CHAPTER 11: - - - - -APPENDIX**

---

Figure 11-1	Lifting Devices .....	139
Figure 11-2	Leveling Feet .....	140
Figure 11-3	Example of Gas Intake Piping .....	144
Figure 11-4	Incoming Power Wiring Label .....	145
Figure 11-5	6 Bolt and 4 Bolt Torque Sequence.....	154

---

## CHAPTER 1: INTRODUCTION

### 1.1 How To Use This Manual

This manual contains the operating and maintenance instructions for the Bauer Compressors, Inc. products listed on the front cover.

All instructions in this manual should be observed and carried out as written to prevent damage or premature wear to the product or the equipment served by it.

If your unit is equipped with nonstandard accessories and or options, supplemental information is normally included in other documentation; i.e. OEM Manuals or additional Bauer Manuals.

While every effort is made to ensure the accuracy of the information contained in this manual, Bauer Compressors, Inc. will not, under any circumstances be held accountable for any inaccuracies or the consequences thereof.

### NOTICE

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate this equipment.

This product meets the applicable FCC Part 15 rules. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

To limit RF exposure, please ensure 4 inches (10 cm) of separation from the transmitter antennas at all times.

#### 1.1.1 Manual Safety Notices

Important instructions concerning the endangerment of personnel, technical safety or operator safety will be specially emphasized in this manual by placing the information in the following types of safety notices.



### DANGER

DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury. This is limited to the most extreme situations.



### WARNING

WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or injury.



**CAUTION**

CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

**NOTICE**

NOTE advise of technical requirements that require particular attention by the operator or the maintenance technician for proper maintenance and utilization of the equipment.

**1.2 How to Use the Replacement Parts List**

- A lozenge ♦ in the Item Number column indicates the part number for a complete assembly.
- a dagger (†) in the Qty column with or without an ellipse (...) in the Part Number column means the part is illustrated for assembly purposes only and is not available for sale as an individual component. This part can be obtained by ordering the complete assembly.
- AR in the Qty column means that the item is cut or manufactured to the size which the customer specifies.
- A dash (—) in the Item Number column indicates that there is more than one part number applicable to the preceding Item Number.
- The letters in the columns labeled Kit indicate the number of operating hours when the part is to be replaced; a = replaced every 1,000 hours, b = replaced every 2,000 hours and c= replaced every 4,000 hours.
- NS in the Item Number column indicates the part is not illustrated but is available.

When placing an order for spare parts, please provide the following information to ensure delivery of the correct parts. The model number, date of manufacture and serial number can be found of the compressor unit identification plate on the compressor unit frame.

Information	Example
Model Number	UN 4i 25
Serial Number	196156
Date of Manufacture	02/2017
Part Number	VAL-0169
Part Description	Valve
Part Quantity Required	1

**Figure 1-1** Compressor Identification Label**WARNING**

The use of repair parts other than those included in the Bauer Replacement Parts Lists may create unsafe conditions over which Bauer has no control. Such unsafe conditions can lead to accidents that may be life-threatening, cause substantial bodily injury, and/or result in damage to the equipment. Therefore, Bauer Compressors, Inc. can bear no responsibility for equipment in which unapproved repair parts are installed.

**1.3 How to Use the Appendix**

Information contained in the Appendix to this manual includes the following.

- The safety instructions applicable to this product. They must be read, understood and complied with prior to operating the product.
- The instructions for installing this product. They must be read, understood and complied with prior to operating the product.
- Reproducible Forms
- Reference Data
  - Torque Values
  - Torque Sequence
  - Conversion Formulas
  - Approved Lubricants
  - Glossary of Abbreviations & Acronyms
- Additional Documents

**1.4 Unit Specifications**

All specifications are subject to change without prior notice.

**1.4.1 UNICUS 4i - 25**

Medium	air
Charging Rate	25.2 scfm (714 l/min) <sup>1</sup>
Free Air Delivery	21.0 scfm (595 l/min) <sup>2</sup>
Inlet pressure	atmospheric
Operating pressure, max.	6,000 psig (420 bar)
Ambient temperature range	40 - 115 °F (5 - 45 °C)
Weight	approximately 4,550 lb.(2,064 kgs)

**1.4.1.1 Compressor Block,**

IK18.1 II	Mod. 9
No. of stages	5
No. of cylinders	4
Cylinder bore, 1st stage	5.92 in. (130 mm)
Cylinder bore, 2nd stage	3.465/2.367 in. (88/60 mm)
Cylinder bore, 3rd stage	1.26 in. (32 mm)
Cylinder bore, 4th stage	0.709 in. (18 mm)
Cylinder bore, 5th stage	0.394 in. (10 mm)
Piston Stroke	1.969 in. (50 mm)
Intermediate pressure, 1st stage	45 - 60 psig (3 - 4 bar)
Safety valve setting, 1st stage	85 psig (6.0 bar)
Intermediate pressure, 2nd stage	195 - 225 psig (13.5 - 15.5 bar)
Safety valve setting, 2nd stage	350 psig (24 bar)
Intermediate pressure, 3rd stage	625 - 640 psig (43 - 44 bar)
Safety valve setting, 3rd stage	1,160 psig (80 bar)
Intermediate pressure, 4th stage	1,930 - 2,145 psig (133 - 148 bar)
Safety valve setting, 4th stage	2,610 psig (180 bar)
Direction of rotation when facing flywheel	CCW
Oil capacity	6 1/3 qts. (6 liters)
Oil Pressure	60 - 85 psig (4 - 6 bar)
Recommended oil (Synthetic)	BAUER OIL-0024
Maximum Inclination	10° in all directions

**1.4.1.2 Compressor Drive**

Voltage	Frequency	Phase	Power	RPM	Type	P/N
208 - 460 VAC	60 Hz	3Φ	20 Hp	3,600	TEFC	MTR-0514

**1.4.1.3 Purification System Applicability**

The Bauer P5 Purification System with Securus II® Electronic Moisture Monitoring is the standard purification system supplied.

1. Based on recharging an 80 cubic foot tank from 500 to 3000 PSIG  
 2. Referenced to standard inlet conditions of 68°F and 36% humidity at 14.70 psia.

### 1.5 Component Locations


Figure 1-2 UNICUS 4i



- 1. Lab On Locale (LOL)
- 2. Electronic Auto Cascade
- 3. Electrical Enclosure
- 4. HP Hose Reel
- 5. Drain Valves for ASME Storage Cylinders

- 6. Containment Fill Station Controls
- 7. 12" Touch Screen Monitor
- 8. Purification
- 9. Containment Fill Station

**Figure 1-3** UNICUS 4i Rear

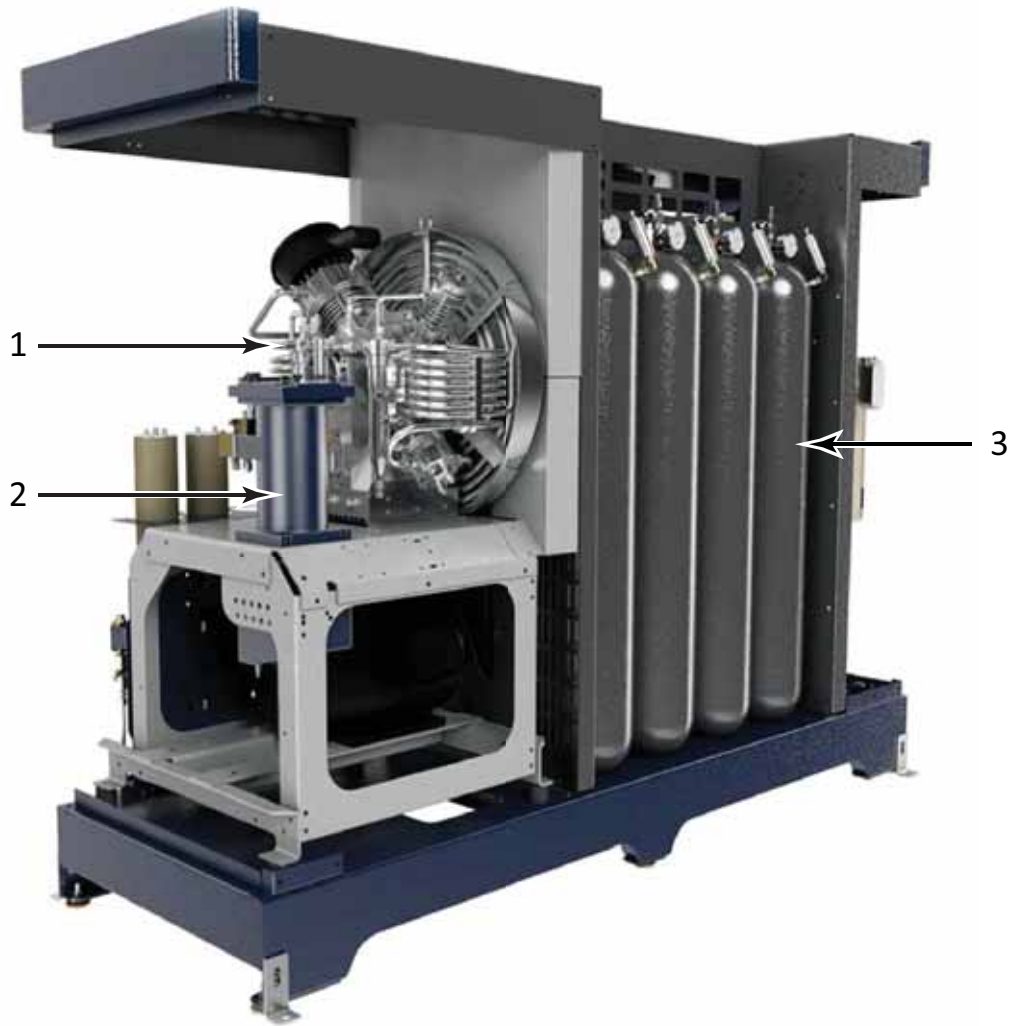


1. Air Compressor

2. Automatic Condensate Drain Assembly

3. HP Storage (ASME or ISO/UN)

**Figure 1-4** UNICUS 4i Front Panel

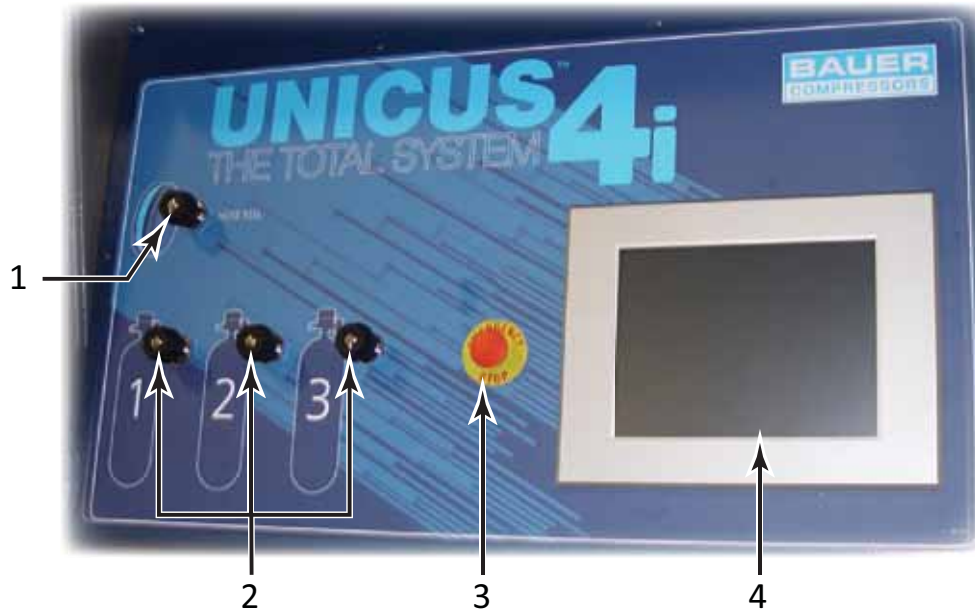


- 1. Hose Reel Fill Valve
- 2. CFS Fill Valves

- 3. Emergency Stop Push Button
- 4. Touch Screen Control Monitor

## CHAPTER 2: OPERATING INSTRUCTIONS

The following instructions apply to the Unicus 4i. The monitor for this unit is a 15" graphic touch screen and uses a Windows 7, 64 bit operating system.

**Figure 2-1** Control Panel

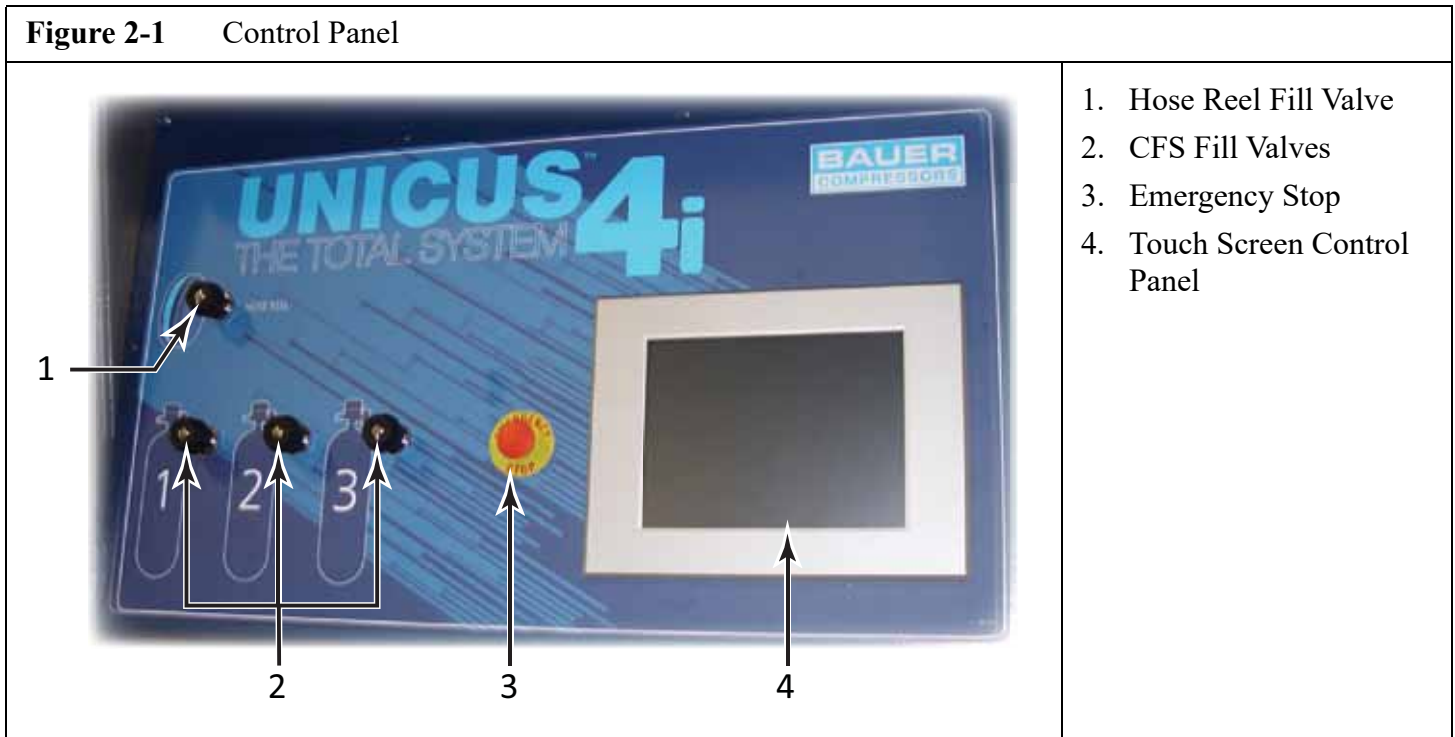

The electrical panel assembly & PLC will provide logical control and safety shutdowns for the compressor equipment. All necessary time delays, counters, shutdowns, sequencing and safety features are incorporated into a proprietary software program permanently saved into PLC memory. The software program is based on the pressure and use of the compressor. The operator uses the touchscreen interface to communicate with the PLC which is located within the electrical enclosure.

### 2.1 Emergency Stop Button

A normally closed switch when pulled out, when the E-Stop button is pressed in, it disconnects the main power source, turning off the compressor, draining the ACD system and stopping air delivery to the consuming devices. This button is to be used in case of emergency. Normal operational stops should be accomplished using the operator interface.


### 2.2 Operator Interface

The operator interface is a 15 inch, graphic, touchscreen operation monitor. The operator interface is the input/output device for normal operation of the compressor unit. The compressor system is ready and able to operate after the emergency stop switch is pulled out.

#### 2.2.1 Badge Screen


The initial screen after startup is the badge screen. The administrator must enter their badge number and password to have access to the compressor. Enter the badge number and press the check mark for OK. Then Enter the password and press the check mark to log onto the unit.

**Figure 2-2** Initial Screen

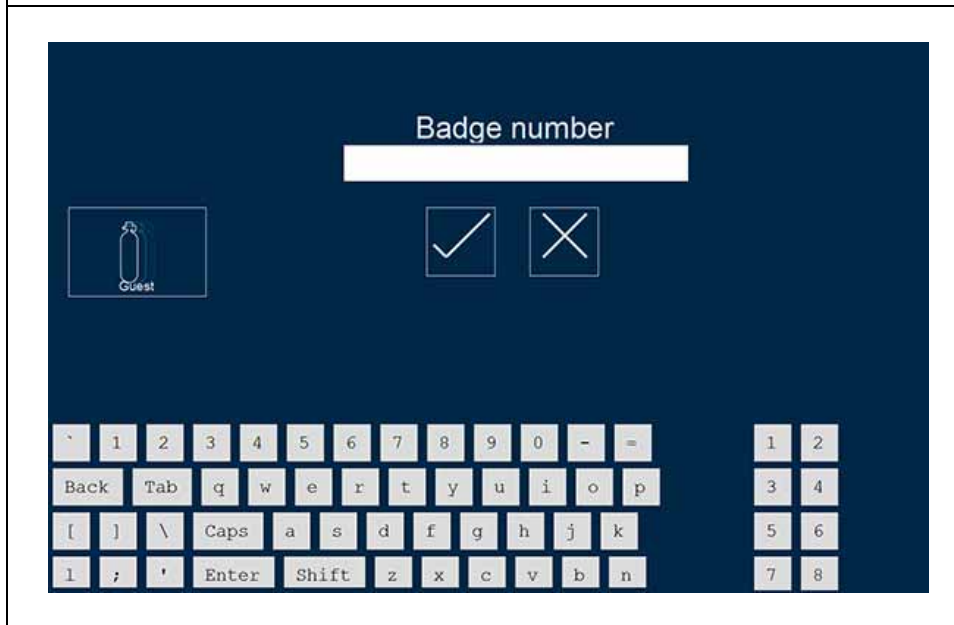

**2.2.2 Admin. Main Menu Screen**

**Figure 2-3** Admin. Main Menu Screen

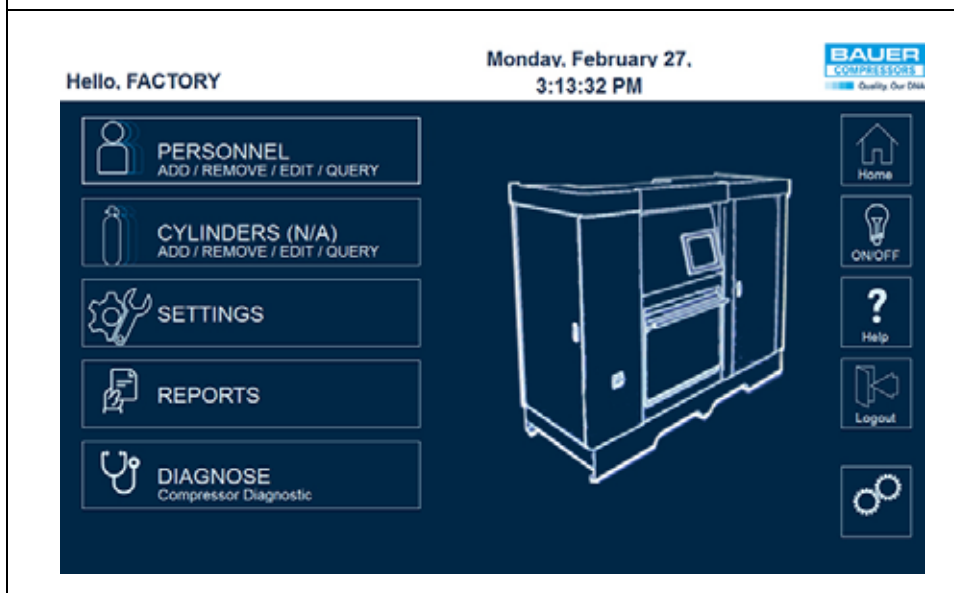


Once an administrative user has logged in they will be presented with the Admin. Main Menu screen. Along the right side are navigation keys. The HOME button presents the operator Home page, this is used to operate the unit. The LIGHT button toggles on and off the LED light above the control panel. The HELP button presents an explanation of the present screen. The LOGOUT button logs the present user out. The interlocking gear logo tells if the compressor is RUNNING, OFF, or in STANDBY mode. The GO / STOP button allows the user to turn the compressor ON or OFF.

Along the left side of the screen are the following buttons which allow administrator to perform essential tasks.

### 2.2.2.1 PERSONNEL

The personnel button will take the administrator to a page where they can ADD, DELETE, or EDIT the files for each person in the database. The buttons across the top sort the listed users as ALL (deleted and active), ACTIVE, or DELETED.

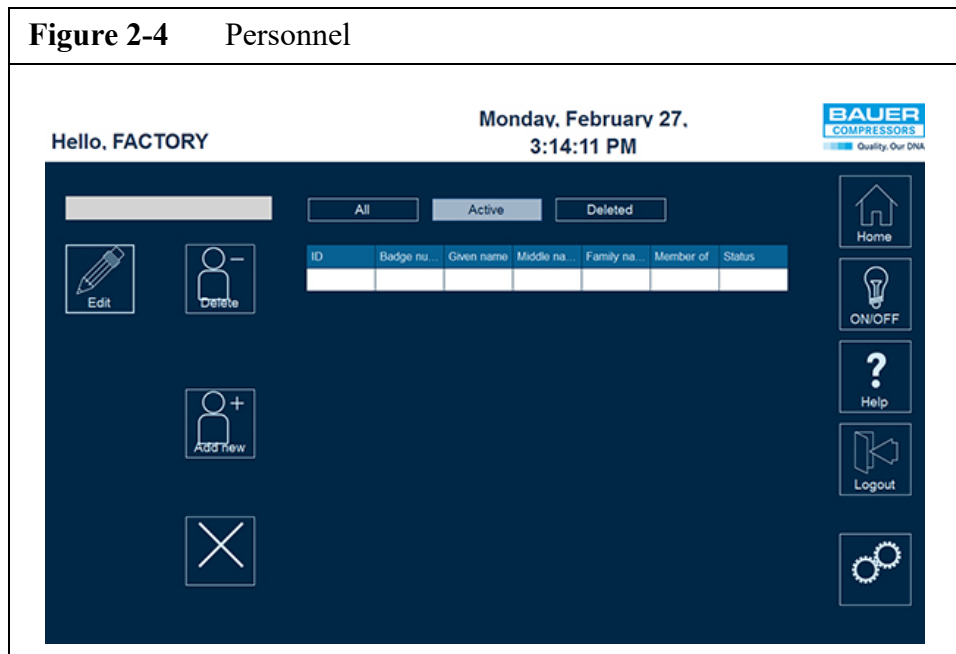

When the ADD NEW button is pressed (See Figure 2-5), a screen appears for input of new personnel information. Required information are the Badge number, Given name and the Family name. Under Members of is a drop down box, USERS or ADMINISTRATORS and be chosen. Users only have the ability to operate the unit. Administrators can add or delete personnel and cylinders as well as change settings on the unit. If Administrator is chosen a password or pin of 4 - 20 digits must be chosen. Status also has a drop down box where Active or Deleted can be chosen. Once the new personnel's information is entered press the check mark to accept. The left facing arrow takes the user to the previous page without entering the information.

The EDIT button allows the administrator to make changes to an already existing personnel file and the DELETE button allows the administrator to change a file from active to deleted.

**Figure 2-5 Add New**

2.2.2.2 Cylinders

**Figure 2-6 Cylinders**

ID	SCBA Serial#	RFID Serial#	Initial Date	Next Hydr.	Expire Date
1	Serial Test 0001	D6857261500104E0	1/1/1990	1/1/1990	1/1/1990
2	S0002		1/1/1990	1/1/1990	1/1/1990
3	S0003		1/1/1990	1/1/1990	1/1/1990

The cylinders button takes the administrator to a page similar to the personnel page however this page is for the cylinders database. Here the administrator can ADD, DELETE, or EDIT the files for each cylinder. The buttons across the top of the listed cylinders sort the entries as ALL (active and expired), ACTIVE or EXPIRED.

The EDIT button allows the administrator to edit an already existing cylinder record. The DELETE button deletes an already existing record.

The ADD NEW button opens the add new cylinder screen(See Figure 2-7).


**Figure 2-7** Add New Cylinder

SCBA Serial #	Initial Date	Next Hydro Date	Status
<input type="text"/>	3/17/2017	3/17/2017	ACTIVE
RFID Serial #	Expire Date		
<input type="text"/>	3/17/2017		
Max Pressure Setpoint			
<input type="text"/> PSI			

The SCBA Serial # and MAX Pressure Setpoint must be entered. The Initial Date, Next Hydro Date, and Expire Date will self fill with the present date. To change the date press the icon to the right of the box and enter the correct date. STATUS can be left as Active or changed to Expired by use of the drop down box. If the cylinder has a RFID serial number that should be entered in the appropriate box.


Once all information for the cylinder is entered press the check mark button for OK. The left facing arrow will take the administrator back to the cylinders list.

### 2.2.2.3 Settings

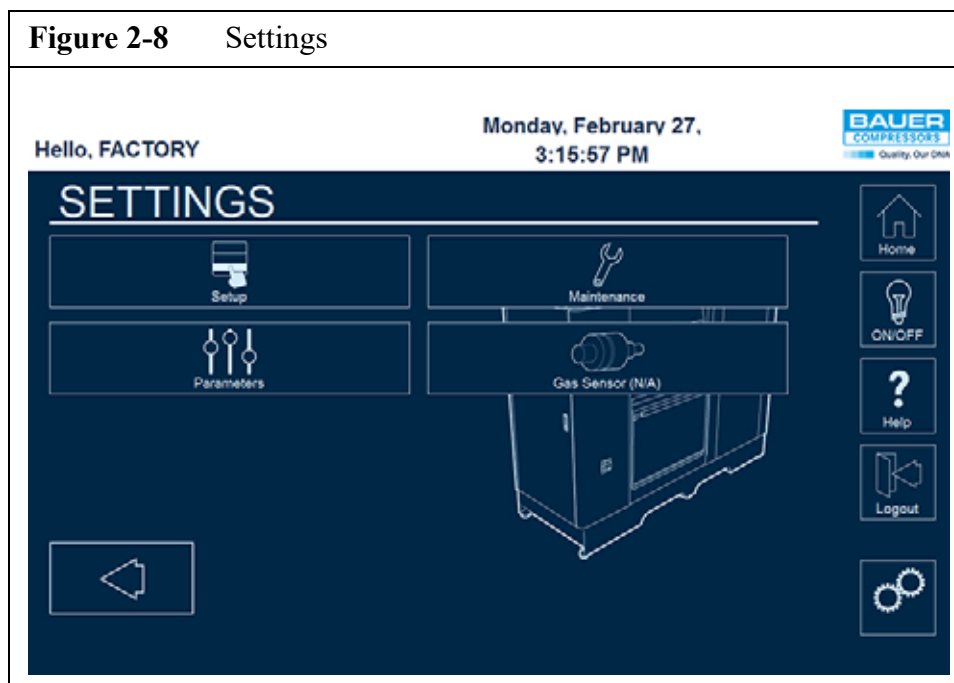


The settings button takes the user to the settings page (See Figure 2-8). The choices on this page are SETUP, PARAMETERS, MAINTENANCE, and GAS SENSORS.

### 2.2.2.3.1 Setup

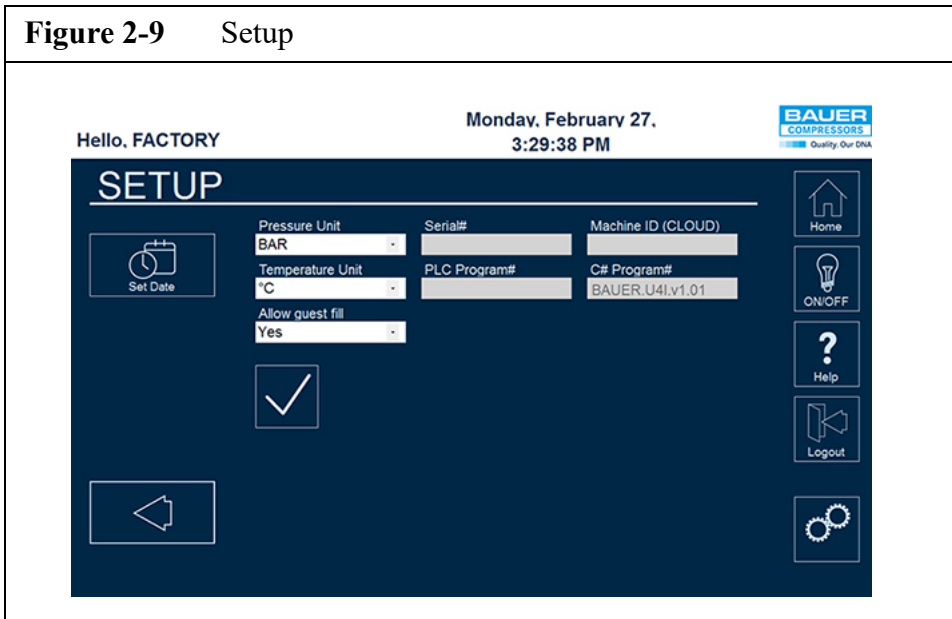

the SETUP button allows the administrator to adjust the display of pressure as PSI or BAR and the Temperature as Fahrenheit or Celsius. On the Setup page the administrator can see the display of unit's serial number, PLC program version and the monitor's program version. Also on the setup page the administrator can set the current date, and allow guest to use the compressor. If this feature is enabled, instead of having to submit a badge number, a user can simply press the Guest button on the initial screen. The guest will only be allowed to use the unit, not change any settings or add personnel or cylinders.

### 2.2.2.3.2 Parameters

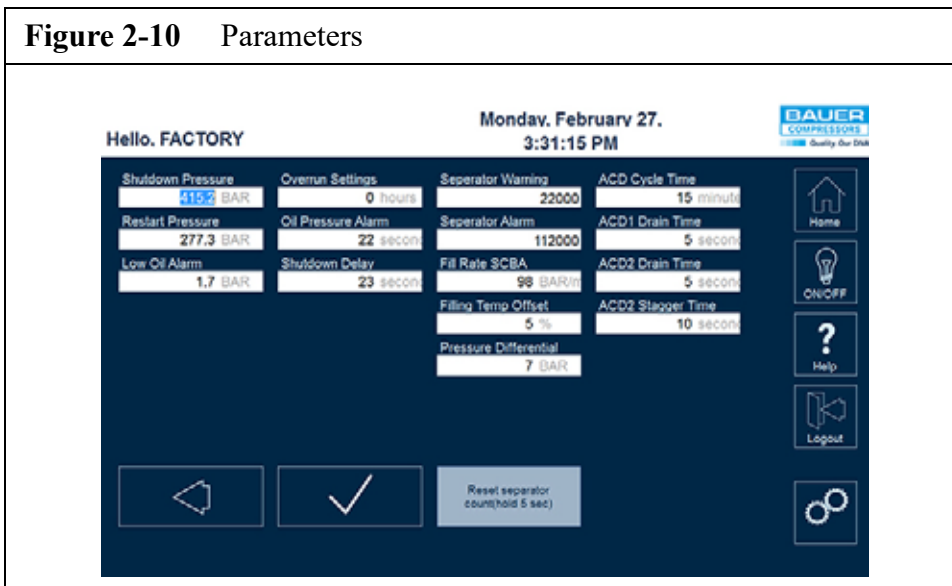

The Parameters screen displays multiple fields that dictate how the unit works, changing these settings will change the operation of the unit. For this reason only qualified personnel should be given administrative privileges.

### 2.2.2.3.3 Maintenance


The maintenance screen lists the maintenance schedule by working hours, and calendar days. Also displayed here are the Total run time of the unit and when the last maintenance was performed.

### 2.2.2.3.4 Gas Sensor

The final button on the settings page is the gas sensor setup. This screen will walk the administrator through the steps to zero and calibrate the gas sensor if your unit is equipped with one. For more information on the gas sensor see Chapter 8.

### 2.2.2.4 Reports

Back to the Administrative main menu screen another option is reports.

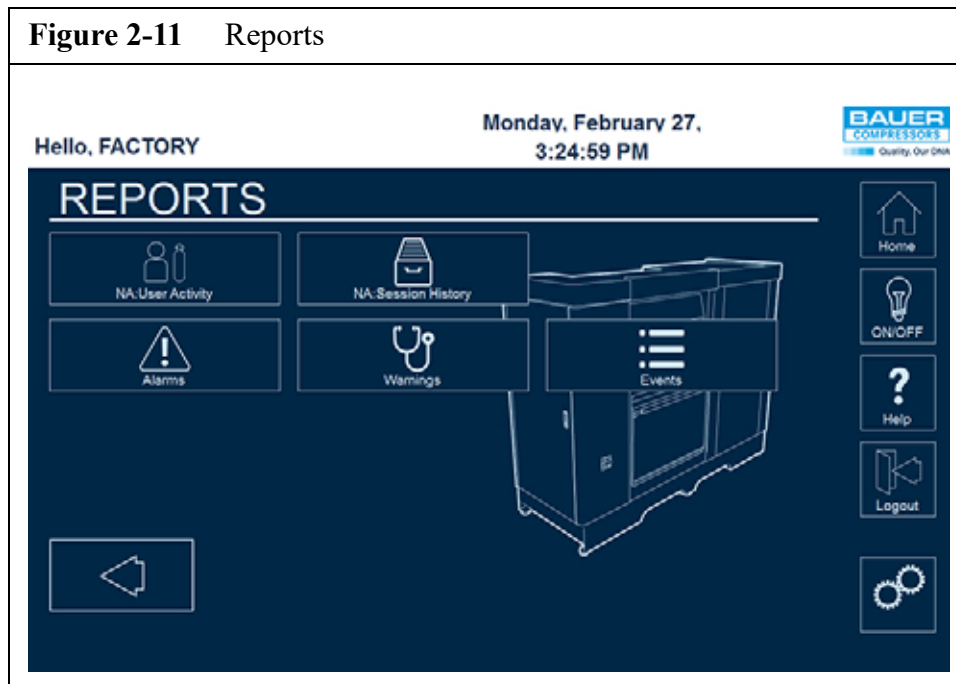


The reports screen allows the administrator to view reports on User Activity, Session History, Alarms, Warnings or All Events

### 2.2.2.5 Diagnose

Pressing the Diagnose button takes the administrator to a diagnostic screen used to troubleshoot the unit. This page is used to force input signals to the PLC or output signals from the PLC. Also from the diagnostic screen, the analog button can be pressed to view the actual voltage reading from the sensors.


**Figure 2-12** Diagnostic

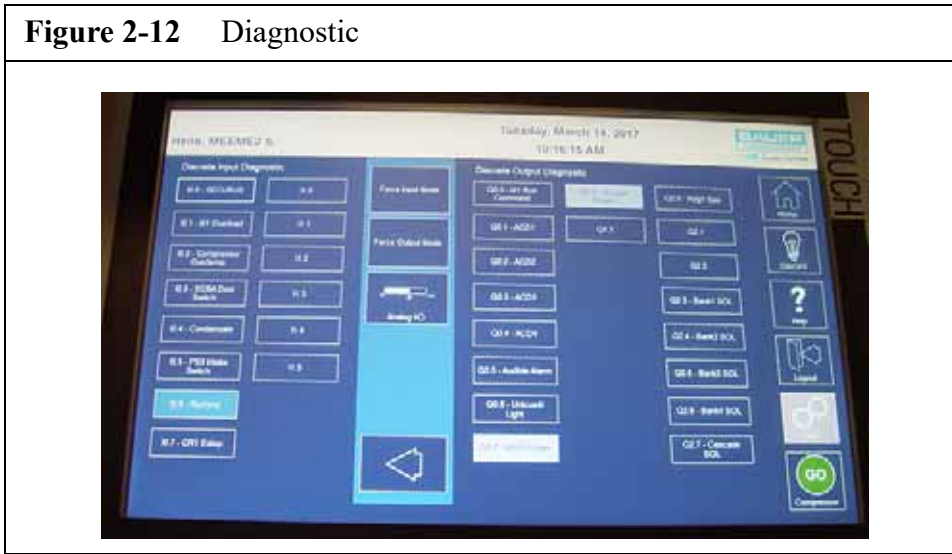

### 2.2.3 Home Screen

The HOME button at the top of the screen on the right hand side takes the administrator to the home screen that a user or guest would initially see after logging in.


**Figure 2-13** Home Screen, Operator

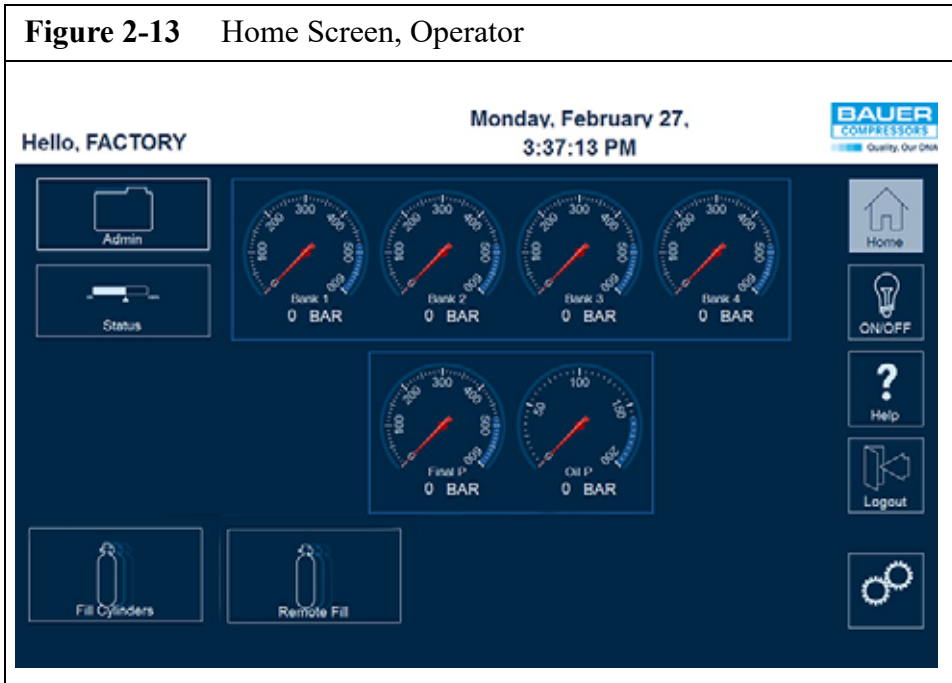

This screen displays the pressure of each storage bank, the compressor’s oil pressure and final pressure. On the upper left side is a button labeled ADMIN which will return to the administrators main menu page.

### 2.2.3.1 Compressor Status

Under the ADMIN button is the COMPRESSOR STATUS button. This button takes the user to the status page.

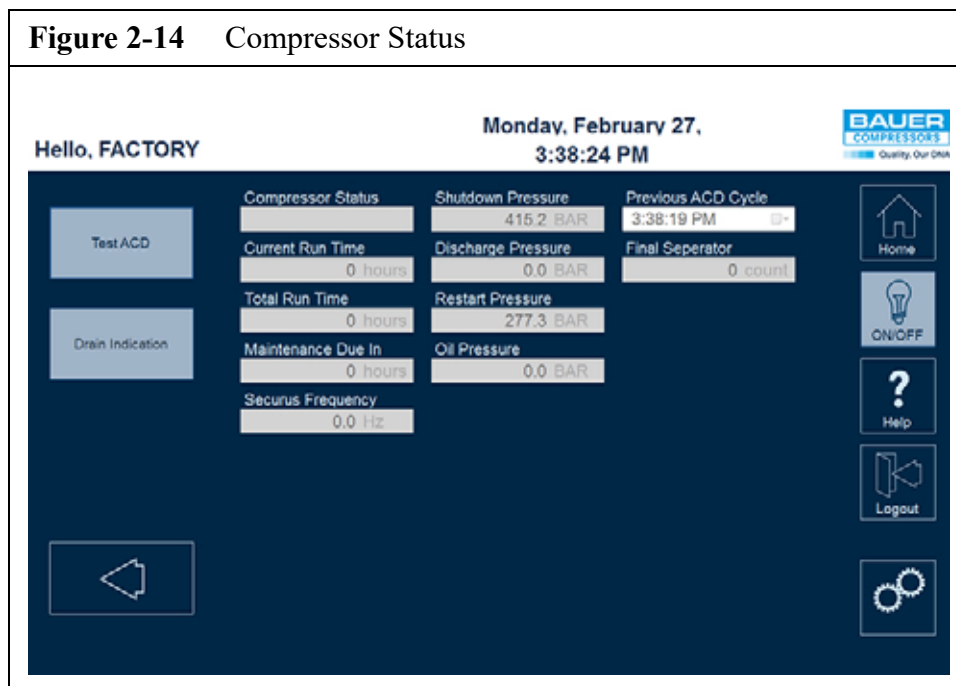


The compressor status page displays the following

- ▶ Compressor Status
- ▶ Total Run Time
- ▶ Securus Frequency
- ▶ Discharge Pressure
- ▶ Oil Pressure
- ▶ Final Separator Count
- ▶ Current Run Time
- ▶ Maintenance Due in
- ▶ Shutdown Pressure
- ▶ Restart Pressure
- ▶ Previous ACD Cycle

### 2.2.3.2 Fill Cylinders

On the HOME screen in the lower left is an icon to fill cylinders. If the operator wants to fill cylinders using the Containment Fill Station (CFS), press this button.

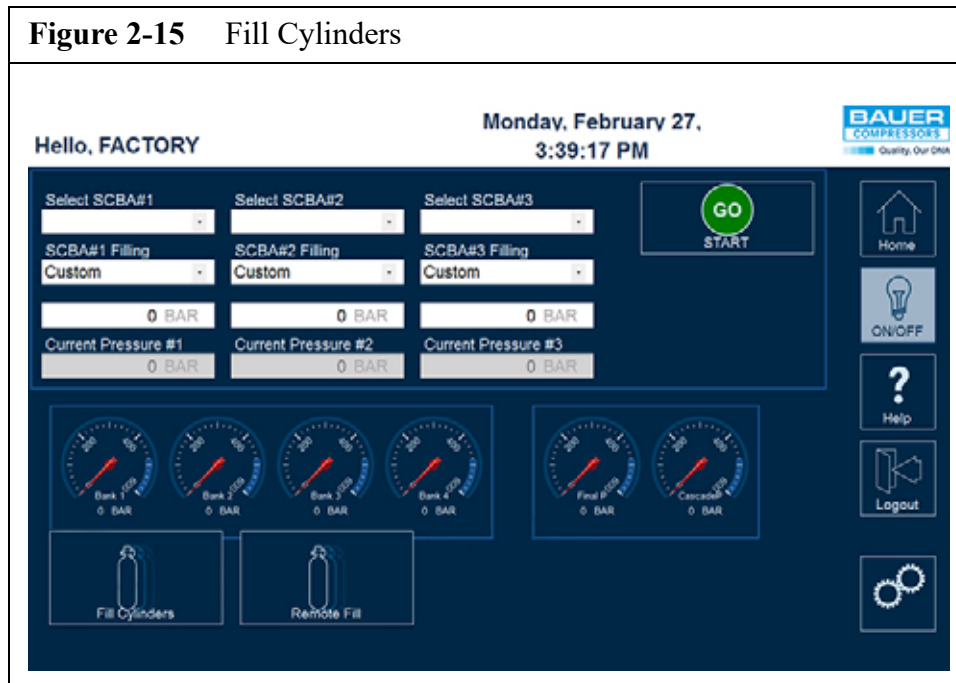

See Paragraph 2.3 for information on mechanical aspects of filling cylinders.

On the fill cylinders screen, for each cylinder to be filled, use the drop down box for each fill position to select the cylinder's SCBA number<sup>1</sup>. In the block SCBA Filling Pressure select the pressure the cylinder is to be filled, or select custom and enter the desired pressure,



## WARNING

This system is capable of operating with pressures in excess of the normal bottle fill pressure. It is important not to overfill bottles as explosive forces may be released if the bottle fails

If filling only from the storage, connect the cylinders as described below and press the green Start button in the upper right corner. The pressure reading in the storage banks will drop as the pressure reading of the cylinders will rise. Once all cylinders are filled press the Stop button.

If filling will require the compressor or you wish to fill the storage banks as you fill the SCBA cylinders, press the green compressor start button in the lower right first, then the green filling start button in the upper right.

### 2.2.3.3 Remote Fill

To use the remote fill option press the remote fill icon. Select the desired pressure or Custom and enter the desired pressure. Press the green start button in the upper right to fill. If the compressor will be needed press the green compressor start button in the lower right of the screen.

1. If this unit is equipped with RFID option and the cylinder has a RFID tag, this field will automatically populate.

**2.3 Fill Station Operation.****WARNING**

Every bottle is stamped with a maximum pressure and the last inspection date. Do not fill a bottle with an outdated inspection stamp.

**WARNING**

Visually inspect each bottle and valve for signs of damage before filling. Do not fill any bottles which appear to be damaged. See ASME and UN regulations and manufacturer's recommendations for damage criteria. Be sure the fill pressure and safety valves are properly set.

1. Unlock the fill station door by pushing the fill station door handle down and pulling the door open.
2. Insert the bottle riser, supplied with your system, into the bottom of the bottle holder. Adjust the bottle riser height by lifting the bottle riser and rotating it to one of the two predetermined positions which are noted by the numbers 1 and 2 on the top of the bottle riser. (See Figure 2-16). Different SCBA bottles have different lengths. A proper height adjustment will leave the bottle valve slightly below the top of the bottle holder.

**Figure 2-16** Bottle Riser**CAUTION**

Minimum bend radius for the fill hose is 1½ inches. Less than this will cause damage to or failure of the fill hose. Place the bottle so that the bend radius of the hose is greater than 1½ inches.


3. Place the bottles to be filled into the holder and connect the fill adapters to the bottles valve using a fill hose with the CGA-346 fill adapter for 2,216 psi bottles, a CGA-347 adapter for 4,500 psi bottles or a SCUBA yoke for SCUBA bottles. The CGA-347 fill adapter seals on 4,500 psi rated bottle valves, but vents on lower rated pressure bottles.
4. CGA valves should be hand tightened only.
5. Close the hose bleed valves and open the bottle valves.
6. Close and lock the fill station door by pushing the fill station door closed, allowing the door lock bar to drop into position.

### NOTICE

The Containment Fill Stations will not fill the bottles unless the door is closed and locked.

7. By closing the door, the bottle holders are returned to their upright position.
8. Set the fill pressures to the appropriate amount.
9. Open the fill valves to fill the bottles.
10. The pressure indication on the fill pressure gauge will drop while bottles are filling. Filling is completed when the fill pressure gauge reaches the desired pressure.
11. Close the fill valves.
12. Unlock the fill station door by pushing the door handle down.
13. Open the fill station door. The bottles are now in a tilted position.
14. Close the bottle valves and open the fill hose bleed valves.
15. Remove the fill adapters from the filled bottles and place them in the hose holders.

**Figure 2-17** Bottle Valve Sequences

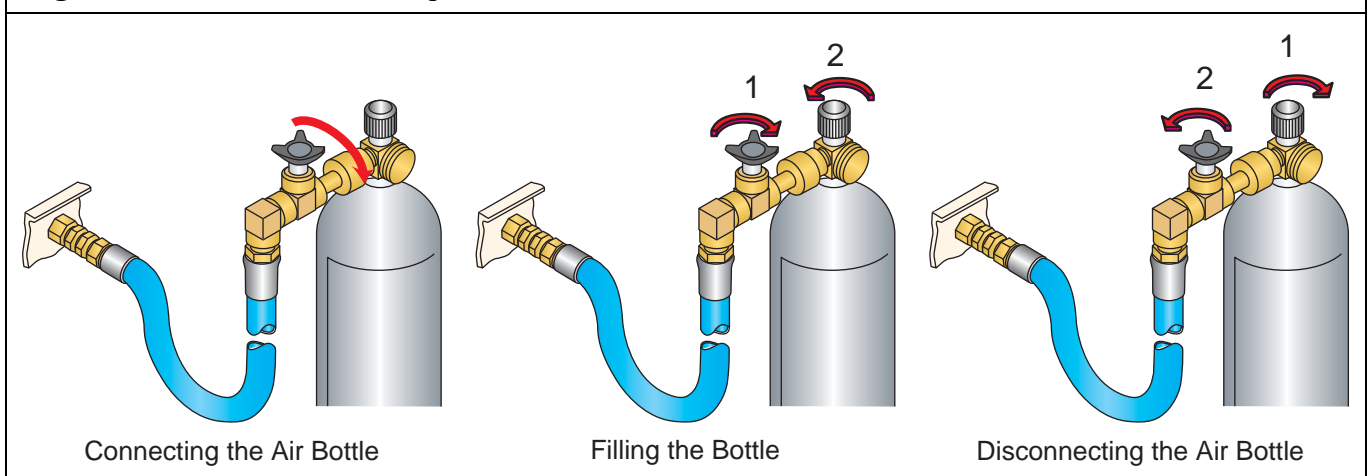

### 2.3.1 Remote Fill Connection

The optional remote fill connection is rated for up to 6,000 psig service. The remote fill hose reel is located on the left side of the unit.

**2.3.1.1 Connecting an Air Bottle**

Connect to the air bottle valve using a fill hose with the CGA-346 fill adapter for 2,216 psi bottles, a CGA-347 adapter for 4,500 psi bottles or a SCUBA yoke for SCUBA bottles. The CGA-347 fill adapter seals on 4,500 psi rated bottle valves, but vents on lower rated pressure bottles. CGA valves should be hand tightened only.

**2.3.1.2 Filling the Air Bottle**

1. Close the bleed valve on the fill hose (1) (See Figure 2-17).
2. Open the bottle valve (2).
3. Adjust the regulator on the fill panel to the desired pressure.
4. Open the filling valve on the fill panel to the filling position. The bottle will fill.

**2.3.1.3 Removing the Air Bottle**


1. After reaching the desired bottle pressure, close the fill valve located on the fill panel.
2. After the fill valve is closed, close the bottle valve.
3. Open the bleed valve (2) to vent the residual pressure in the fill hose.
4. Disconnect the fill adapter from the air bottle valve.

## CHAPTER 3: IK 18.1 II COMPRESSOR BLOCK


### 3.1 Description

The IK18.1 II compressor is used to compress air up to 6,000 psi. This compressor is a four cylinder, five stage air cooled, oil lubricated reciprocating compressor. The 4th stage cylinder is lubricated by means of the forced feed lubrication system, while the other cylinders are splash lubricated. The cylinders are arranged 90° apart, with the 1st and 2nd stage, and the 3rd and 4th stage opposite each other. This compressor block is particularly suitable for continuous operation because of their rugged design and corrosion resistant interstage filter and cooler assemblies.

#### 3.1.1 Component Location

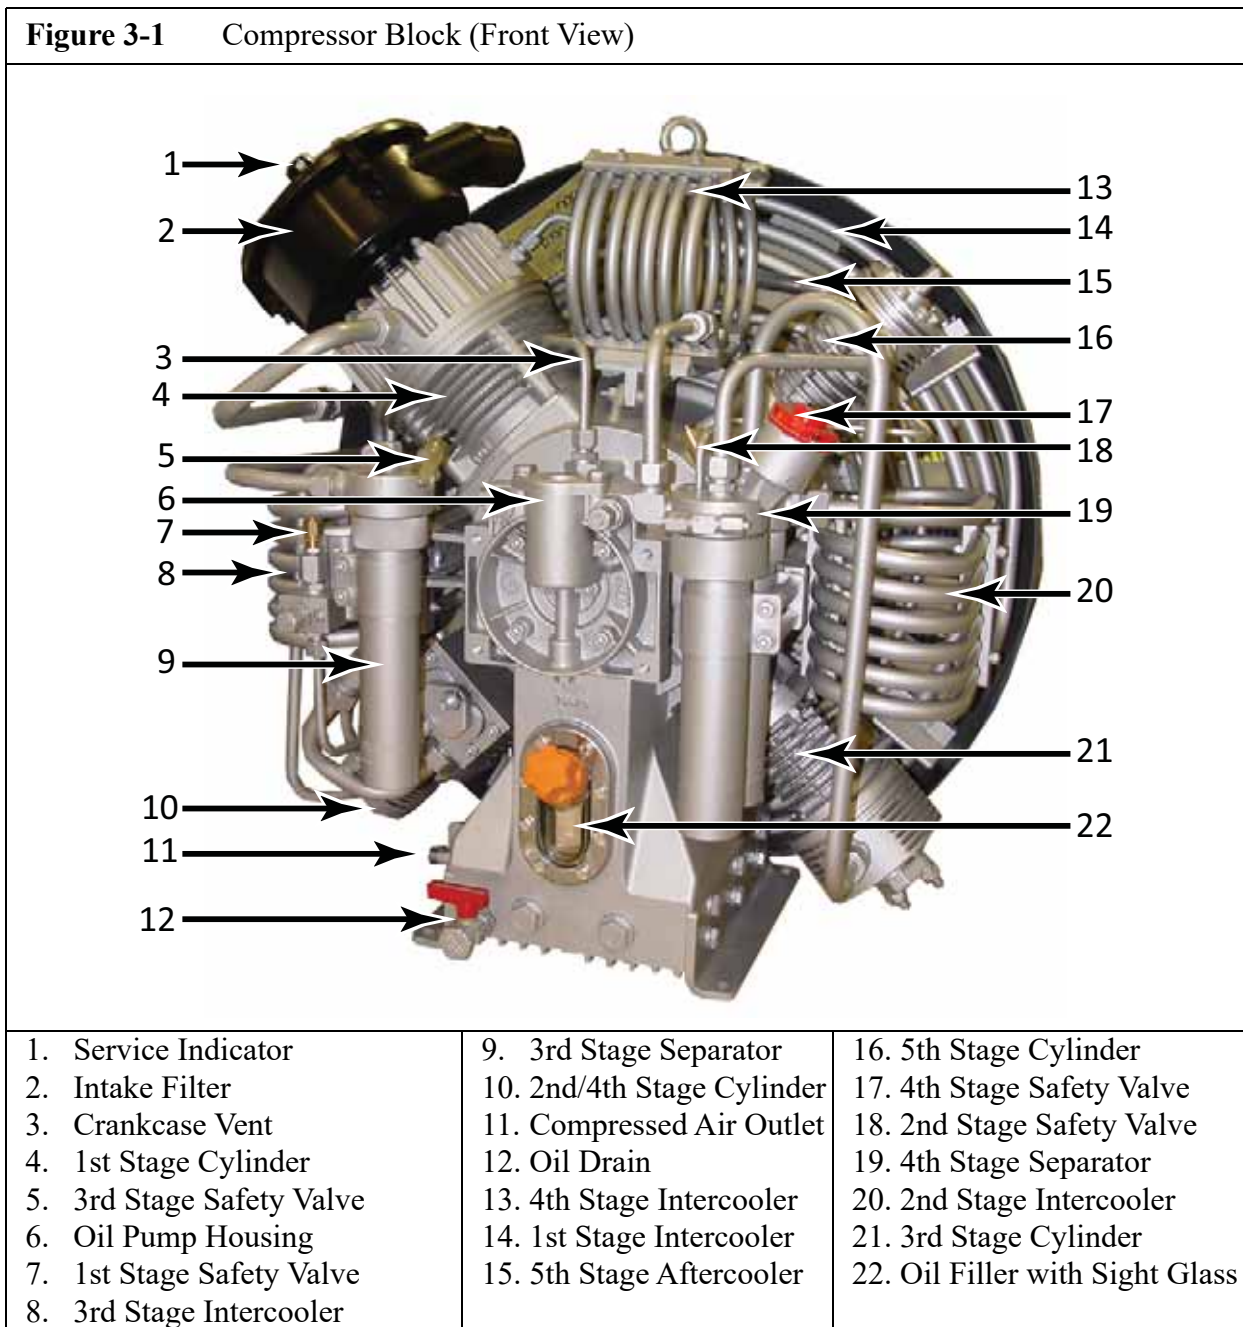

### 3.1.2 Air Flow Diagram

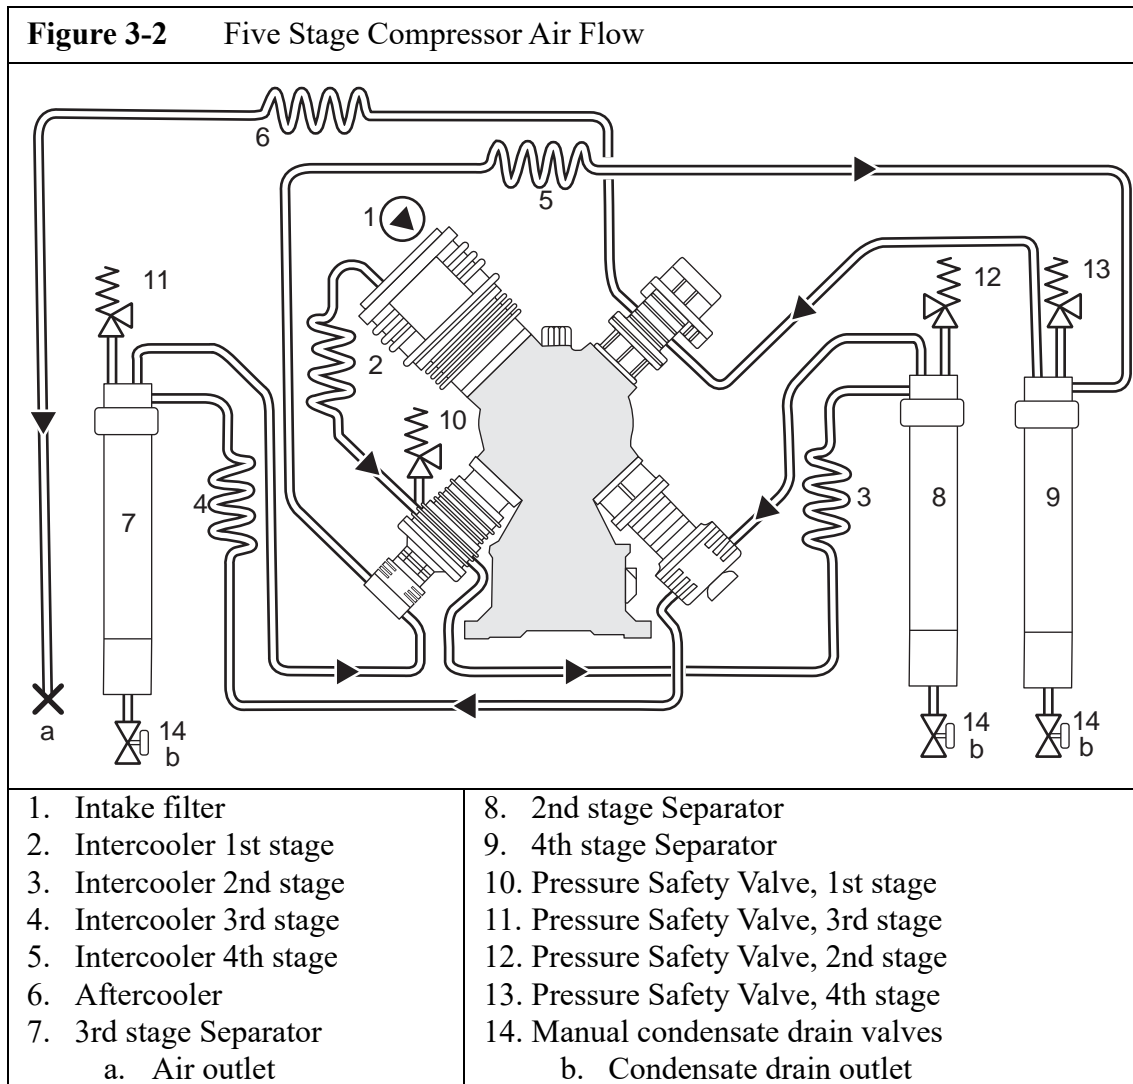

### 3.1.3 Lubrication System

#### 3.1.3.1 Description.


The compressor is provided with forced-feed lubrication. The oil pressure is produced by a low revving gear pump. The oil pressure is between 44 psi and 87 psi (3 to 6 bar).

	<b>CAUTION</b>
This oil pump must be operated in the correct direction of rotation, other wise no oil pressure will be built up and the compressor may be damaged.	

(See Figure 3-3) The oil pump (1) is coupled to and driven by the crankshaft. It pumps oil from the crankcase through an oil filter (3) and the oil pressure regulating valve (4) to the 4th stage cylinder. The oil is then distributed by the guide piston of the 4th stage and lubricates all the moving parts of the com-

pressor block. The oil pressure sensor (2) allows mounting for an optional oil pressure gauge or electronic pressure monitoring.

**Figure 3-3** Lubrication Oil System

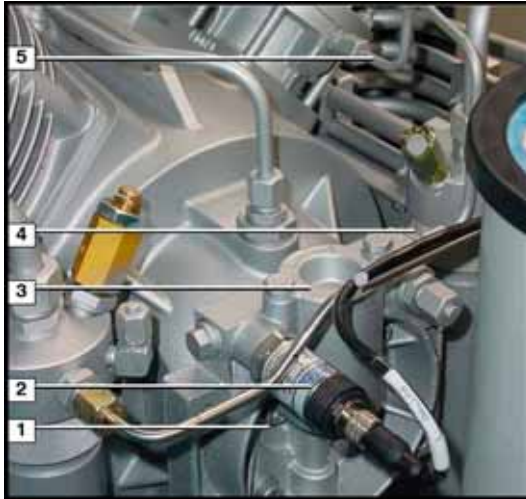

- |                        |                                  |
|------------------------|----------------------------------|
| 1. Oil Pump Housing    | 4. Oil Pressure Regulating Valve |
| 2. Oil Pressure Sensor | 5. Injection Line to Final Stage |
| 3. Oil Filter Housing  |                                  |

**Figure 3-4** Oil Sight Gauge



**3.1.3.2 Oil Level Check**

Check the oil level at the oil filler sight gauge on the compressor block every day before putting the compressor into operation. Oil level must never be below the minimum mark molded into the sight gauge as this will cause severe damage due to lack of lubrication. Overfilling is prevented by the design of the filler neck; i.e. oil should be filled right to the edge of the opening.

**3.1.3.3 Oil Change Interval**


The synthetic oil should be changed every 2,000 operating hours or biennially, whichever is reached first.

**3.1.3.4 Oil Capacity**


The oil capacity is approximately 6.5 quarts (6.0 liters). The amount of oil between the minimum and maximum marks is approximately 1.7 quarts (1.6 liters).

**3.1.3.5 Oil Change**

	<b>CAUTION</b>
Replace the oil filter at every oil change, otherwise when the filter becomes clogged a bypass valve opens and the oil circulates without being filtered.	

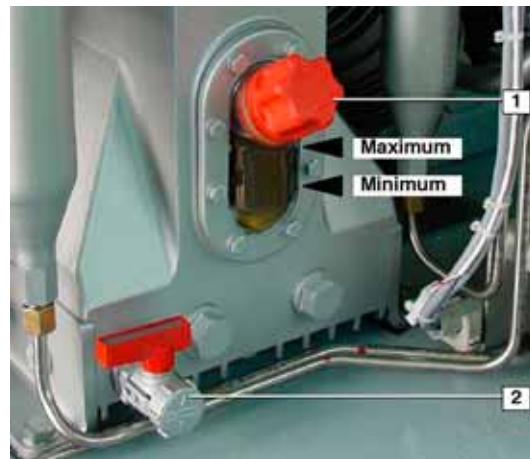**Figure 3-5** Oil Sight Gauge & Drain

1. Oil Fill Cap
2. Oil Drain Valve

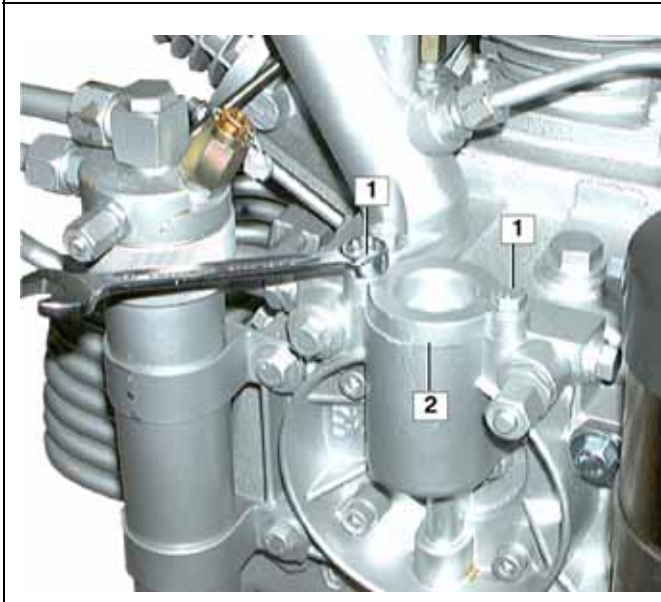**Figure 3-6** Removing the Oil Filter Cover**Figure 3-7** Replacing the Oil Filter

1. Run the compressor until it is warm.
2. Remove cap from Oil Filler Sight Gauge.
3. (See Figure 3-5) Drain the Oil into a suitable container by opening the Oil Drain Valve (2)
4. After oil has stopped draining, close Oil Drain Valve.
5. (See Figure 3-6) Remove two bolts (1) with a 13 mm wrench. Remove cover (2).
6. (See Figure 3-7) Remove the Oil Filter (1) from the rubber gasket at the cover.
7. Mount a new filter element and replace and fasten cover.

8. Fill new oil through filler neck to the Maximum mark on the Oil Fill Sight Gauge.
9. Pour oil in slowly, wait until the level settles then replace cap in the Oil Fill Sight Gauge.
10. Return the unit to operation.


**3.1.3.6 Venting the Oil Pump**

	<b>CAUTION</b>
To avoid damage after maintenance the following measures should be strictly adhered to.	

(See Figure 3-7). If after the start of the compressor no oil pressure builds up, venting the oil pump may be necessary, especially after maintenance and repair work. It may also be necessary if the unit has been operated in the wrong direction of rotation.

1. With the unit running, open the condensate drain valves.
2. Open Oil Pump Vent Plug (2) and wait until oil comes out bubble free.
3. Replace Oil Vent Plug.

**3.1.4 Intake Filter**

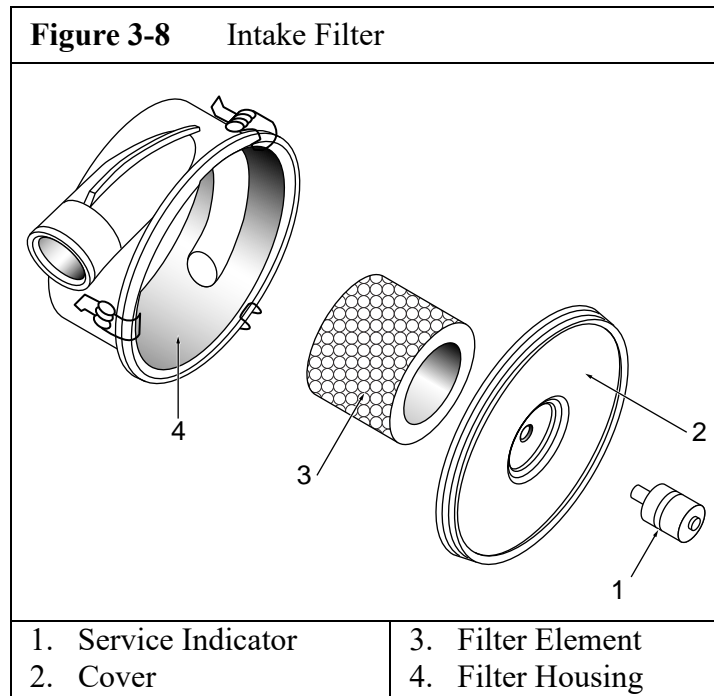

**3.1.4.1 Description**

(See Figure 3-8). A dry micronic filter is used to filter intake air in breathing air units. Nitrogen compressors use a separate inlet regulation system.

**3.1.4.2 Maintenance**

The vacuum in the intake filter is monitored by the Service Indicator (1). When the preset vacuum pressure is reached the indicator changes to red and the Filter Element (3) should be replaced as follows.

1. Open clips on Filter Housing (4) and remove Cover (2).
2. Remove the Filter Element (3).
3. Clean the inside of the Filter Housing with a damp cloth. Take care to prevent any dust from entering the intake manifold.
4. Replace the Filter Element (3).
5. Mount the Cover (1) and fasten with the clips.
6. Reset the Service Indicator (1) by pressing the button.

**WARNING**

The rapid de-pressurizing and re-pressurizing of an interstage separator during condensate draining subjects it to metallurgical stresses. To prevent catastrophic failure with the possibility of damage, injury or death the interstage separator must be replaced after 85,000 load cycles. A load cycle equals one de-pressurization- repressurization. The Bauer recommended frequency of condensate draining is every fifteen minutes and is a balance between maximizing the life of the separator chamber and maintaining the quality of the delivered air.



### 3.1.5 Interstage Separators

#### 3.1.5.1 Description

Three interstage separators are mounted on the compressor, one after the 2nd stage and another after 3rd stage and the last after the 4th stage. These separators are designed to remove oil and water which accumulates due to the cooling of the air after the compression process. Separation is achieved by means of centrifugal action. In the 2nd stage separator the design of the filter head provides this action. In the 3rd and 4th stage separators the centrifugal action is provided by a vortex plate additionally a sintered metal filter is provided to remove dirt contamination.

3.1.5.2 Maintenance

The interstage Separators require no maintenance.

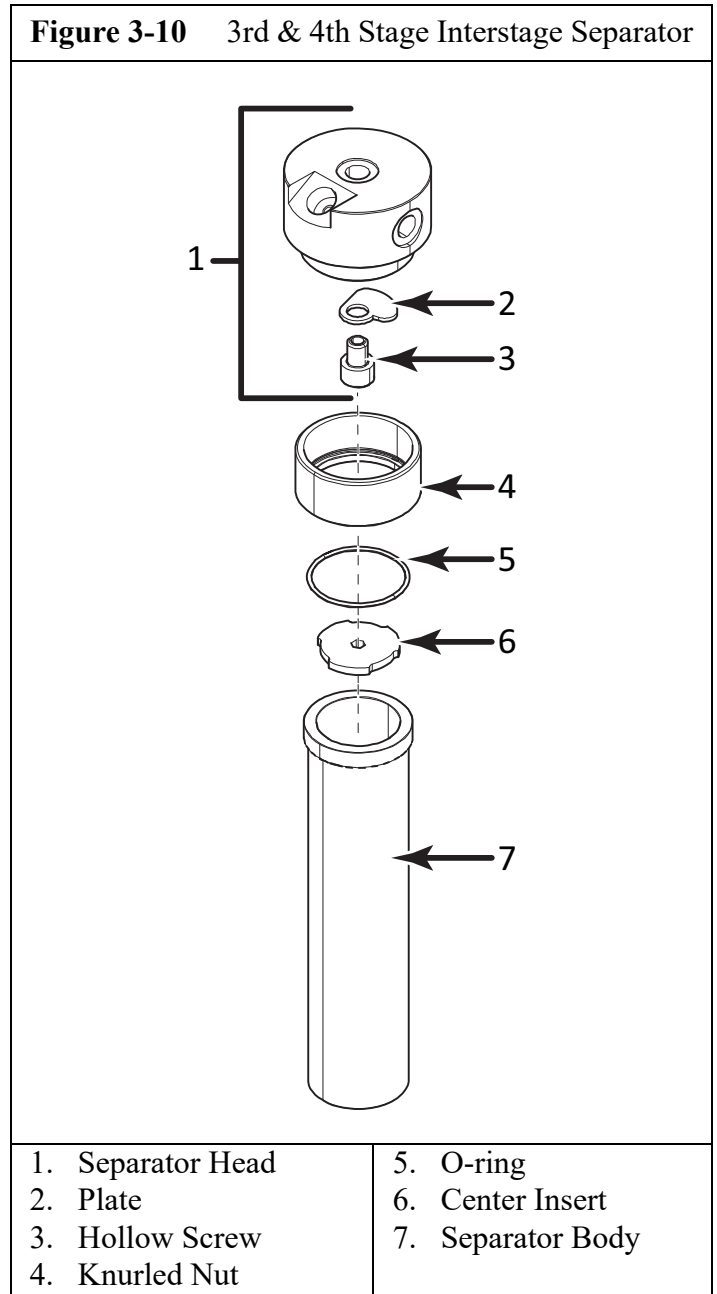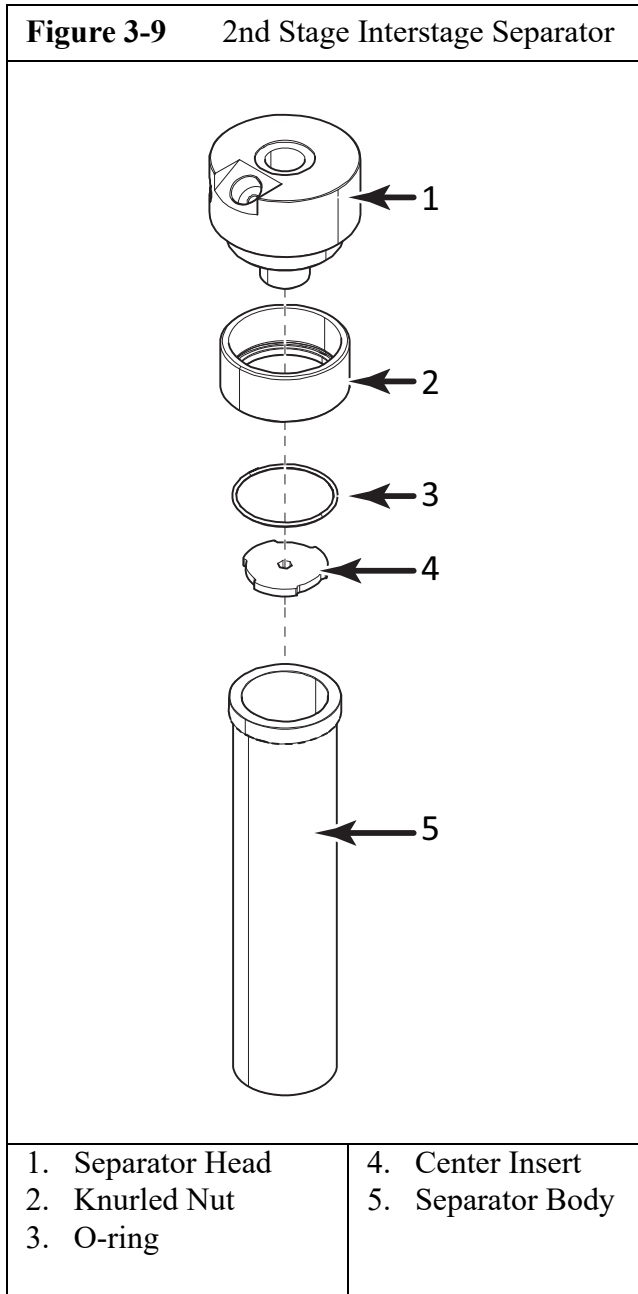



### 3.1.6 Compressor Valves and Valve Heads

#### 3.1.6.1 Functional Description

The valve heads of the individual stages form the upper part of the cylinders. The inlet and pressure valves are fitted inside the valve heads.

When the piston moves downwards, the resultant vacuum in the piston cylinder opens the inlet valve. When the piston moves upwards, the inlet valve is closed and the pressure valve opened by the pressure created in the compression process. See Figure 3-12.

The Intake and Pressure Valve of the 1st Stage are combined in a Plate Valve under the Valve Head. See Figure 3-11.

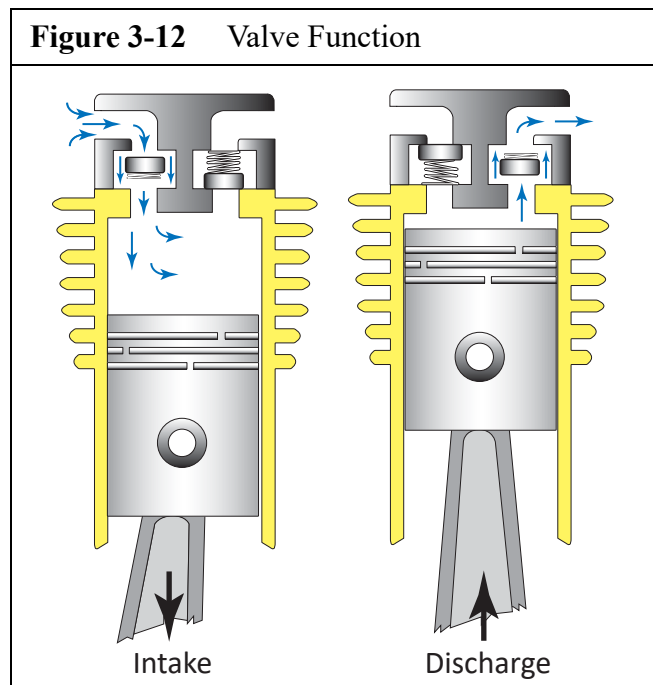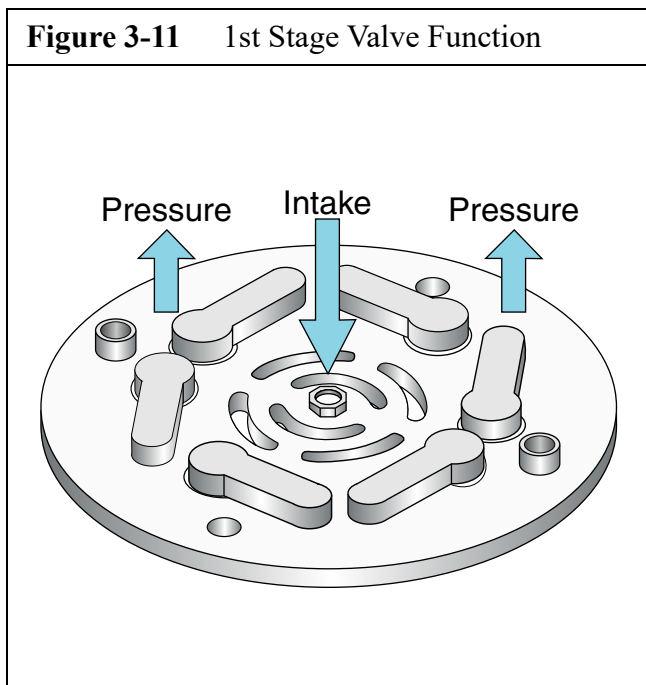

#### 3.1.6.2 Initial Operational Check of the Valves

After roughly half an hour of operation, the valves should be checked. The outlet piping should be hot if the valves are operating properly. Note that the inlet line to the valve heads should be warm to the touch.

	<b>WARNING</b>
Do not touch the outlet piping with bare hands, use a thermometer.	

#### 3.1.6.3 General Instructions for Changing the Valves


Please observe the following instructions for valve maintenance:

1. Always replace valves as a complete set.
2. Carefully clean dirty valves. Never use a sharp tool for this purpose. Soak the valves in Varsol and clean with a soft brush.

3. Check the individual components for excessive wear. If the valve seat or valve discs are dented, replace the valves.
4. Check the valve space in the valve heads for dirt, and clean if necessary.
5. Use only satisfactory gaskets and O-rings during reassembly.
6. Observe the correct sequence when reassembling.
7. After finishing all maintenance work on the valves, turn the compressor manually using the fly-wheel and check whether all items have been correctly installed.
8. 30 minutes after restarting the compressor, stop the unit, let it cool down to ambient temperature, and re-tighten valve studs and cap nuts. Otherwise the gasket set may cause a leak.
9. Remove and check the valves every 1000 operating hours.
10. Replace the valves every 2000 operating hours to avoid fatigue failure.
11. Use an assembly tool (Bauer P/N: 011365) for all work on valve heads (See Figure 3-18).

#### 3.1.6.4 Changing the 1st Stage Valves.

See Figure 3-13

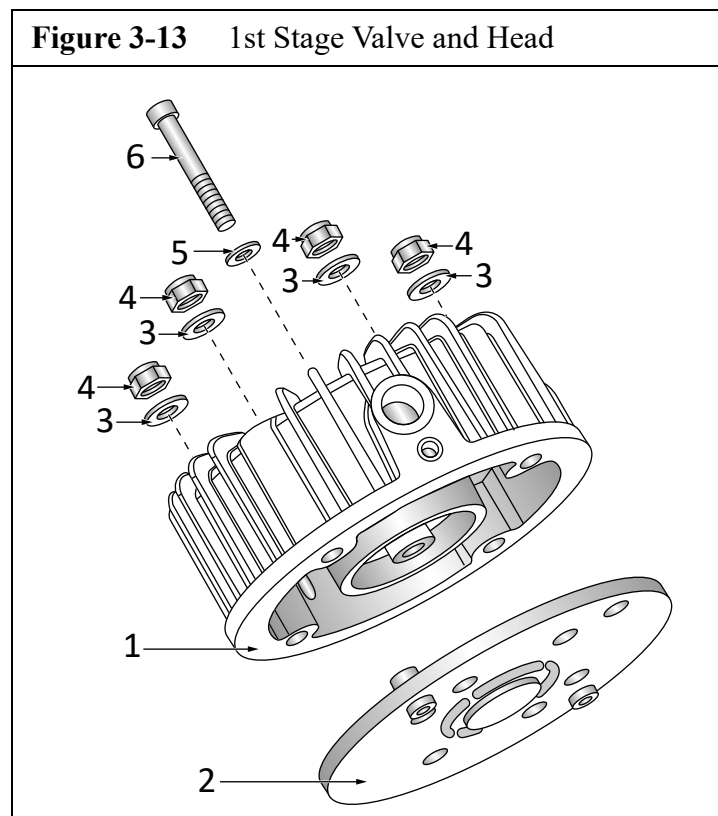


##### 3.1.6.4.1 Removal Procedure.

1. Unscrew and remove cap nuts (4) and washers (3).
2. Remove Valve Head Assembly (1) from studs in cylinder.
3. Remove Valve (2) and unscrew and remove center screw (6) and washer (5).

**3.1.6.4.2 Installation Procedure**

1. Fasten new Valve (2) with center screw (6) and washer (5).
2. Place assembled Valve Head (1) on studs in the cylinder.
3. Install washers (3) and cap nuts (4) and tighten to the torque value listed in the Appendix.

**3.1.6.5 Changing the 2nd Stage Valves**

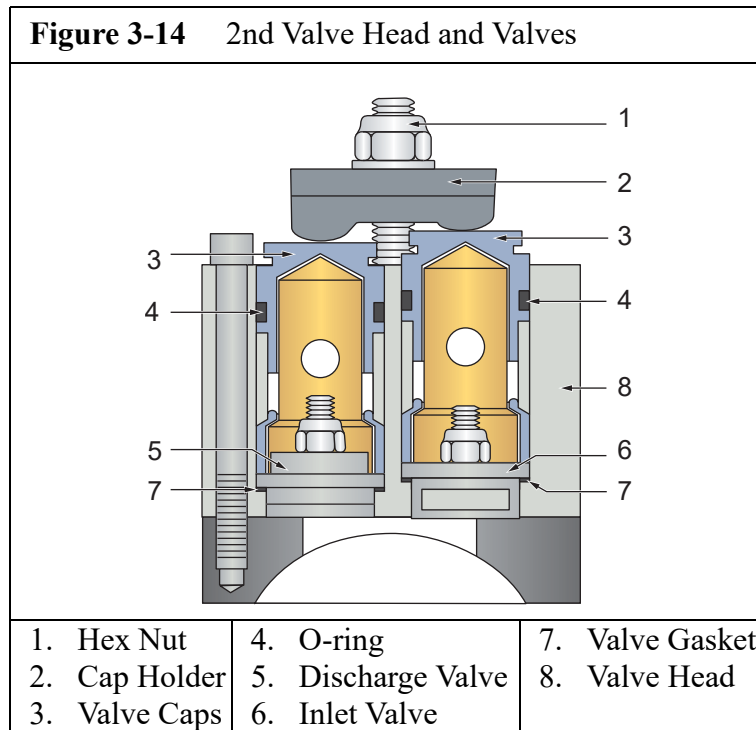

**3.1.6.5.1 Removal Procedure**

See Figure 3-14

1. Unscrew and remove Hex Nut (1).
2. Remove Cap Holder (2).
3. Insert two screwdrivers into the Extraction Grooves of the Valve Caps (3) and lift out the Valve Caps with O-Rings (5).
4. Check and replace O-Rings if required.
5. Take out Valves (6 & 9).
6. Check the Valve Gaskets (7) and replace if required.

**3.1.6.5.2 Installation Procedure**


1. Fit valves(6 & 9) with gaskets (7) and replace.
2. Fit valve caps (3) with O-Rings (5) and replace.
3. Replace cap holder (2) in the proper position.

	<b>CAUTION</b>
<p>The valve cap for the inlet valve protrudes 0.98 in (2.5 mm) out of the valve head more than the valve cap for the discharge valve. The cap holder is designed accordingly.</p>	

- Screw on hex nut (1) and tighten with a torque wrench to the torque value listed in the Appendix.

### 3.1.6.6 Changing the 3rd Stage Valves

See Figure 3-14

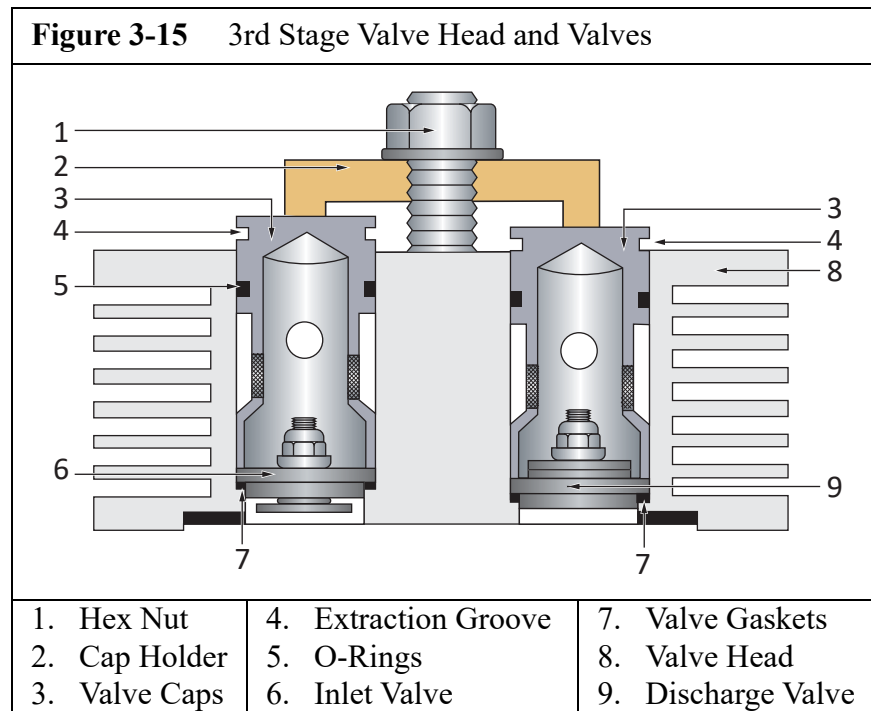

#### 3.1.6.6.1 Removal Procedure

- Unscrew and remove hex nut (1).
- Remove cap holder (2).
- Insert two screwdrivers into the extraction grooves (4) of the valve caps (3) and lift out the valve caps with O-Rings (5).
- Check and replace O-Rings if required.
- Take out valves (6 & 9).
- Check the valve gaskets (7) and replace if required.

#### 3.1.6.6.2 Installation Procedure

- Fit valves(6 & 9) with gaskets (7) and replace.
- Fit valve caps (3) with O-Rings (5) and replace.

3. Replace cap holder (2) in the proper position.



**CAUTION**

The valve cap for the inlet valve protrudes 0.98 in (2.5 mm) out of the valve head more than the valve cap for the discharge valve. The cap holder is designed accordingly.


4. Screw on hex nut (1) and tighten with a torque wrench to the torque value listed in the Appendix.

**3.1.6.7 Changing the 4th/5th Stage Valves.**



**CAUTION**


Always change the intake and discharge valves of the 4th stage at the same time.

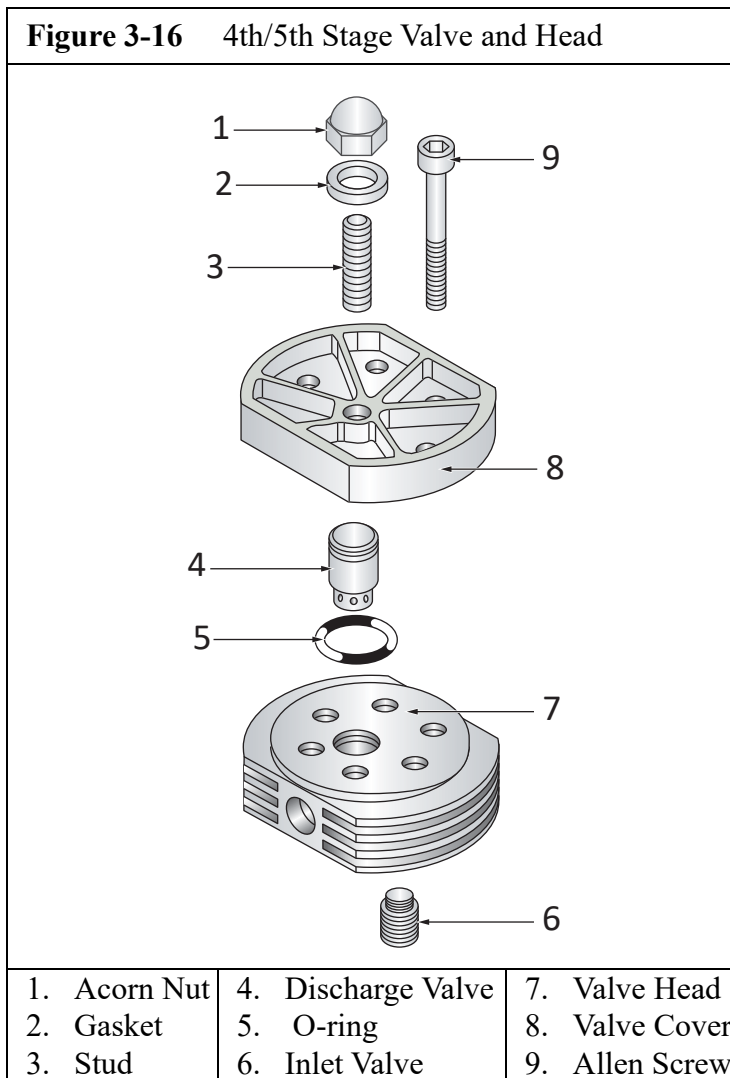

**3.1.6.7.1 Discharge Valve Removal Procedure**

See Figure 3-16


1. Remove piping connected to the Valve Head.
2. Remove Acorn Nut (1) and unscrew Stud (3) three or four turns.
3. Remove the Socket Head Screws (9) and remove the Valve Cover (8).
4. Loosen the Discharge Valve (5) first by turning it with a 13 mm wrench on the flat surfaces.
5. Put two screwdrivers into the groove of the Discharge Valve body. See Figure 3-17.
6. Lift out Discharge Valve together with the O-ring (4).

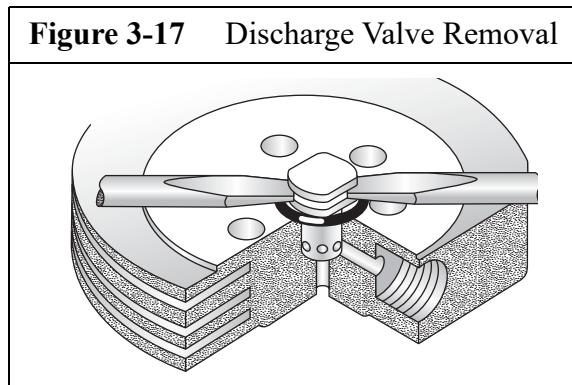**3.1.6.7.2 Discharge Valve Installation Procedure**


1. Check condition of O-ring (4) and replace if necessary
2. Put O-ring (4) into Valve Head (7).
3. Insert Discharge Valve (5) into Valve Head (7).
4. Put on Valve Cover (8).
5. Screw in Socket Head Screws (9) and tighten with a torque wrench.
6. Tighten Stud (3) and replace Gasket (2).
7. Tighten Acorn Nut (1) with a torque wrench to the value listed in the Appendix.

### 3.1.6.7.3 Inlet Valve Removal and Installation

**Figure 3-18** Assembly Tool

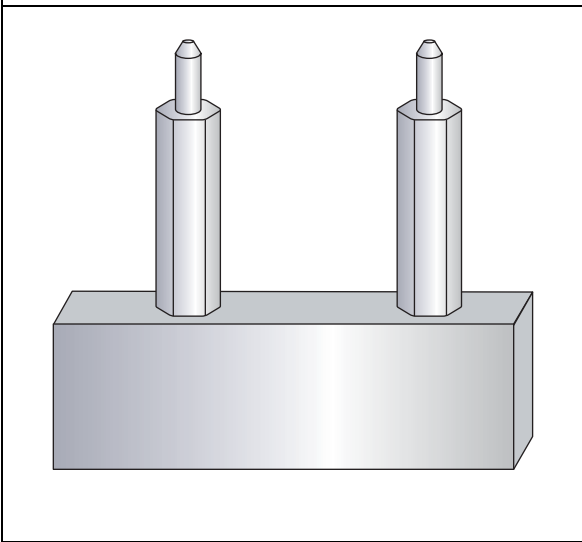

**Figure 3-19** Using Special Tool

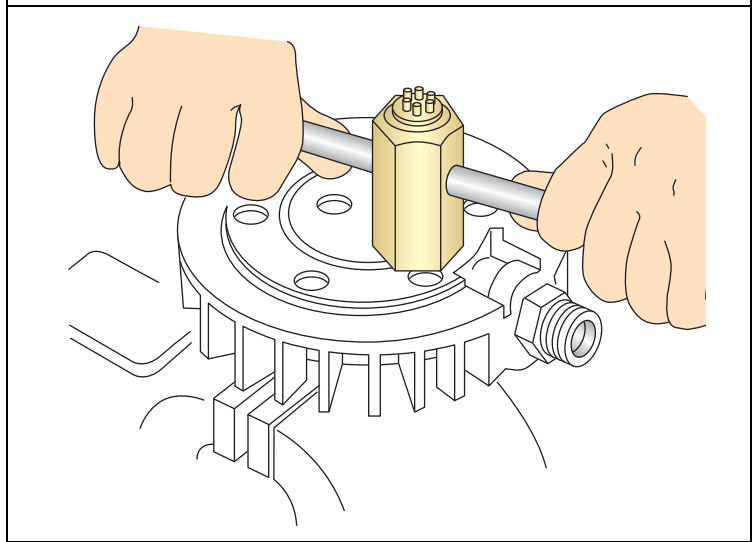

1. If the assembly tool shown in Figure 3-18 is unavailable, place two 8 mm diameter metal pins of any length in the holes of the Valve Head (7) and secure them in a vise with the Inlet Valve (6) facing up.
2. Unscrew the Inlet Valve (6) from the Valve Head (7) using the special valve tool. See Figure 3-19.



#### **CAUTION**

Avoid damaging the special tool or the valve when using the tool, ensure that it is pushed firmly and properly into the sockets in the valve so that it will not tilt when it is turned.

## 3.1.7 Repair and Troubleshooting

### 3.1.7.1 Repair

Repair work can be carried out on the compressor block to a certain extent but a certain level of experience and skill is necessary. It should be noted however that no repair should be carried out on the crankshaft nor on the bearings and safety valves are not repaired but always replaced.

**Table 3-1: Maintenance Interval Tasks**

**Every Year or 500 Hours for Breathing Air Compressors;  
Every Year or 1,000 Hours for Industrial Compressors**

Clean Separators, Empty Condensate Tank

Exchange Intake Filter

Perform Leak Test and Visual Inspection

Electrical Terminals must be Tightened at Each Maintenance

Change Gaskets, Seals and O-Rings Included in Maintenance Kit

Check Pressure Vessels, Record Number of Load Cycles

Check Settings for Pressure Switches and Pressure Relief Valves

Check Pressure Maintaining Valves, Adjust as Needed

Change Final Separator Filters

Change Filter / Dryer Cartridges as Needed

Check V-Belts and Fanwheel/ Fan Blades

Check Piston &amp; Sleeve Assembly of Final Stage

Check Function of Automatic Condensate Drain

Change Oil and Oil Filter

Check Pressure and Suction Valves

Check Tightness of Safety Valves

Check Intermediate Pressures and Oil Pressure

Function Test, Final Inspection, Test Run

**Every 2 Years or 1,000 Hours for Breathing Air Compressors;  
Every 2 Years or 2,000 Hours for Industrial Compressors**

Change all Pressure and Suction Valves

Test or Replace Safety Valves

Change Piston &amp; Sleeve Assembly of Final Stage

**Table 3-1:** Maintenance Interval Tasks (Continued)

**Every 4 Years or 2,000 Hours for Breathing Air Compressors;  
Every 4 Years or 4,000 Hours for Industrial Compressors**

Check Temperature Sensors, Replace if Required

Change Fan Belts (if applicable)

Check cylinders, pistons and piston rings


Replace Drive Belt(s)

## 3.1.7.2 Troubleshooting

Trouble	Cause	Remedy
No oil pressure	<ol style="list-style-type: none"> <li>1. Low oil level</li> <li>2. Air trapped in oil pump.</li> <li>3. Compressor rotates in the wrong direction</li> </ol>	<ol style="list-style-type: none"> <li>1. Check oil level</li> <li>2. Vent Oil Pump</li> <li>3. Reverse two of the three phase leads at the switch box.</li> </ol>
Oil foam in crankcase	<ol style="list-style-type: none"> <li>1. Last stage piston worn</li> <li>2. Last stage pressure valve defective</li> </ol>	<ol style="list-style-type: none"> <li>1. Operate compressor with final stage valve head removed. If oil flows continuously out of cylinder, replace piston and sleeve.</li> <li>2. Replace last stage valves.</li> </ol>
Compressor output insufficient	<ol style="list-style-type: none"> <li>1. Condensate drain valves or fittings leaking.</li> <li>2. Premature opening of final safety valve.</li> <li>3. Piston rings worn</li> <li>4. Excessive piston clearance</li> <li>5. Pipes leaking</li> </ol>	<ol style="list-style-type: none"> <li>1. Tighten and reseal.</li> <li>2. Clean and adjust final safety valve.</li> <li>3. Replace</li> <li>4. Replace</li> <li>5. Tighten</li> </ol>
Safety valves between stages releasing pressure	<ol style="list-style-type: none"> <li>1. Interstage pressure too high</li> <li>2. Valves not closing properly</li> </ol>	<ol style="list-style-type: none"> <li>1. Service and clean valves.</li> <li>2. Service and clean valves.</li> </ol>
Compressor running too hot.	<ol style="list-style-type: none"> <li>1. Insufficient supply of cooling air</li> <li>2. Intake or outlet valve not closing properly</li> <li>3. Wrong direction of rotation.</li> </ol>	<ol style="list-style-type: none"> <li>1. Check location for adequate ventilation</li> <li>2. Check and clean valves, replace as necessary</li> <li>3. Check arrow on compressor and correct accordingly.</li> </ol>
Oil residue in delivered air	<ol style="list-style-type: none"> <li>1. Improper maintenance of filters, purifier cartridge saturated.</li> </ol>	<ol style="list-style-type: none"> <li>1. Service filters, change purifier cartridge.</li> </ol>
Compressor rotates in the wrong direction	Electrical phases not connected properly	Reverse two of the three phase leads at the switch box. Do NOT change the leads at the motor terminal.

3.1.8 Replacement Parts List

Figure 3-20 Crankcase Assembly

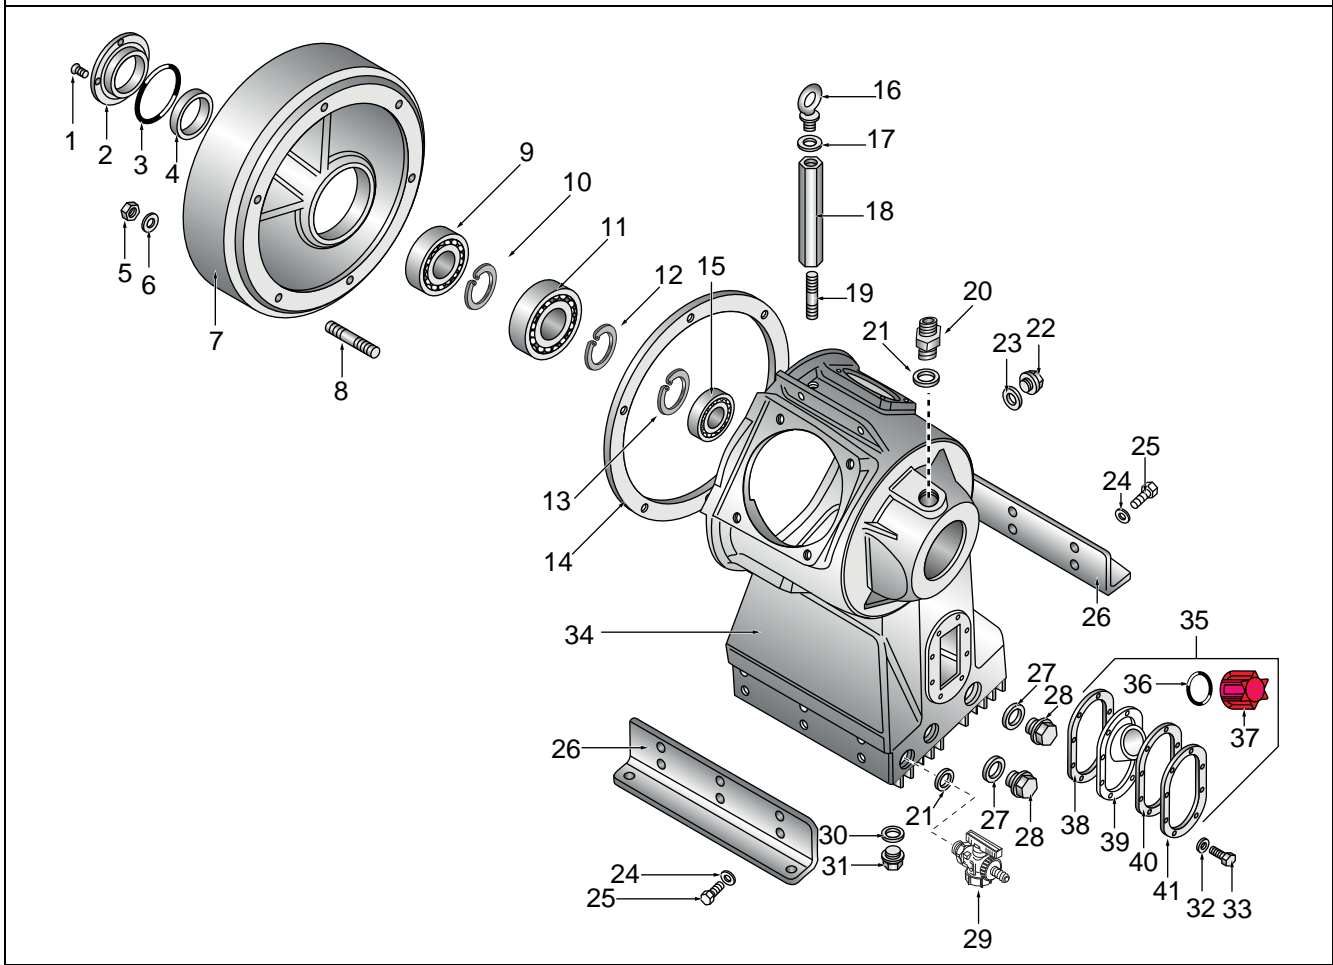


Item	Qty	Part No.	Description	Notes
◆	1	78577	Crankcase Assembly	
1	4	N20649	Screw	
2	1	68586	Cover Plate	
3	1	N15093	O-ring	
4	1	N26281	Shaft Seal	
5	6	N370	Self Locking Hex Nut	
6	6	N58	Washer	
7	1	78897	Bearing Cover	
8	6	N3138	Stud	
9	1	N18303	Roller Bearing	
10	1	N3810	Circlip	
11	1	N18304	Roller Bearing	
12	1	N18432	Circlip	
13	1	N2635	Circlip	

Figure 3-20 (cont.)

## Crankcase Assembly


Item	Qty	Part No.	Description	Notes
14	1	3177	Gasket	
15	1	N2638	Roller Bearing	
16	1	N4467	Eye Bolt	
17	1	1492	Washer	
18	1	79225	Hexagonal Spacer	
19	1	N4150	Stud	
20	1	80197	Reducer	
21	2	N293	Gasket	
22	1	N204	Plug	
23	1	N1314	Gasket	
24	12	N16	Washer	
25	12	N312	Hex Head Screw	
26	2	78571	Bracket	
27	2	N4261	Gasket	
28	2	N2796	Plug	
29	1	N25638	Ball Valve	oil drain
30	1	N1316	Gasket	
31	1	N4570	Plug	
32	8	N102	Washer	
33	8	N19497	Hex Screw	
34	1	78578	Crankcase	
35	1	78810	Oil Sight Gauge Assembly	Items 36 - 41
36	1	N15412	O-ring	
37	1	80225	Plug	
38	1	78808	Gasket	
39	1	78569	Oil Fill	
40	1	80647	Steel Plate	
41	1	78570	Steel Plate	

**Figure 3-21** Complete Crankshaft Assembly

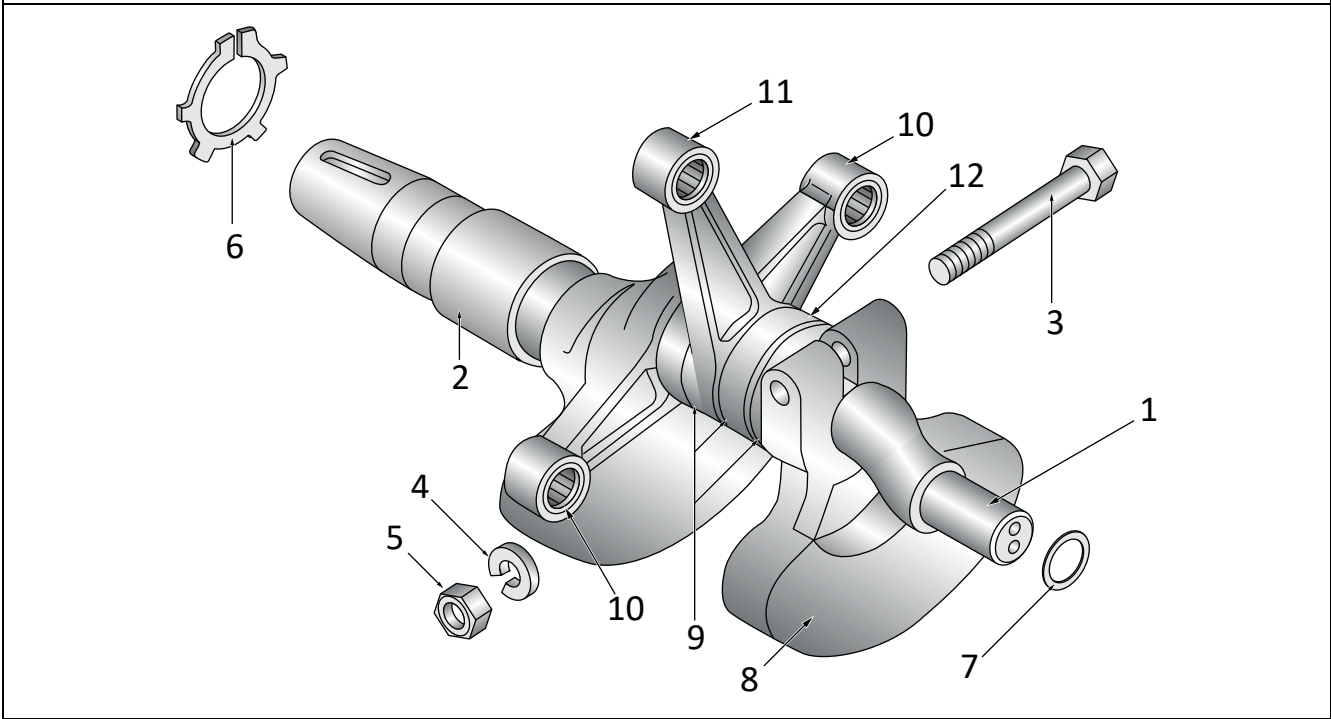


Item	Qty	Part No.	Description	Notes
◆	1	161929	Crankshaft Assembly	
1	1	78936	Crankshaft	
2	1	68587	Bushing	
3	1	N4366	Dowel Screw	
4	1	N108	Spring Washer	
5	1	N2765	Hex Nut	
6	1	N18310	Circlip	
7	1	N423	Circlip	
8	†	...	Counterweight	Available only with 161929
9	3	4220	Spacers	
10	†	...	Piston Rod Assembly	Available only with 161929
11	†	...	Piston Rod Assembly	Available only with 161929
12	†	...	Piston Rod Assembly	Available only with 161929

**Figure 3-22** 1st Stage Piston and Cylinder

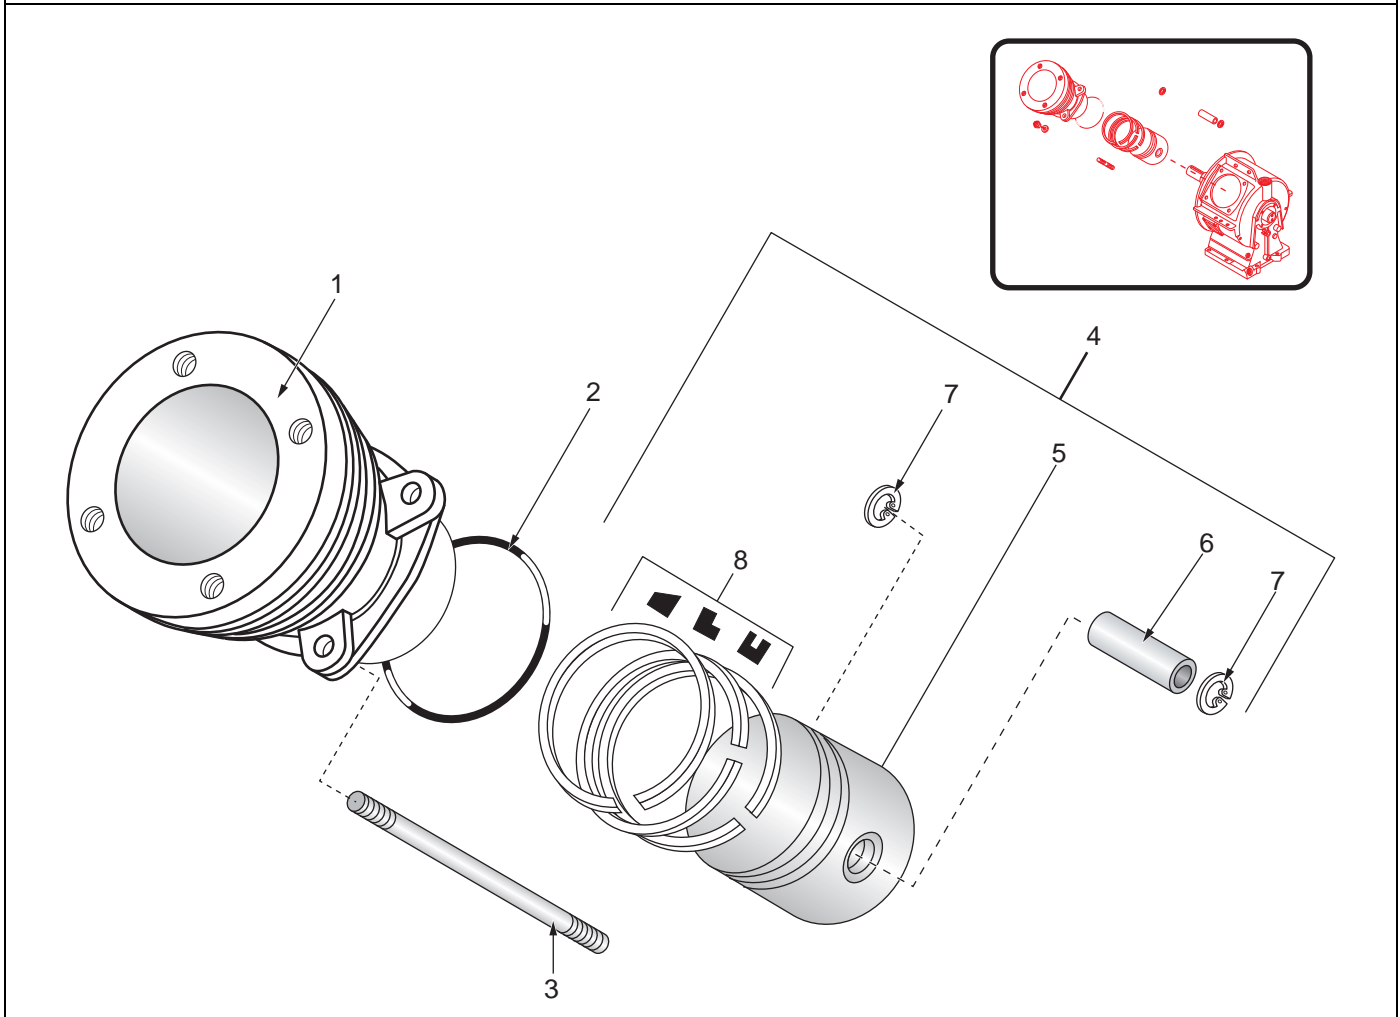

Item	Qty	Part No.	Description	Notes
◆	1	79420	1st Stage Piston and Cylinder Assembly	
1	1	79017	Cylinder	
2	1	N2621	O-ring	
3	4	N26036	Stud	
4	1	79720	Piston Assembly	#5 - 8
5	1	79719	Piston	130 mm
6	1	N2930	Piston Pin	
7	2	N484	Circlip	
8	1	N2963	Piston Ring Set	

**Figure 3-23** 2nd & 4th Stage Piston and Cylinder

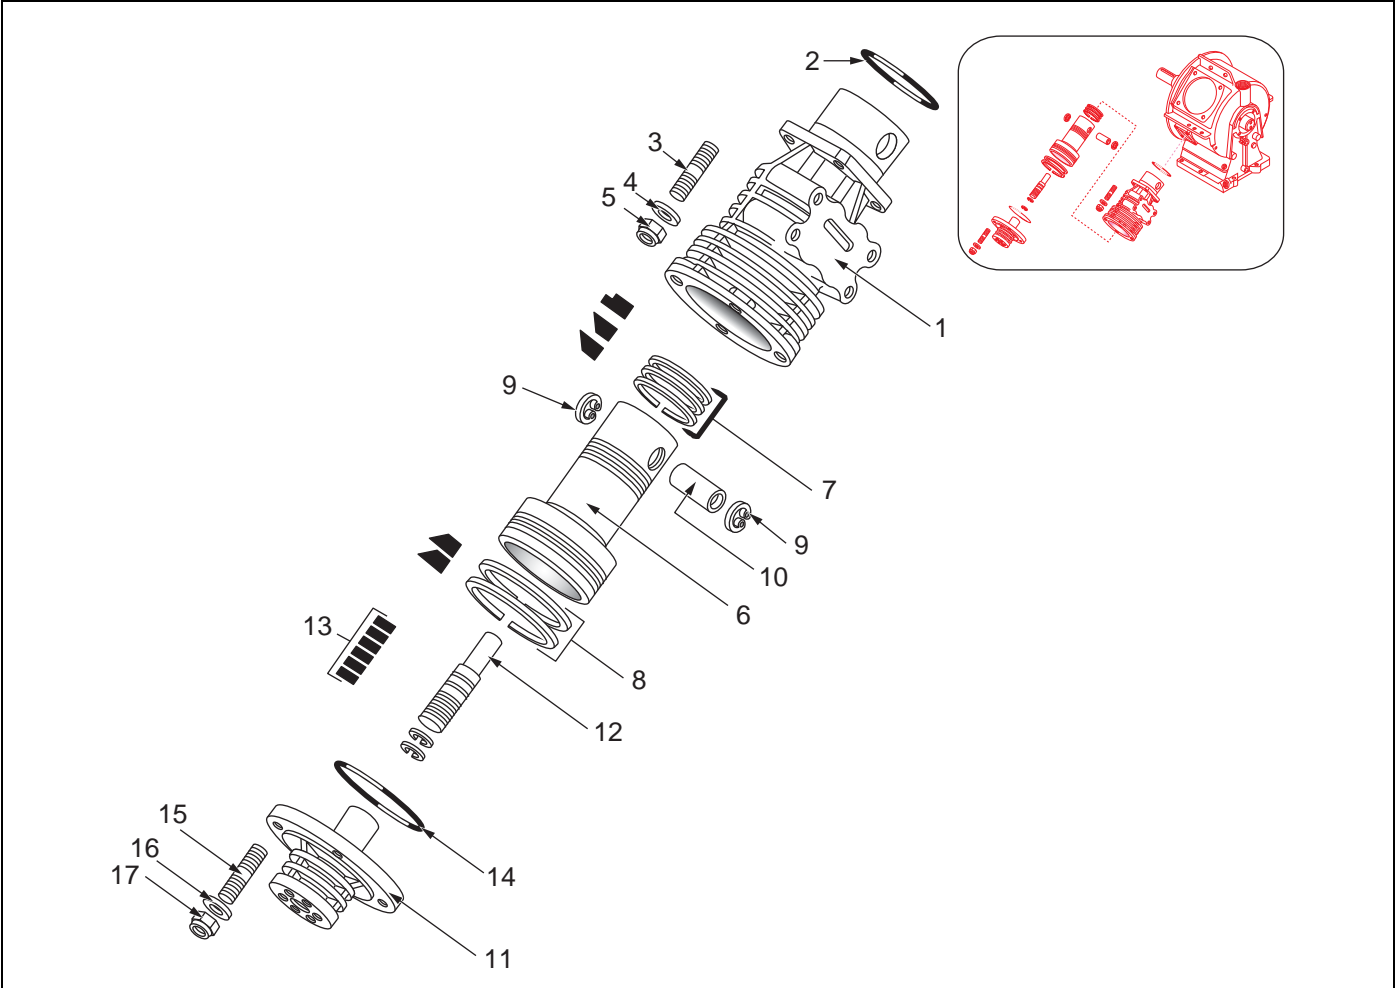


Item	Qty	Part No.	Description	Notes
◆	1	127813	2nd Stage Cylinder Assembly	Items 1 - 10
1	1	127812	Cylinder	
2	1	N3731	O-ring	
3	4	N215	Stud	
4	4	N58	Washer	
5	4	N370	Self Locking Hex Nut	
◆	1	127779	Stepped Piston Assembly	Items 6 - 10
6	1	127778	Stepped Piston	88/66 mm
7	1	N3162	Piston Ring Set	
8	1	N34414	Piston Ring Set	
9	2	N1665	Circlip	
10	1	N15409	Piston Pin	
◆	1	161335	4th Stage Cylinder Assembly	Items 11 - 17
11	1	161316	Cylinder	
◆	1	078338	4th Stage Piston Assembly	Items 12 & 13

**MNL-0021****Figure 3-23 (cont.)**

## 2nd and 4th Stage Piston and Cylinder


<b>Item</b>	<b>Qty</b>	<b>Part No.</b>	<b>Description</b>	<b>Notes</b>
12	1	78337	Piston	
13	1	N35556	Piston Ring Set	
14	1	N29082	O-ring	
15	4	N215	Stud	
16	4	N58	Washer	
17	4	N370	Self Locking Hex Nut	

**Figure 3-24** 3rd Stage Piston and Cylinder

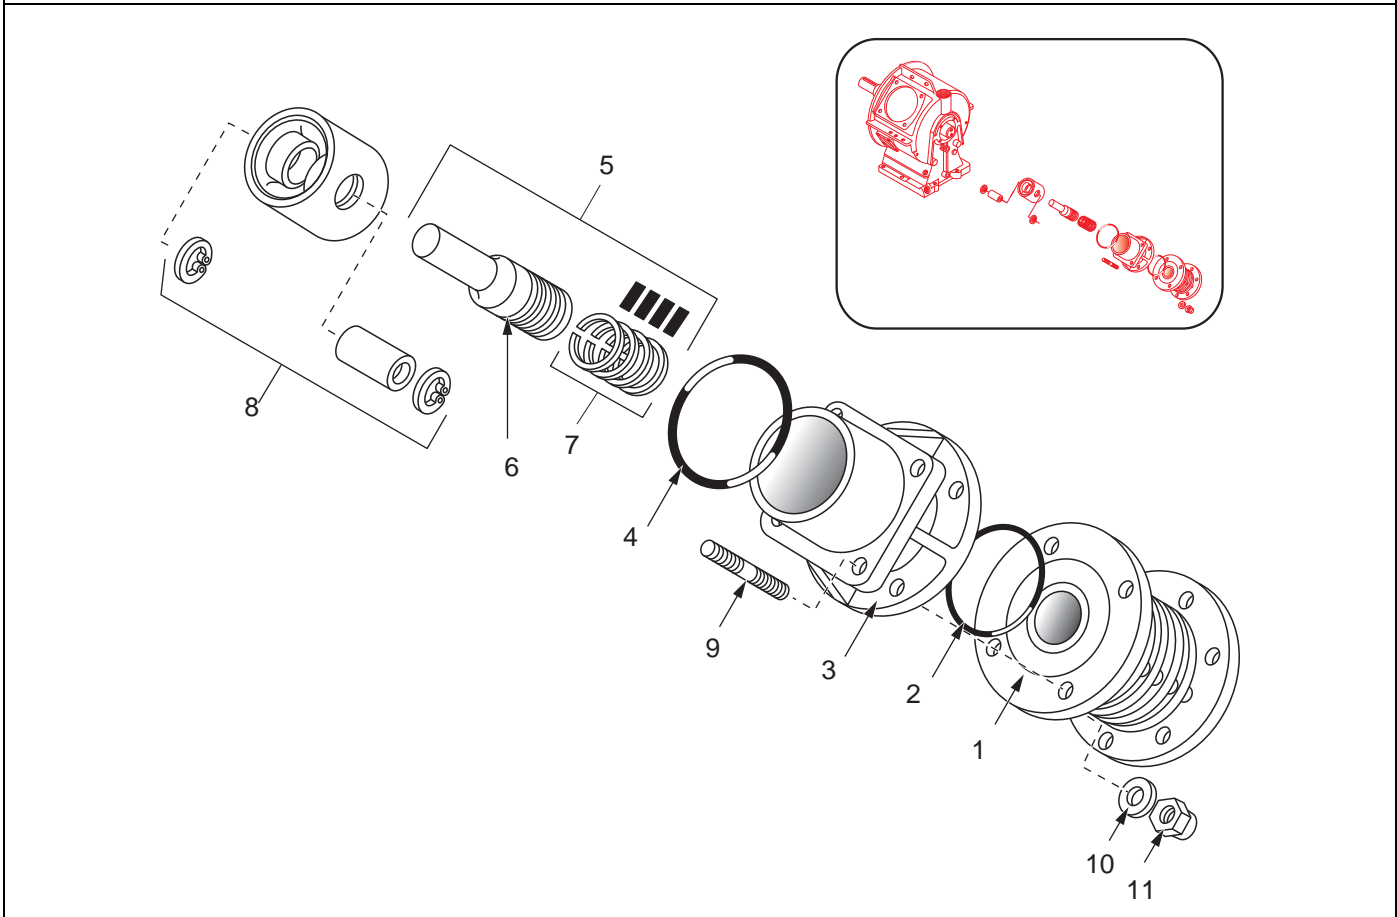


Item	Qty	Part No.	Description	Notes
◆	1	068595	3rd Stage Piston and Cylinder Assembly	
1	1	67061	Cylinder	
2	1	N7063	O-ring	
3	1	82295	Guide Cylinder	
4	1	N3731	O-ring	
5	1	070013	Piston Assembly	Items 6 and 7
6	1	N4378	Piston	
7	1	N16313	Piston Ring Set	
8	1	070070	Guide Piston Assembly	
9	4	N17462	Stud	
10	4	N58	Washer	
11	4	N370	Self Locking Hex Nut	

**Figure 3-25** 5th Stage Cylinder and Piston

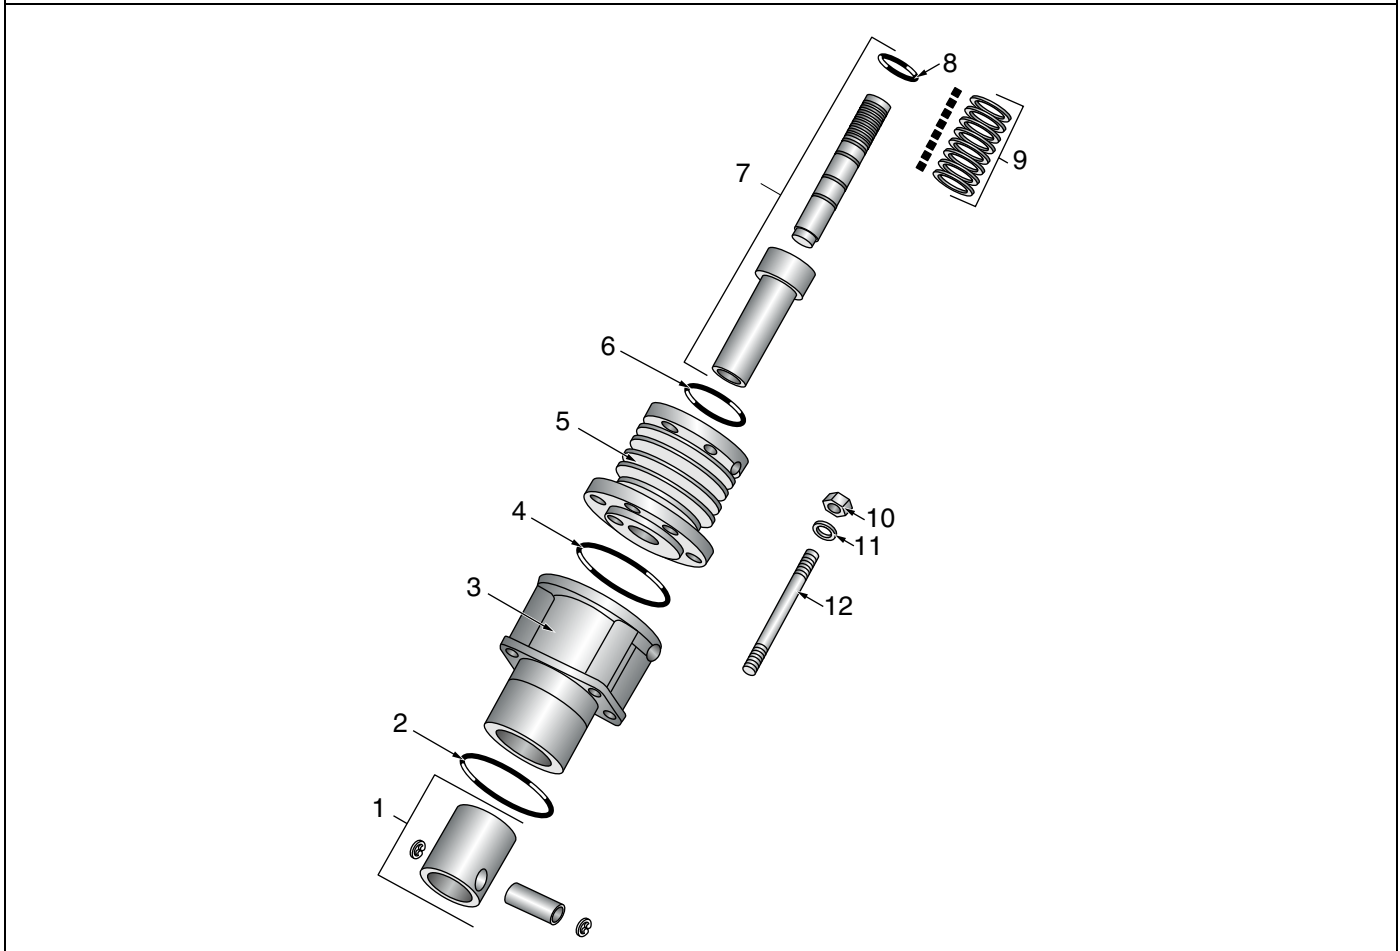


Item	Qty	Part No.	Description	Notes
◆	1	161926	5th Stage Piston & Cylinder Assembly	
1	1	070070	Guide Piston Assembly	
2	1	N3731	O-ring	
3	1	82295	Guide Cylinder	
4	1	N7063	O-ring	
5	1	82480	Cylinder	
6	1	N4868	O-ring	
7	1	79185	Piston And Sleeve Assembly	Items 8 & 9
8	1	N23755	O-ring	
9	1	N26412	Piston Ring Set	
10	4	N370	Self Locking Hex Nut	
11	4	N58	Washer	
12	4	N17462	Stud	

**Figure 3-26** 1st Stage Valve Head

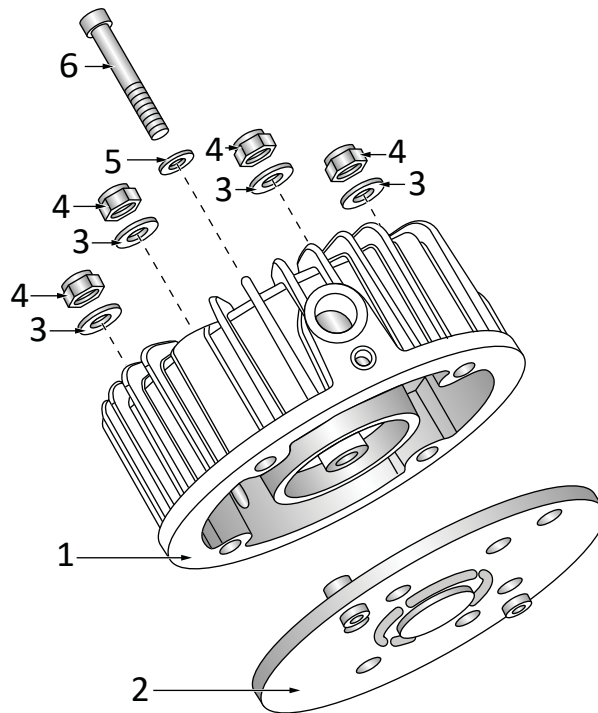


Item	Qty	Part No.	Description	Notes
◆	1	79680	1st Stage Valve Head Assembly	
1	†	...	1st Stage Valve Head	
2	1	N26029	Plate Valve	
3	4	N16	Washer	
4	4	N644	Self Locking Hex Nut	
5	1	N58	Washer	
6	1	N150	Allen Screw	

**Figure 3-27** 2nd Stage Valve Head

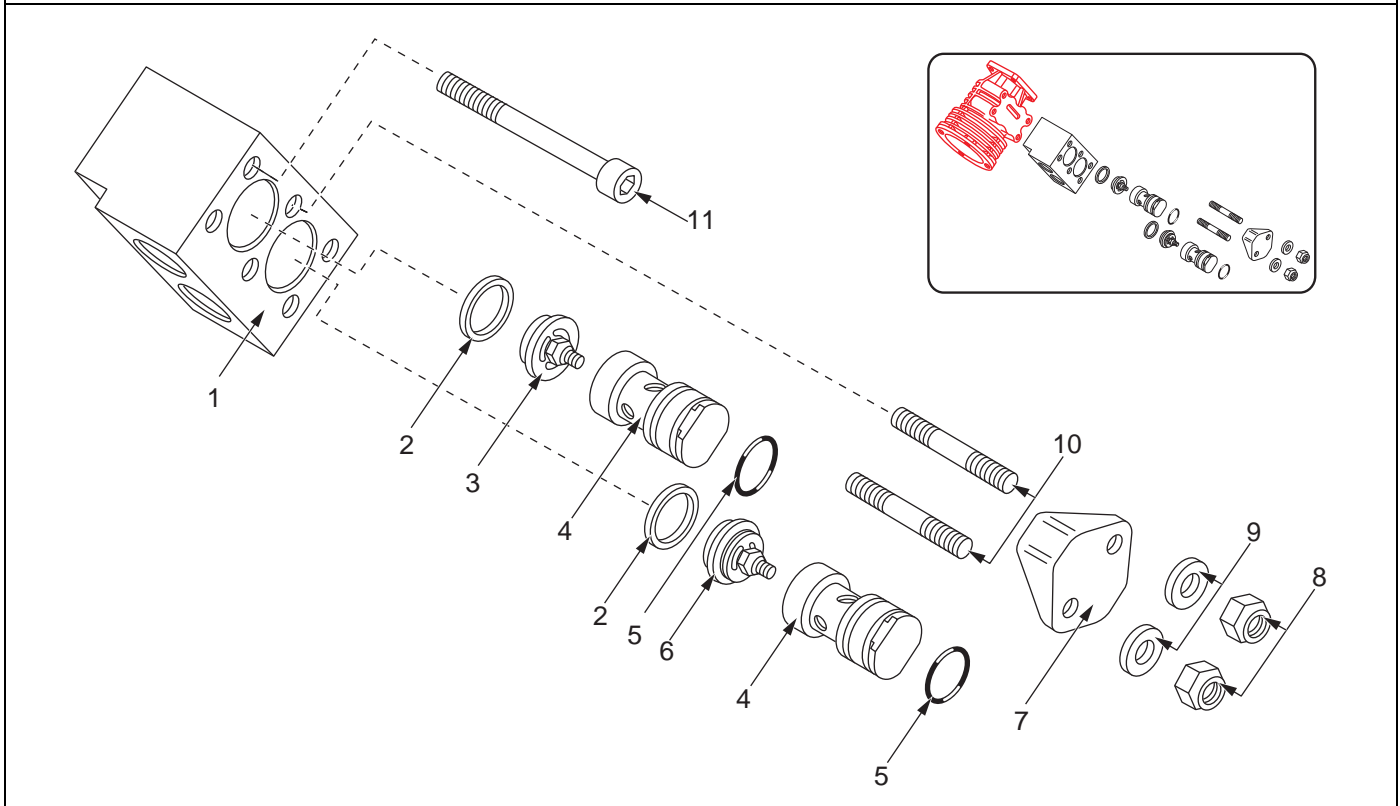


Item	Qty	Part No.	Description	Notes
◆	1	068601	2nd Stage Valve Head Assembly	
1	1	68491	Valve Head	
2	2	56668	Gasket	
3	1	N4067	Intake Valve	
4	2	56183	Valve Cap	
5	2	N3997	O-ring	
6	1	N4068	Pressure Valve	
7	1	62924	Press Pad	
8	2	N3474	Self Locking Hex Nut	
9	2	N16	Washer	
10	2	N4190	Stud	
11	4	N354	Allen Screw	

**Figure 3-28** 3rd Stage Valve Head

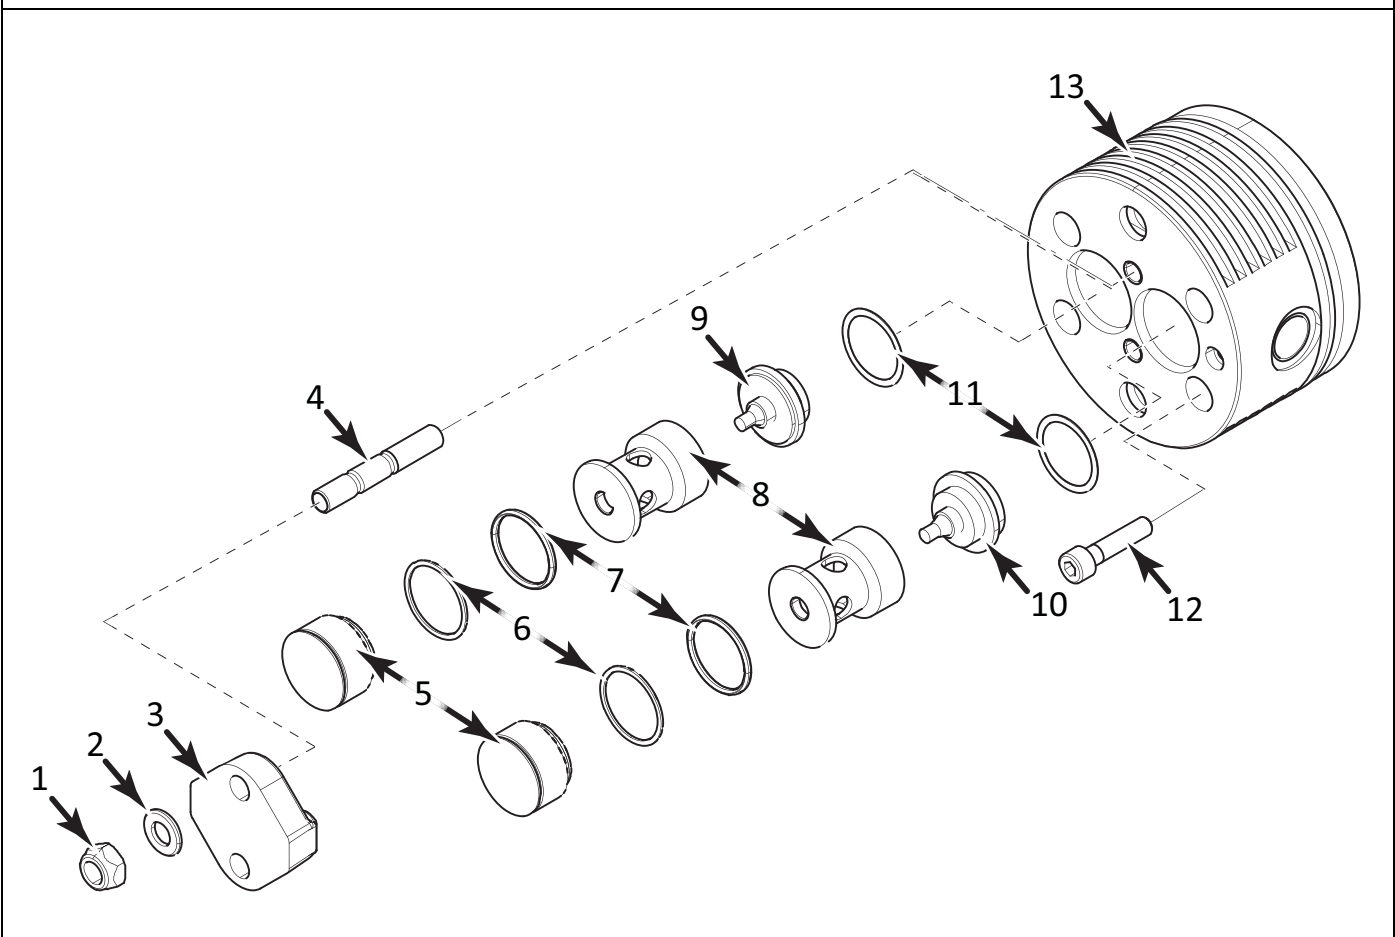


Item	Qty	Part No.	Description	Notes
◆	1	068602	3rd Stage Valve Head Assembly	
1	2	N3474	Self Locking Hex Nut	
2	2	N16	Washer	
3	1	62924	Pressure Pad	
4	2	N4190	Stud	
5	2	127366	Valve Cap Upper	
6	2	N34134	O-ring	
7	2	N34135	Back-up Ring	
8	2	56183	Valve Cap Lower	
9	1	N15273	Intake Valve	
10	1	N15274	Pressure Valve	
11	2	56668	Gasket	
12	1	60583	Valve Head	
13	6	N503	Allen Screw	

**Figure 3-29** 4th Stage Valve Head

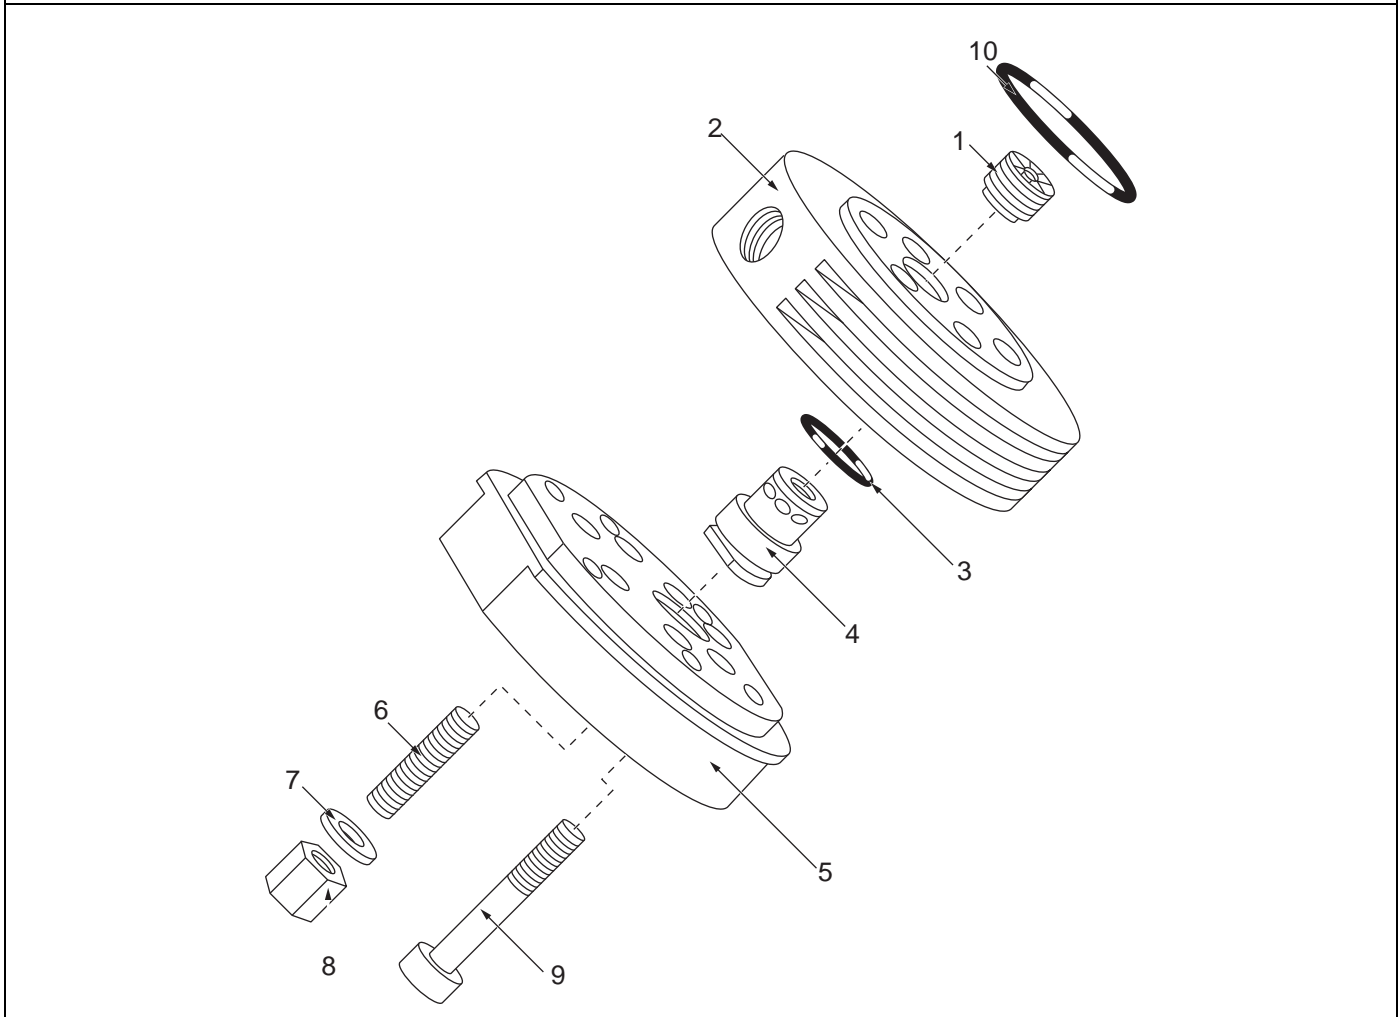


Item	Qty	Part No.	Description	Notes
◆	1	071621	<b>4th Stage Valve Head Assembly</b>	Items 1-10
◆	1	073629	<b>Valve Head Assembly</b>	Items 1-8
1	1	07790	Intake Valve	
2	1	65191	Valve Head	
3	1	N2789	O-ring	
4	1	014121	Pressure Valve	
5	1	14118	Valve Head Cover	
6	1	71065	Stud	
7	1	N3625	Gasket	
8	1	N3623	Nut	
9	6	N19554	Allen Screw	
10	1	N3860	O-ring	

**Figure 3-30** 5th Stage Valve Head

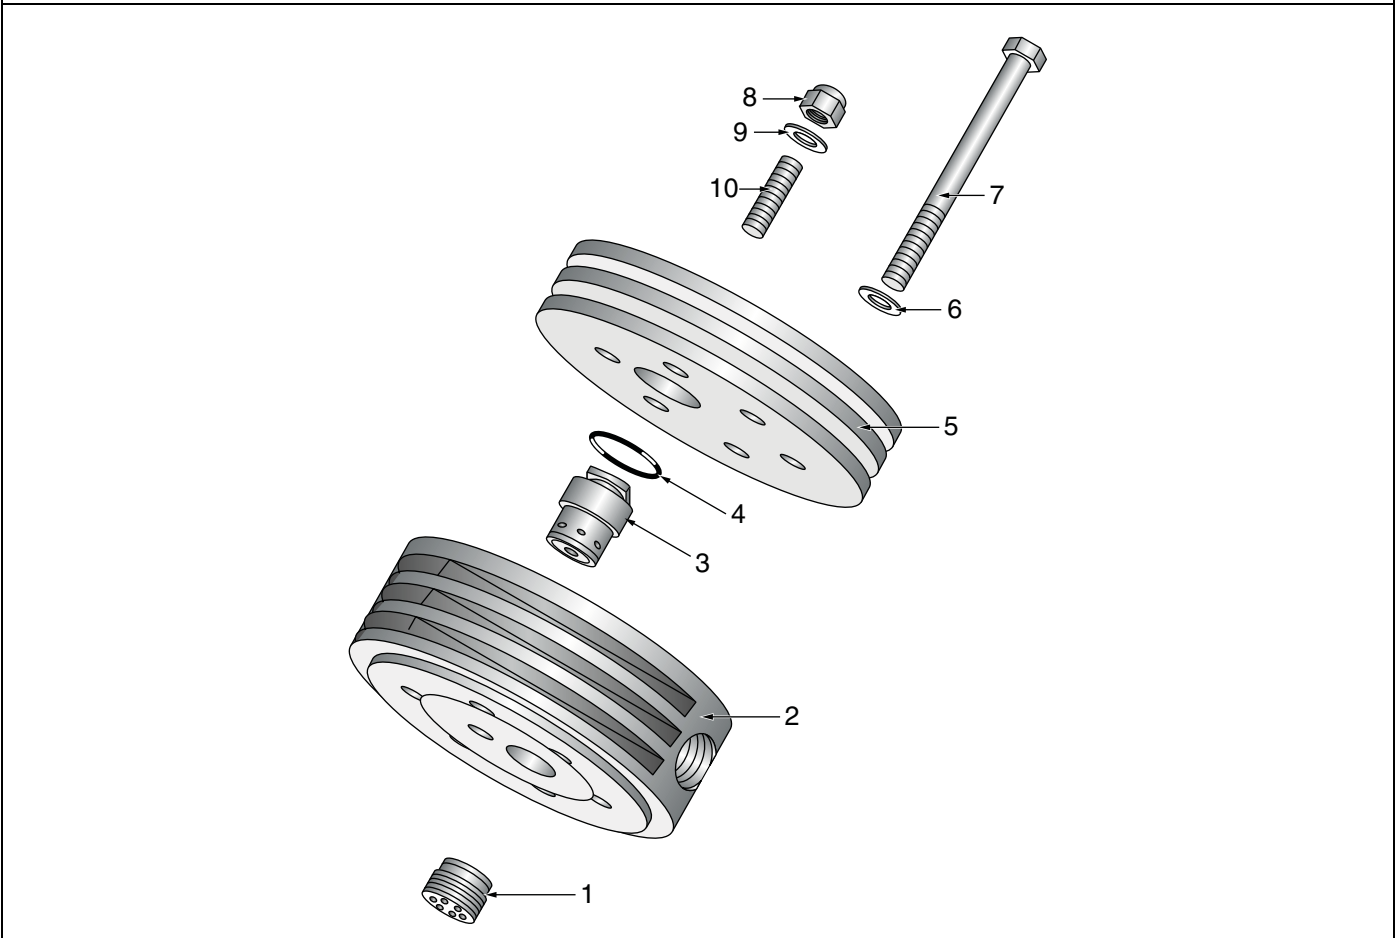


Item	Qty	Part No.	Description	Notes
◆	1	082096	5th Stage Valve Head Assembly	
1	1	081409	Intake Valve	
2	1	082087	Valve Head	
3	1	014121	Discharge Valve	Includes Item 4
4	1	N2789	O-ring	
5	1	082086	Valve Head Cover	
6	6	N58	Washer	
7	6	N17730	Hex Head Bolt	
8	1	88609	Acorn Nut	
9	1	N3625	Gasket	
10	1	N124608	Stud	

**Figure 3-31** Flywheel Drive Assembly

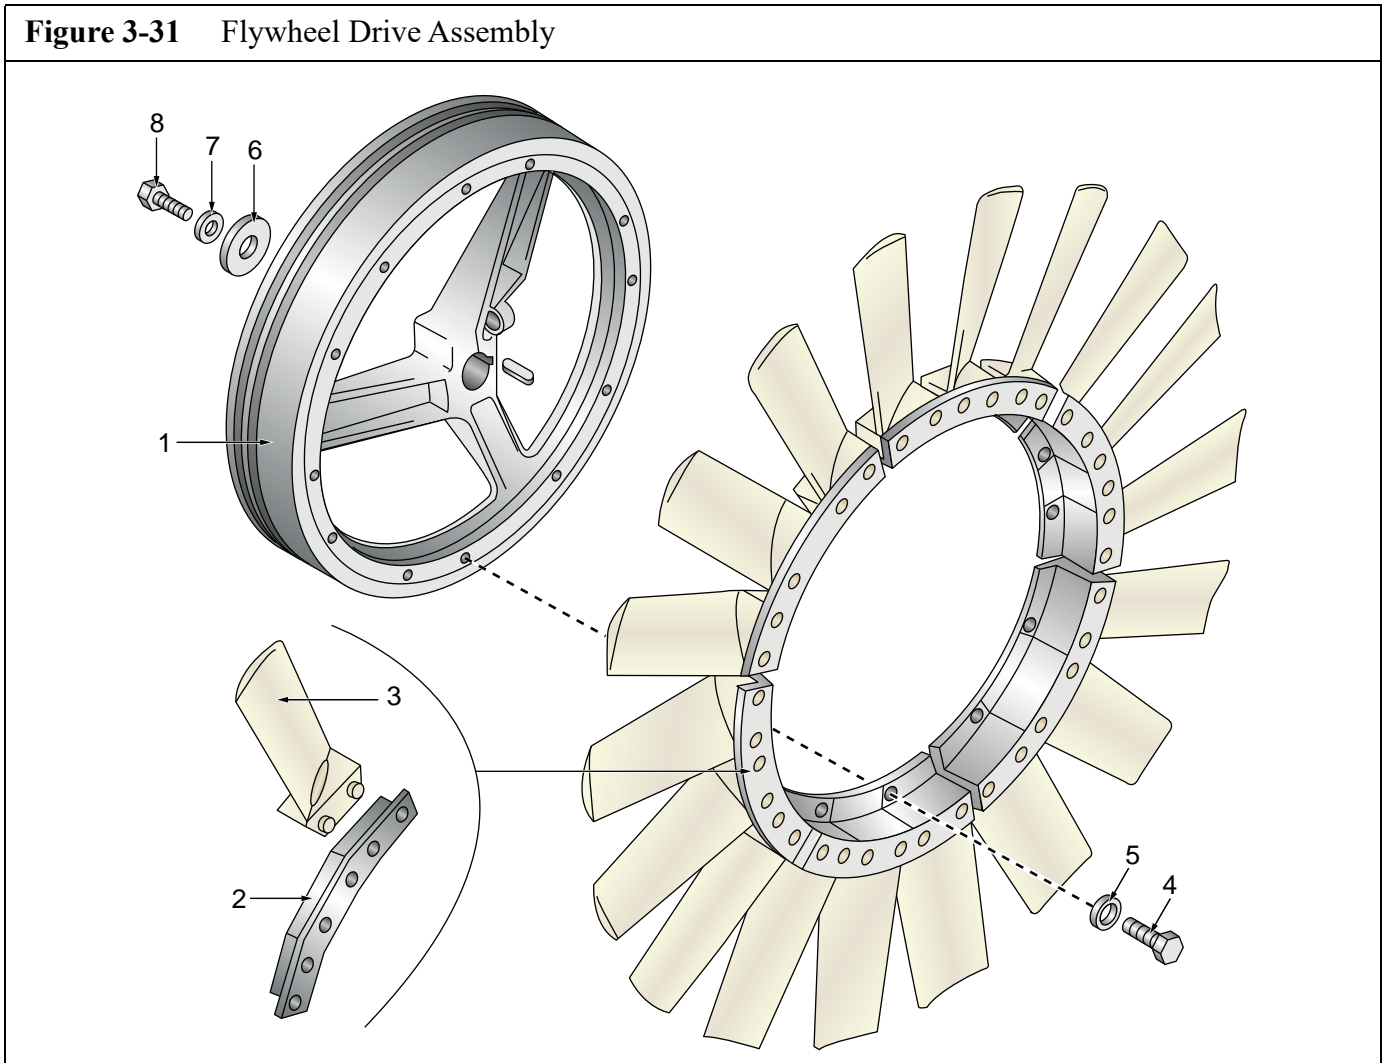

Item	Qty	Part No.	Description	Notes
◆	1	161475	Flywheel Drive Assembly	Banded
1	1	129360-RA	L9010V-belt Pulley	
2	6	128837	Fan Blade Support	
3	18	79239	Blade, Fan CCW	
4	36	N19508	Hex Head Screw	M6 x 16
5	36	WAS-0029	Washer, Split Lock	6 mm
6	1	68646	Washer	
7	1	WAS-0002	Washer, Split Lock	
8	1	N19523	Hex Head Cap Screw	


**Figure 3-32** Intake Filter Assembly

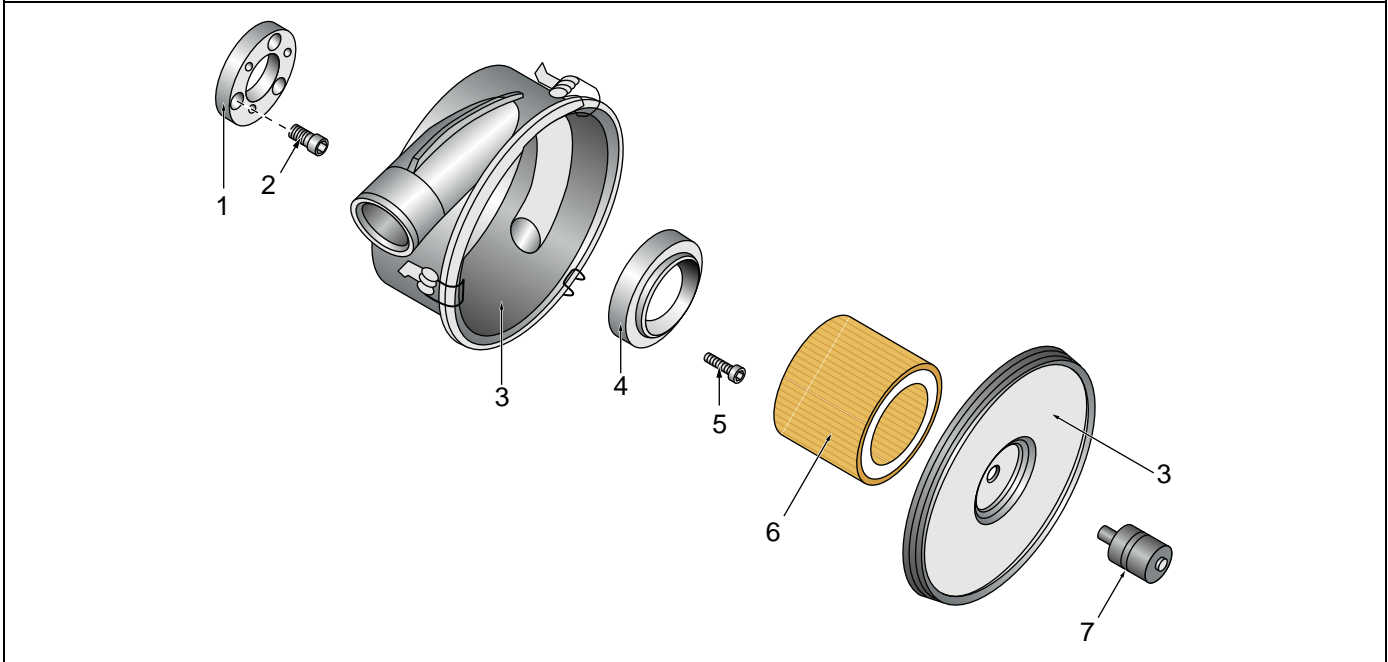

Item	Qty	Part No.	Description	Notes
◆	1	079706	Intake Filter Assembly	
1	1	79679	Manifold, Air Intake	
2	3	N171	Socket Head Cap Screw	
3	1	88797	Housing, Intake Filter	
4	1	79464	Flange	
5	3	N19535	Allen Screw	
6	1	N25886	Element, Intake Filter	
7	1	N2221	Indicator, Maintenance	



**Figure 3-33** 1st Stage Interfilter (Optional)

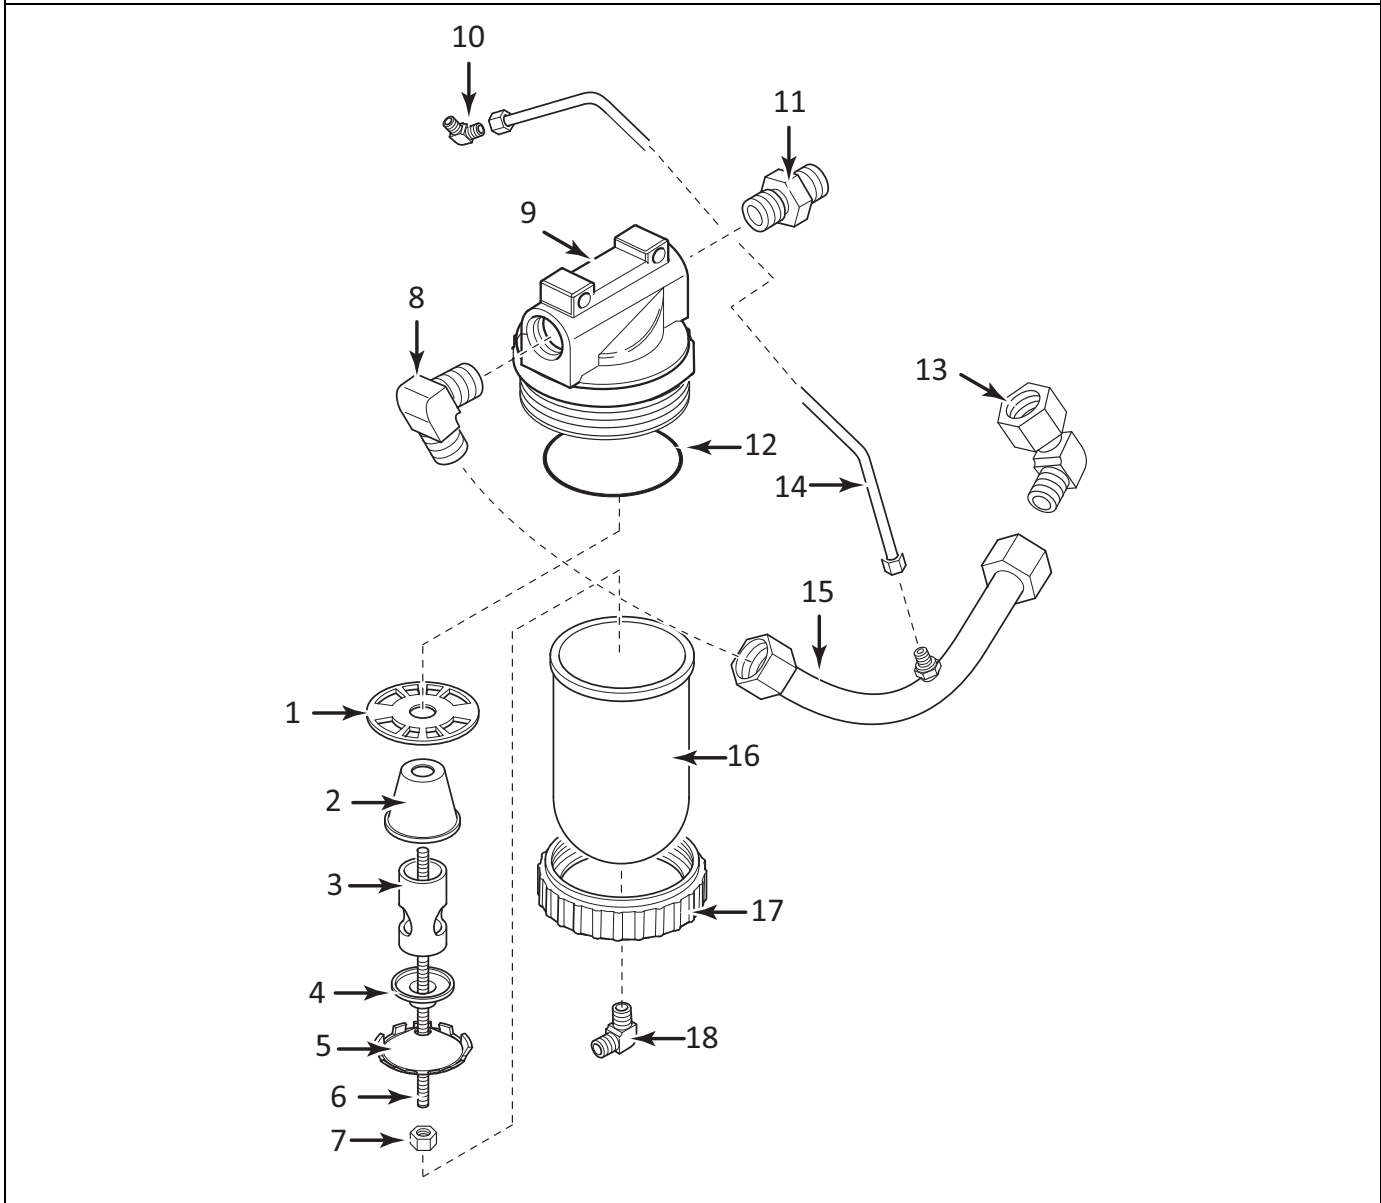


Item	Qty	Part No.	Description	Notes
◆	1	160918	1st Stage Interfilter Assembly	
1	1	N2484	Distributing Plate	
2	1	N2483	Baffle Funnel	
3	1	61751	Tube	
4	1	N2480	Baffle Plate	
5	1	N2479	Baffle Washer	
6	1	N3677	Stud	
7	1	N1042	Hex Nut, Self Locking	
8	1	N20304	Screwed Socket, Elbow	

**Figure 3-33 (cont.)**1st Stage Interfilter (*Optional*)


<b>Item</b>	<b>Qty</b>	<b>Part No.</b>	<b>Description</b>	<b>Notes</b>
9	1	80261	Interfilter	includes #1-7, 12, 16 & 17
10	1	N20058	Screwed Socket, Elbow	
11	1	N20075	Straight Male Socket	
12	1	N19122	O-ring	
13	1	N20485	Adjustable Screwed Socket	
14	1	83505	Connecting Tube Assembly	
15	1	83503	Connecting Tube Assembly	
16	1	N22966	Separator	
17	1	N3511	Screw Cap	
18	1	N20207	Screwed Socket, Elbow	

**Figure 3-34** 2nd Stage Interstage Separator

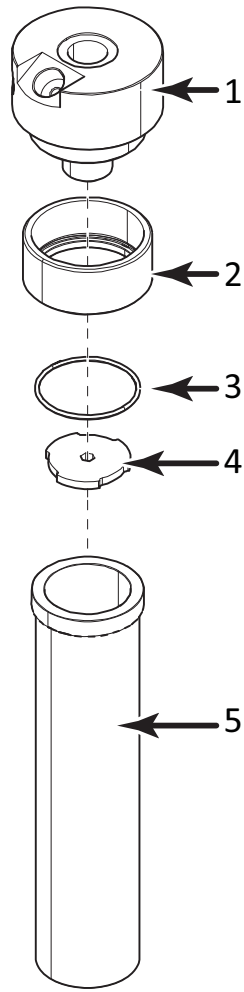


Item	Qty	Part No.	Description	Notes
◆	1	172775	2nd Stage Interstage Separator	
1	...	1 060601	Filter Head	
2	...	1 13937	Collar, Threaded Knurled	
3	...	1 N3556	O-ring	
4	...	1 161781	Insert	
5	...	1 —	Filter Housing	
NS	...	1 81810	Safety Valve	24 bar

**Figure 3-35** 3rd Stage Interstage Separator

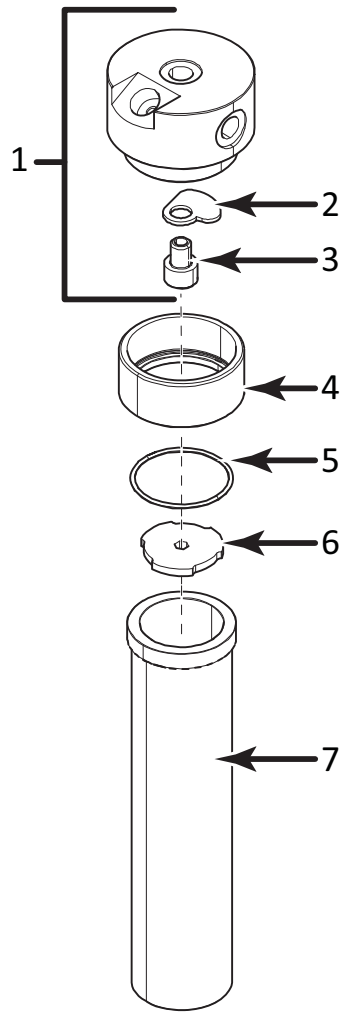

Item	Qty	Part No.	Description	Notes	
◆	1	172778	3rd Stage interstage Separator		
1	...	1	81150	Separator Head Assembly	
2	...	1	81148	Plate	
3	...	1	81643	Hollow Screw	
4	...	1	13937	Knurled Ring	
5	a..	1	N3556	O-ring	
6	...	1	161781	Inset Assembly	
7	...	1	—	Separator Housing	
NS	...	1	12886	Safety Valve	80 bar


**Figure 3-36** 4th Stage Interstage Separator

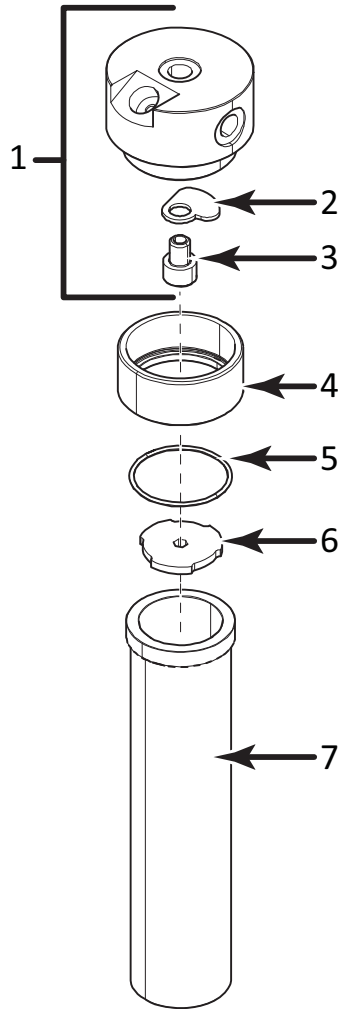

Item	Qty	Part No.	Description	Notes	
◆	1	172781	3rd Stage interstage Separator		
1	...	1	81776	Separator Head Assembly	
2	...	1	81148	Plate	
3	...	1	81643	Hollow Screw	
4	...	1	69173	Knurled Ring	
5	a..	1	N3556	O-ring	
6	...	1	166062	Inset Assembly	
7	...	1	—	Separator Housing	
NS	...	1	65410-180	Safety Valve	180 bar



**Figure 3-37** Cooling System Assembly

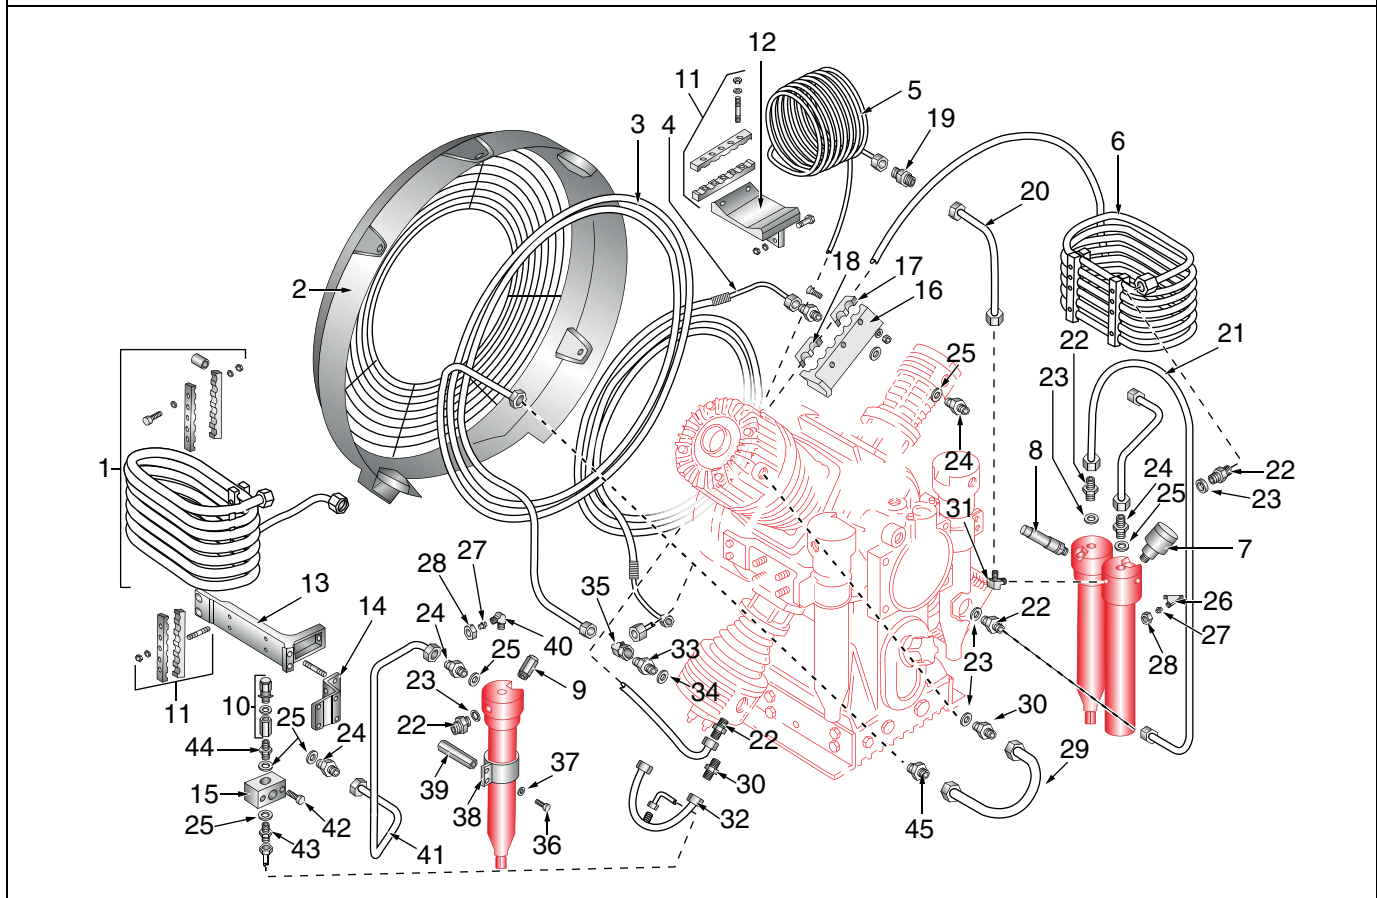


Item	Qty	Part No.	Description	Notes
◆	1	79916	Cooling System Assembly	
1	1	79961	3rd Stage Intercooler	
2	1	060709	Fan Screen	
3	1	79967	1st stage Intercooler	
4	1	79936	Aftercooler	
5	1	79963	4th Stage Intercooler	
6	1	79957	2nd Stage Intercooler	
7	1	065410-180	Safety Valve, 4th Stage	180 bar
8	1	081810	Safety Valve, 2nd Stage	24 bar
9	1	012886	Safety Valve, 3rd Stage	80 bar
10	1	083274	Safety Valve, 1st Stage	6 bar
11	4	...	Bracket Assembly	each consisting of:
—	2	62773	Bracket	
—	2	N3494	Stud	
—	2	N102	Washer	
—	2	N1042	Self Locking Hex Nut	
12	1	68889	Bracket	

Figure 3-37 (cont.)

## Cooling System Assembly


Item	Qty	Part No.	Description	Notes
13	2	60751	Mounting	
14	1	60716	Mounting	
15	1	60717	Support	
16	4	79637	Bracket	
17	3	71195-M	Clamp	
18	9	60694-M	Clamp	
19	1	N20310	Connector	
20	1	81240	Connecting Tube	
21	1	070079	Connecting Tube	
22	5	N20231	Straight Male Coupling	
23	5	N293	Gasket	
24	4	N20059	Fitting	
25	6	N1316	Gasket	
26	1	N20008	Tee Coupling	
27	2	N4530	Plug	
28	2	N7430	Screw Cap	
29	1	79919	Connecting Tube	
30	1	N20060	Connector	
31	1	N22719	Elbow	
32	1	070043	Connecting Tube	
33	1	71598	Connector	
34	1	56983	Gasket	
35	1	N20200	Elbow	
36	4	N171	Allen Screw	
37	8	N58	Washer	
38	3	57070	Tube Clamp	
39	4	69046	Hex Stud	
40	1	N20003	Elbow	
41	1	070080	Connecting Tube	
42	2	N724	Allen Screw	
43	1	N20014	Connector	
44	1	N20201	Connector	
45	1	N20312	Straight Male Connector	

**Figure 3-38** Lubricating System Assembly

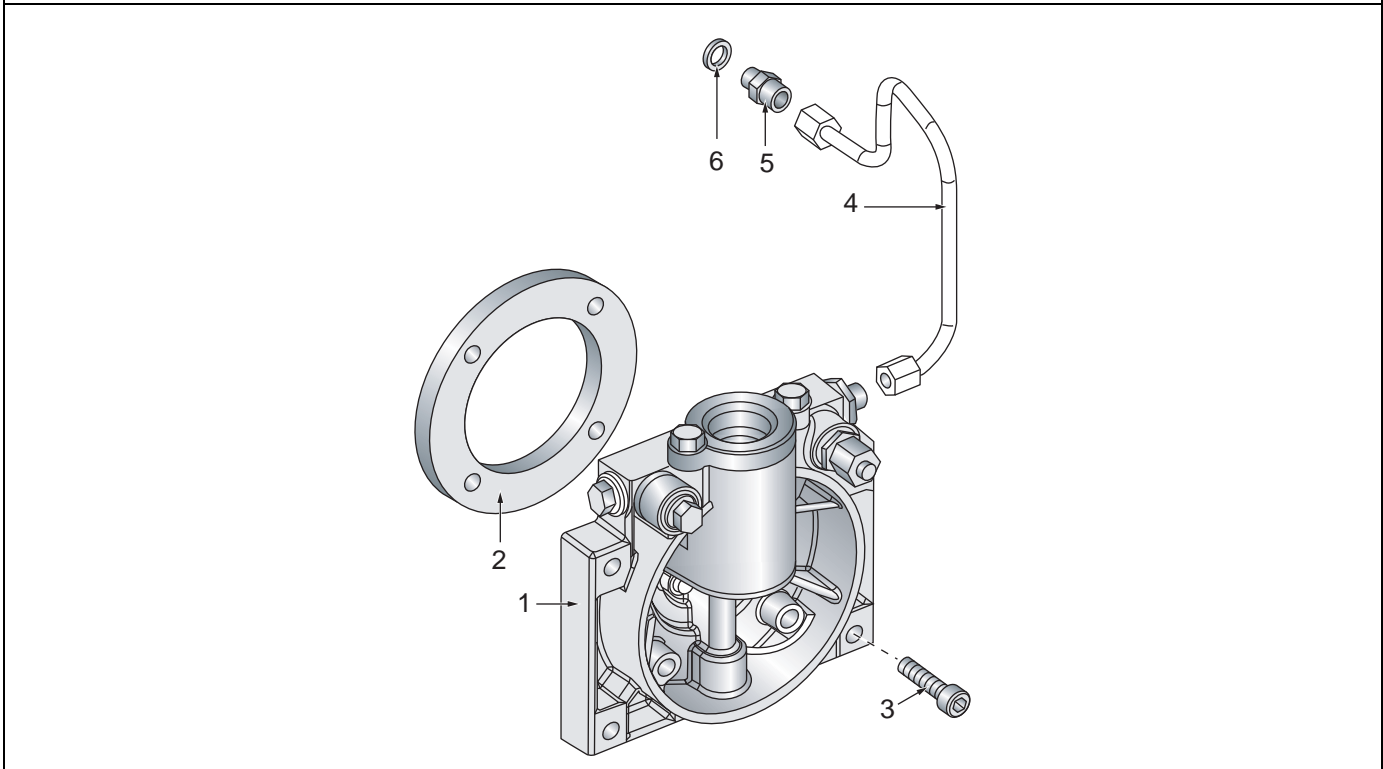


Item	Qty	Part No.	Description	Notes
◆	1	84381	Lubricating System Assembly	
1	1	080345	Lubricating System	See next Figure
2	1	78421	Gasket	
3	4	N123	Socket Head Screw	
4	1	84382	Connecting Tube Assembly	
5	1	N20002	Connector	
6	1	N4501	Gasket	

**Figure 3-39** Lubricating System

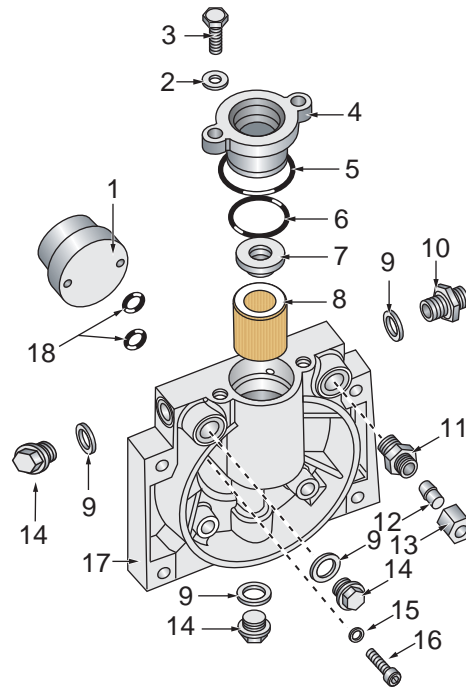

Item	Qty	Part No.	Description	Notes
◆	1	080345	Lubricating System	
1	1	N24585	Gear Pump	
2	2	N58	Washer	
3	2	N19506	Hex Head Screw	
4	1	77885	Oil Filter Cover	
5	1	N04058	O-ring	
6	1	N25327	O-ring	
7	1	77774	Rubber Gasket	
8	1	N25326	Filter Element	
9	4	N1316	Gasket	
10	1	81050	Regulating Valve	
11	1	N20065	Straight Male Connector	
12	1	N16309	Plug	
13	1	N1049	Screw Cap	
14	3	N52	Plug	
15	2	N2889	Gasket	
16	2	N634	Socket Head Screw	
17	1	077878	Oil Pump Case	
18	2	N3489	O-ring	

**Figure 3-40** Crankcase Venting

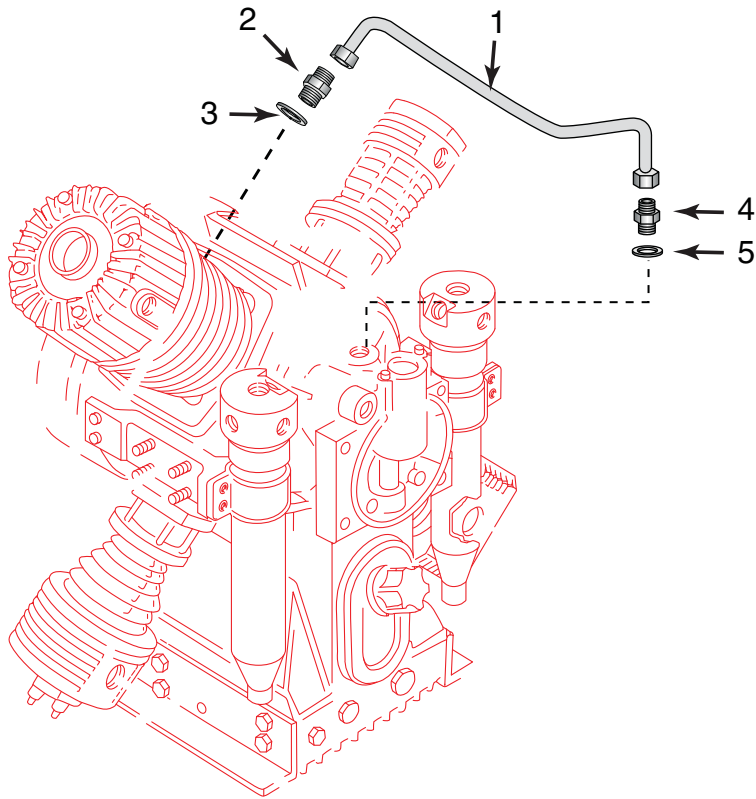

Item	Qty	Part No.	Description	Notes
◆	1	128426-KD	Crankcase Vent Assembly	
1	1	078918	Connecting Tube Assembly	
2	1	N20188	Male Connector	
3	1	N842	Gasket	
4	1	N20014	Male Connector	
5	1	N1316	Gasket	

**3.2 Automatic Condensate Drain System; ASY-4011**


**3.2.1 Description**

The automatic condensate drain (ACD) system may not be on all units. It must be requested at time of ordering. The ACD system operates electropneumatically and is comprised of the following:

- |                                     |                                    |
|-------------------------------------|------------------------------------|
| A condensate manifold               | A pneumatic condensate drain valve |
| An electrically controlled solenoid | A condensate separator             |
| A condensate collector tank         |                                    |

The automatic condensate drain system drains the interstage and final separators every 15 minutes during operation. Additionally the automatic condensate drain system unloads the compressor during the starting phase and drains these separators at shutdown of the compressor unit.



**Figure 3-41** Automatic Condensate Drain System

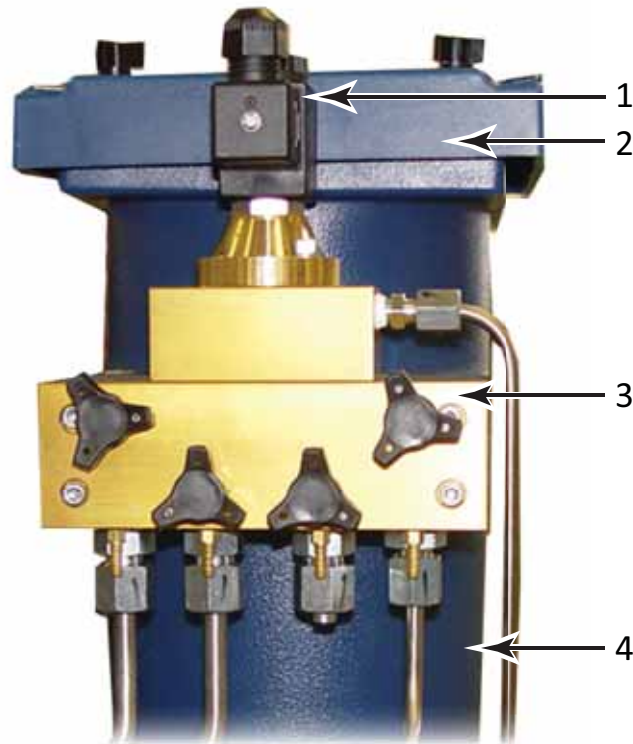

- |                             |                               |
|-----------------------------|-------------------------------|
| 1. Solenoid                 | 3. Condensate Drain Manifold  |
| 2. Condensate Separator Cap | 4. Condensate Collection Tank |

### 3.2.2 120 II Block Regulator Assembly

The 120 II block requires a regulator assembly to supply control Gas/gas to the ACD drain valve. The regulator assembly consists of a pressure gauge, regulator and a safety valve.

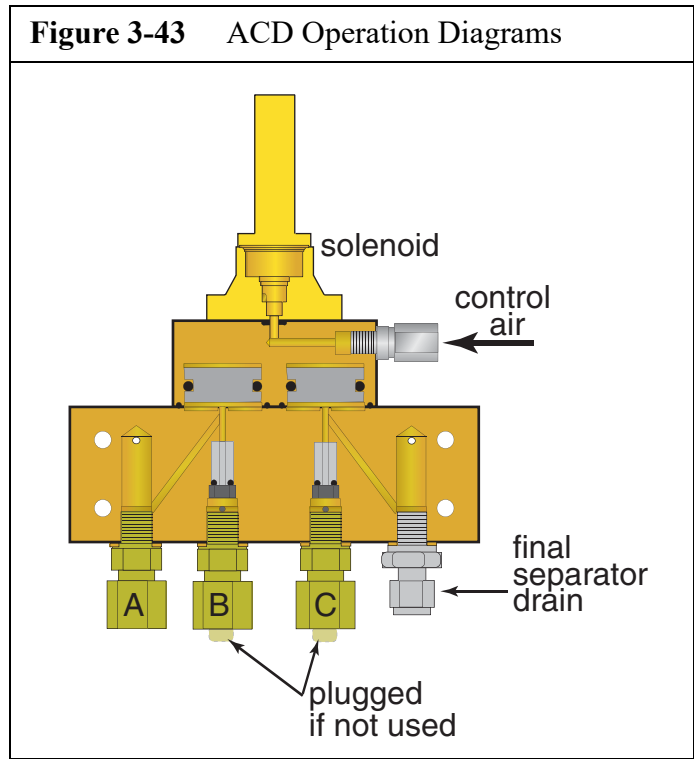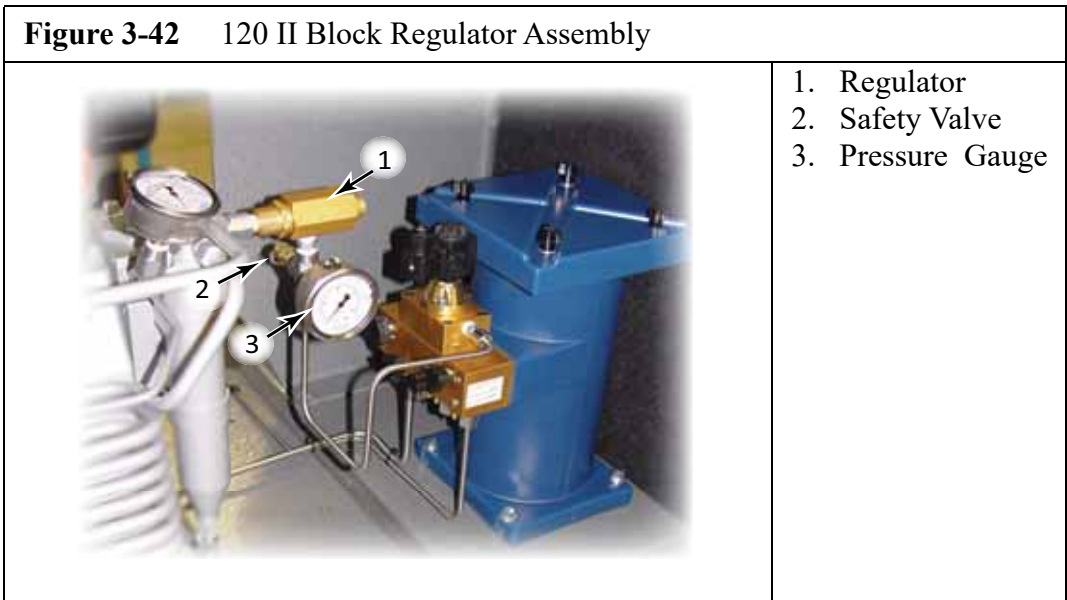

#### 3.2.2.1 ACD Operation

The ACD valve operates with control Gas from the first stage cylinder on 3 stage compressors and from the second stage cylinder on 4 & 5 stage compressors. Upon starting the compressor, the control Gas closes both drain valves. The PLC controls the solenoid which vents the control Gas, allowing the drain valves to release and drain. The standard setting is to open the drain valves every 15 minutes for

approximately 10 seconds. The drain valve on the same side as the control Gas is the final separator drain. (See Figure 3-43)

On 3 stage compressors ports **B** and **C** are plugged. Port **A** drains the 2nd stage separator.

On 4 stage compressors Port **C** is plugged. Port **A** drains the 3rd stage separator and port **B** drains the 2nd stage separator. A check valve is installed in port **B** preventing the second stage from draining until the 3rd stage has drained down to a pressure lower than the pressure of the second stage.

On 5 stage compressors no plugs are installed. Port **A** drains the 3rd stage separator, port **B** drains the 2nd stage separator and, and port **C** drains the 4th stage separator. Port **C** like port **B** has a check valve installed preventing it from draining until the final separator has drained lower than the pressure in the 4th stage separator.

### 3.2.2.2 Start Unloading

The unloading of the compressor during the starting phase is possible because of the lack of control Gas immediately upon starting the unit. As the unit is switched on the solenoid is energized and closes. After the compressor has attained nominal speed, pressure builds in the interstage separators and the control Gas closes the condensate drain valves. Once these valves close, the compressor delivers to the consuming device.

### 3.2.2.3 Standstill Drainage

At compressor shutdown, the solenoid is de-energized and opens. This drains the condensate and relieves the pressure in the interstage and final separators.

### 3.2.2.4 Condensate Drain Separator

The condensate drainage is a mixture of oil, water and Gas. The Condensate Drain Separator is utilized to separate the oil and water from the Gas. The oil and water is then piped to the Condensate Collector Bottle where the oil and water mixture is stored until it can be disposed of properly.

## 3.2.3 ACD Maintenance

The condensate drain valves are provided with manual drain valves to verify correct operation of the automatic system.

The automatic condensate drain system must be serviced once a week as follows:

1. Open all manual drain valves one after the other.
2. Observe the drainage of condensation.
3. If the system drains more than 2 ounces of liquid per stage, either the system or the corresponding condensate drain valve is not working properly.
4. Find the fault and remedy accordingly.
5. If little or no condensation emerges, the automatic system is operating properly.
6. The condensate collection bottle should be emptied regularly. Due care must be taken to ensure that any oil which is drained with the condensate is disposed of properly. Check local, State and Federal regulations.

If the ACD valve is not functioning properly, a repGas kit, KIT-0377, is available through our parts department. The rep Gas kit comes with O-rings, gaskets, and other components that may wear down from excessive use. A clear diagram and instructions are also included in the repGas kit.


### 3.3 Condensate Collector

The processed Gas is heated by the compression process then cooled. This causes condensation within the system. The resulting moisture is removed after each compression stage with separators and is collected through the automatic condensate drain system.

This moisture may have a small oil content. The separation of entrained oil is not possible through simple methods; therefore the condensate must be completely removed. It is most practical to collect this condensate in special containers and dispose of it entirely.

For these compressor units a tank assembly is used. A float level switch is also included. The condensate is drained from the tank assembly by the manual drain valve into a separate container for proper disposal.

**Figure 3-44** Condensate Collector

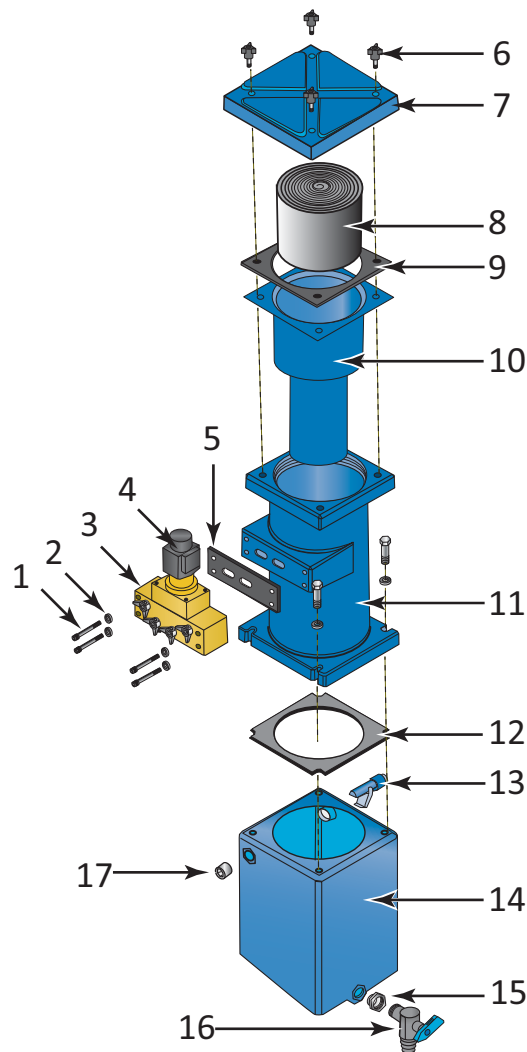


- |                         |                        |
|-------------------------|------------------------|
| 1-4.ACD Manifold        | 14. Condensate Tank    |
| 5 . ACD Gasket          | 15. Adapter            |
| 6 - 11.Separation Tank) | 16. Manual Drain Valve |
| 12. Gasket              | 17. Plug               |
| 13. Float Level Switch  |                        |



3.3.1 ACD Replacement Parts List

Figure 3-45 ASY-4011 Replacement Parts List

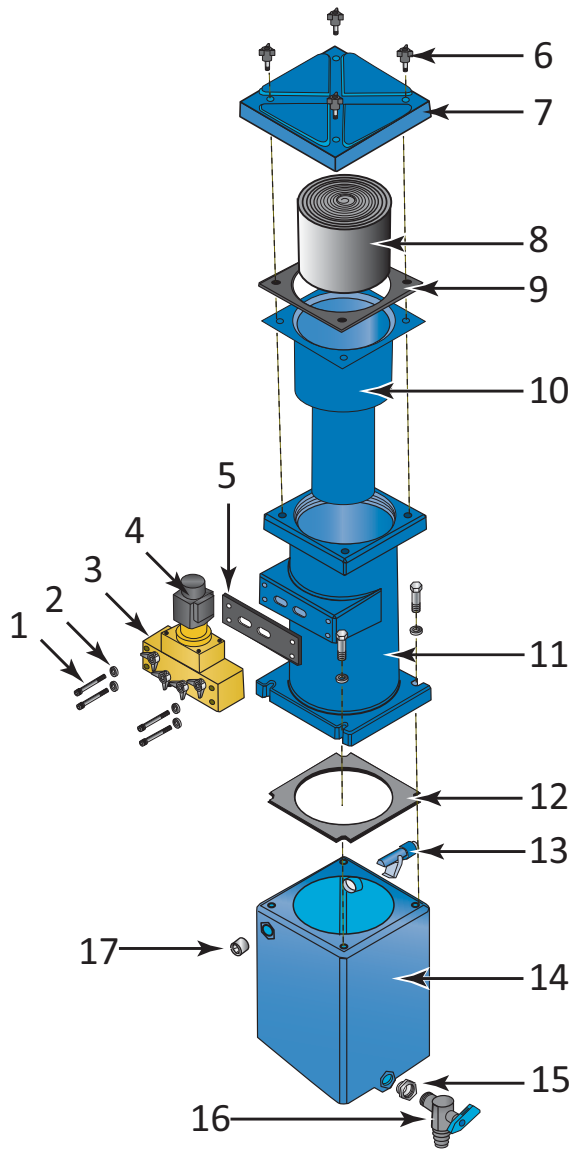


Item	Qty	Part No.	Description	Notes
◆	1	ASY-4024	Automatic Condensate Drain System	
1	4	SCR-0390	Allen Screws	
2	4	WAS-0057	Split Lock Washer	
3	1	ASY-4001	ACD Manifold	See Figure 3-46
4	1	COI-0033	Solenoid, NO	24 V, 20 Watt (black)
5	1	GKT-0073	Gasket	Neoprene
6	4	SCR-0391	Thumb Screws	
7	1	CAP-0103	Condensate Separator	
8	1	ELM-0210	Wire Mesh Filter Element	

**Figure 3-45 (cont.)**

## ASY-4011 Replacement Parts List

<b>Item</b>	<b>Qty</b>	<b>Part No.</b>	<b>Description</b>	<b>Notes</b>
9	1	GKT-0074	Gasket	Neoprene
10	1	HUS-0050	Inner Housing	
11	1	HUS-0062	Outer Housing	
12	1	GKT-0078	Gasket	Neoprene
13	1	SWT-0424	Liquid Level Switch	
14	1	TNK-0092	Condensate Tank	1.75 gal.
15	1	RED-0067	Reducer	
16	1	VAL-0437	Manual Drain Valve	
17	1	PLU-0198	Plug	

**Figure 3-46** ACD Assembly, ASY-4001

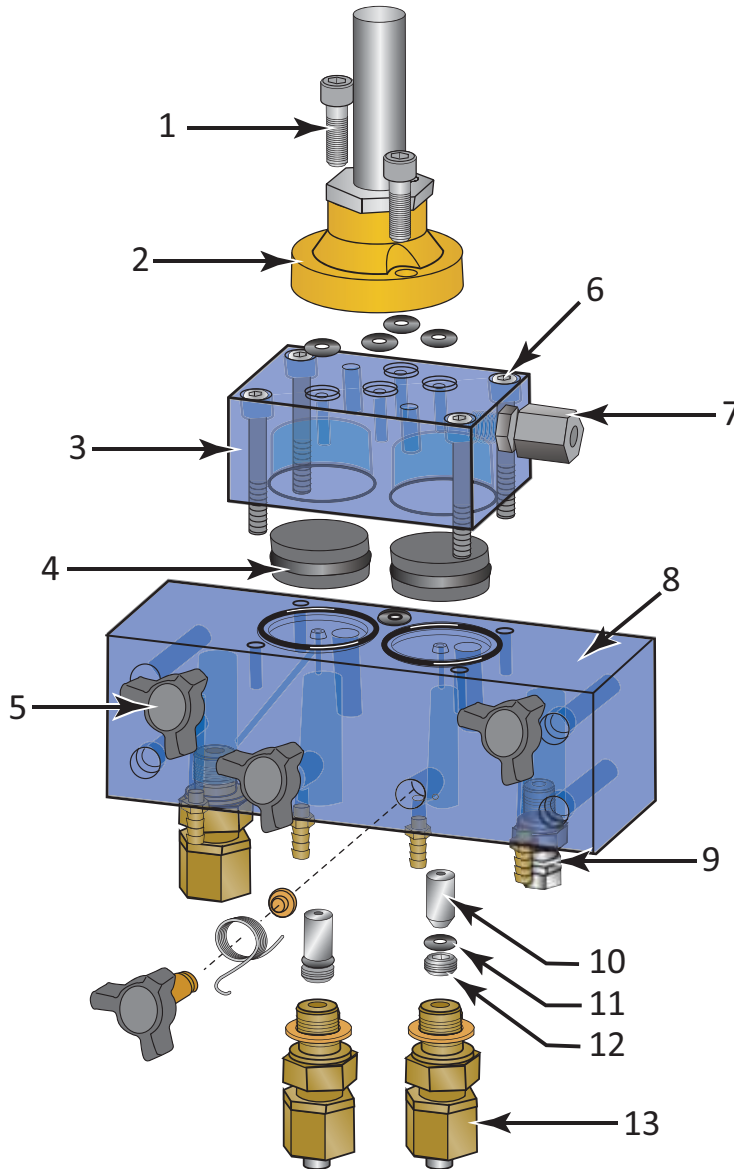


Item	Qty	Part No.	Description	Notes
◆	1	ASY-4001	ACD Valve	
1	2	SCR-0392	Allen Head Screws	
2	1	VAL-0634	Solenoid (body only)	NO
3	1	MFD-0060	Upper ACD	
4	2	PIS-0004	ACD Piston	
5	4	073793	Drain Tap	
6	4	SCR-0393	Allen Head Screw	
&	4	WAS-0057	Split Lock Washer	
7	1	CON-0009	Connector	

**MNL-0021****Figure 3-46 (cont.)** ACD Assembly, ASY-4001

<b>Item</b>	<b>Qty</b>	<b>Part No.</b>	<b>Description</b>	<b>Notes</b>
8	1	MFD-0059	Main ACD	
9	1	070615	Connector	
10	2	VAL-0426	Check Valve	600 psi
11	2	RNG-0114	O-Ring	
12	2	SCR-0383	Set Screw	
13	3	CON-0061	Connector	

**Figure 3-47** ACD O-Rings

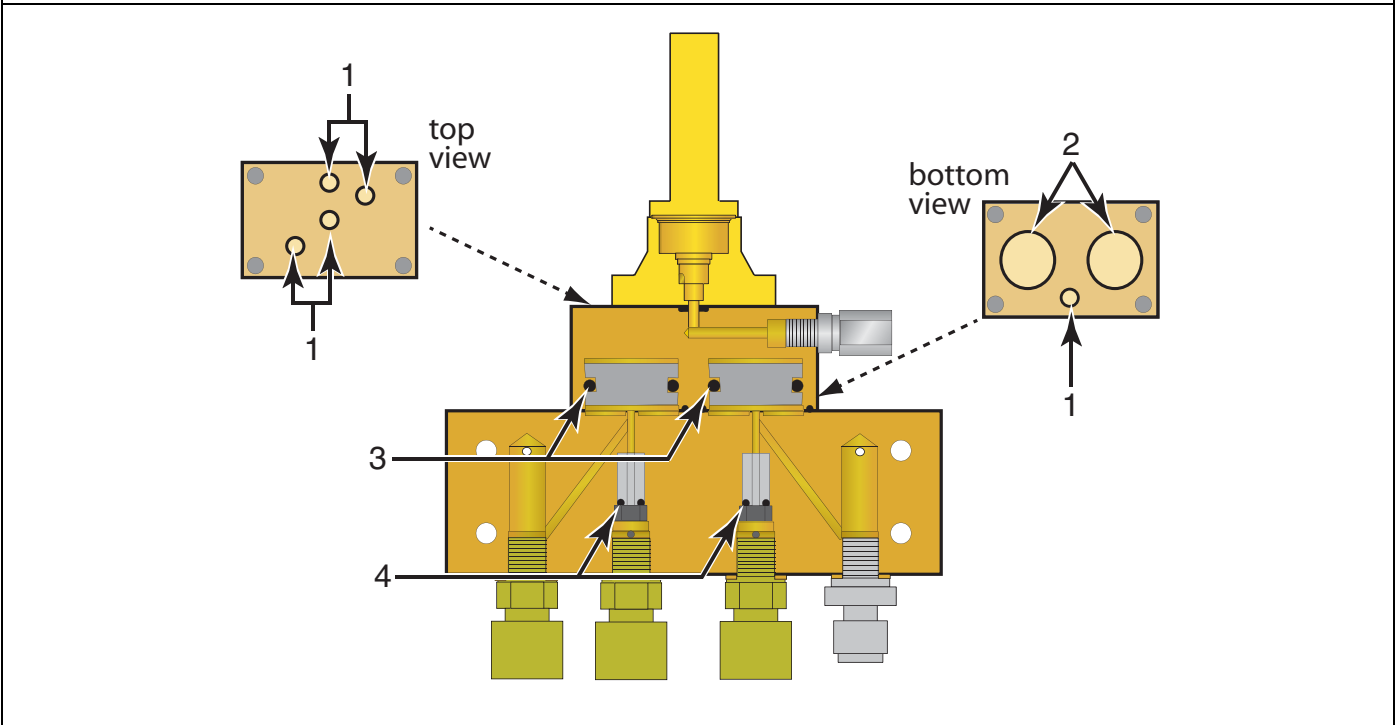

Item	Qty	Part No.	Description	Notes
1	5	RNG-0142	O-ring, ACD small	90 Duro
2	2	RNG-0143	O-ring, ACD large	90 Duro
3	2	N03521	O-ring, ACD pistons	75 Duro,
4	2	RNG-0114	O-ring, Check Valves	90 Duro

**Figure 3-48** Regulator Assembly <sup>a</sup>



a. Only used with IK 120 II block

Item	Qty	Part No.	Description	Notes
1	1	REG-0043	Pressure Regulator	6,000 psi IN; 0 - 250 psi OUT
2	1	VAL-0017	Safety Valve	225 psi
3	1	GAG-0028W	Pressure Gauge	0 - 300 psi

**3.3.2 Trouble shooting**

<b>Trouble</b>	<b>Cause</b>	<b>Remedy</b>
Solenoid does not drain.	<ol style="list-style-type: none"><li>1. Solenoid receives no electrical signal</li><li>2. Plunger of drain valve sticking</li></ol>	<ol style="list-style-type: none"><li>1. Check connections, timer. Replace if necessary.</li><li>2. Clean or replace valve.</li></ol>
Condensate Drain Valve does not drain.	<ol style="list-style-type: none"><li>1. Solenoid does not depressurize drain valve.</li><li>2. No control medium available.</li><li>3. Solenoid sticking.</li><li>4. Drain valve sticking in open position</li></ol>	<ol style="list-style-type: none"><li>1. Check solenoid, replace if necessary</li><li>2. Check supply lines</li><li>3. Clean or replace</li><li>4. Clean or replace</li></ol>

## CHAPTER 4: PURIFICATION SYSTEM

### 4.1 Introduction

The purpose of all Bauer breathing air purification systems is to remove carbon monoxide, oil, water, taste and odor from the compressed air stream before final delivery.

The purpose of all Bauer industrial air purification systems is to remove oil and water from the compressed air stream before final delivery.



### WARNING

Industrial air Purification System cartridges do not remove Carbon Monoxide and must not be used in breathing air applications.


The quality of air produced by the compressor is directly related to the quality and temperature of the air taken in by the unit. Intake air should be as close as possible to 50 °F (10 °C) and cleanest available and as dry as possible. Bauer compressors normally add approximately 18 °F (10 °C) to the intake air temperature. The purification cartridges perform their best at approximately 68 °F (20 °C). Adequate ventilation enhances the quality and life of the purification cartridges.

#### 4.1.1 General Purification System Procedures

1. Keep an accurate record of operating hours to ensure exact attention to maintenance intervals
2. Change all cartridges before reactivating a compressor unit that has been out of service more than three months. Leave cartridges in the unit as long as it is out of service.
3. While out of service keep all condensate drain valves closed. Maintain a pressure of 700 - 1,100 psi (50 to 80 bar) within the system to prevent moisture from entering the compressor and purification system.

#### 4.1.2 Chamber Safety Bore

The chambers in all Bauer purification systems are designed to prevent pressurization if the cartridge is missing, not seated properly or damaged (Figure 4-1 & Figure 4-2). Without a cartridge properly in place the safety bore is not sealed, the air escapes into the atmosphere, no pressure can be built up and thus it is ensured that unfiltered air is not supplied to the consuming device. If air is escaping from the safety bore remove and check cartridge. If necessary replace the cartridge or O-rings.

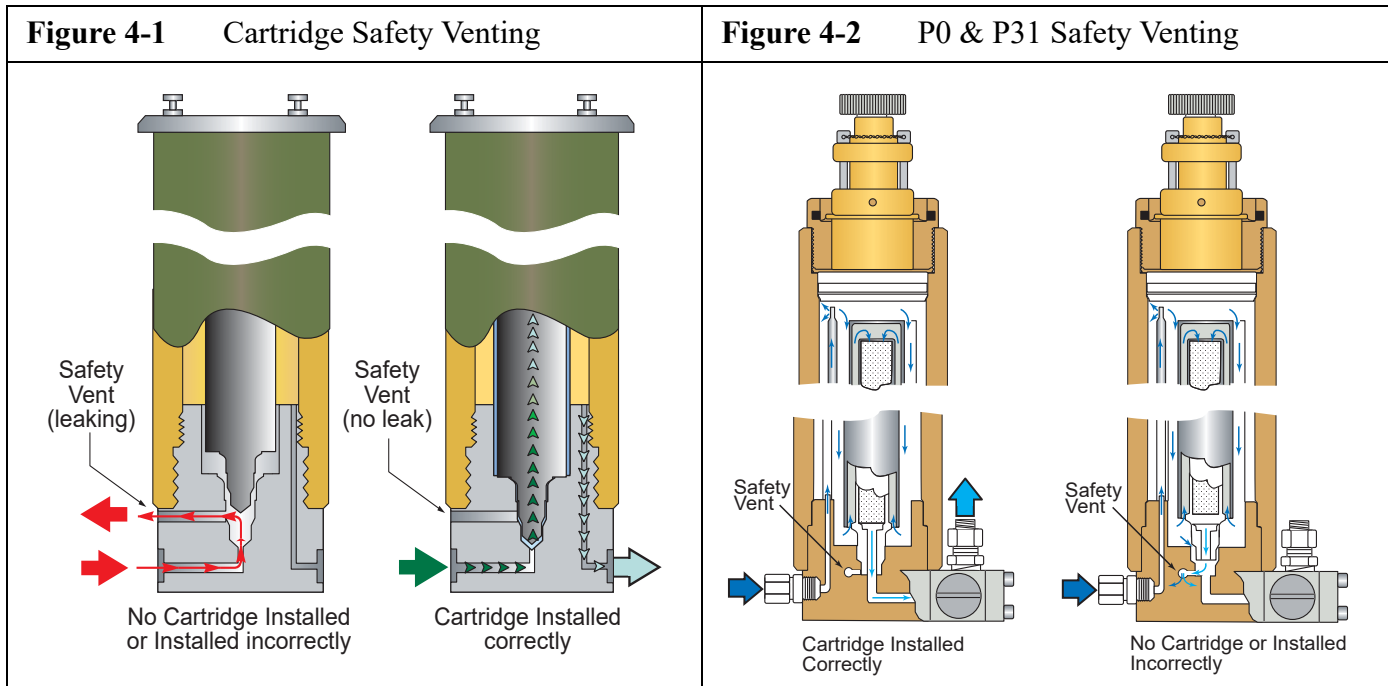

**4.1.3 Manual Condensate Drainage**

The condensate must be drained from the oil and water separator (final separator) before changing any cartridge, before beginning each filling procedure and in the absence of an Automatic Condensate Drain (ACD) system, every fifteen minutes during the operating procedure. This is done by slowly opening the manual condensate drain valves. They are opened approximately 1/3 of a turn to the left and held open until the condensate is completely drained. The condensate drain valves close by spring pressure but if necessary may be tightened by hand to ensure they are completely tightened.

**4.1.4 Model, Serial Number and Part Number Identification**

**4.1.4.1 Compressor Data Plate**

The model number, date of manufacture and serial number can be found on the compressor unit identification plate in the main electrical enclosure and frame.

Figure 4-3 Purification System Data Plates (typical)	
Purification System	Cartridge Installation
<div style="border: 1px solid black; padding: 5px;"> <p>PURIFICATION SYSTEM </p> <p>MODEL NO. <input type="text"/></p> <p>MAX. PRESSURE <input type="text"/> psig</p> <p>AIR PROCESSED <input type="text"/> cu. ft.</p> <p>O-RING <input type="text"/></p> <p>BACK-UP RING <input type="text"/></p> <p style="text-align: right;">LBL-0191</p> </div>	<div style="border: 1px solid black; padding: 5px;"> <p>CARTRIDGE TO BE INSTALLED </p> <p>CARTRIDGE FOR <input type="text"/></p> <p>CARTRIDGE NO. <input type="text"/></p> <p>1328 Azalea Garden Road - Norfolk Virginia 23502-1944 Phone: (757) 855-6006 Fax: (757) 855-8224</p> <p style="text-align: right;">LBL-0044</p> </div>

#### 4.1.4.2 Purification System Data Plate

Refer to the compressor unit purification system data plate (Figure 4-3) on the compressor front to determine your purification system model and specifications.

#### 4.1.4.3 Cartridge Installation Data Plate

The function performed by each chamber in the purification system is determined by the type of cartridge installed in that chamber. Refer to the cartridge installation data plate on the chamber to determine the purpose and part number of the cartridge installed in that chamber. (Figure 4-3).

### 4.1.5 Purification System Configurations

Purification System	Number and Type of Cartridges			Processing Capacity cubic ft (ft) <sup>3</sup>
	Dryer	Purification	Securus®	
P0	Combined			3,200
P1	...	1	...	15,000
P2	...	1	...	40,000
P2 with Securus®	...	...	1	67,000
P4	1	1	...	60,000
P5	1	1	...	90,000
P5 with Securus®	1	...	1	150,000
P10	2	1		140,000
P10 with Securus®	2	...	1	230,000
P12 <sup>a</sup>	1	1		420,000
P14 <sup>a</sup>	2	1		650,000
P31	Combined			11,760
P41	...	1		28,700
P41 with Securus®	...	...	1	47,000
P42	1	1	...	64,000
P42 with Securus®	1	...	1	107,000
P43	2	1	...	100,000
P43 with Securus®	2	...	1	164,000
P81	1	1		124,000
P81 with Securus®	1	...	1	198,000

a. P12 and P14 have the Securus® Electronic Moisture Monitor System as standard equipment.

#### 4.1.6 Industrial Purification System Configurations

Purification System	Number and Type of Cartridges			Processing Capacity cubic ft (ft) <sup>See Chapter 43</sup>
	Dryer	Purification	Securus®	
P0	Combined			3,200
P1	...	1	...	15,000
P2	...	1	...	40,000
IP2 with Securus®	...	...	1	67,000
P4	1	1	...	60,000
P5	1	1	...	90,000
IP5 with Securus®	1	...	1	150,000
P10	2	1		140,000
IP10 with Securus®	2	...	1	230,000
P31	Combined			11,760
IP41 with Securus®	...	...	1	47,000
IP42 with Securus®	1	...	1	107,000
IP43 with Securus®	2	...	1	164,000

#### 4.1.7 Cartridge Operating Life

**NOTICE**

Cartridge life is dependent on temperature and humidity variables. Heat and humidity lessen the cartridge life, requiring more frequent replacements.

Every Bauer purification system is designed to process a certain volume of air/gas before the cartridges require replacement. By using special test equipment that measures the quality of air/gas at the outlet any quality reduction may be detected. However as most compressor owners do not have this test equipment the recommended method of determining cartridge operating life is to maintain a written record of the volume of air/gas processed by the purification system.

Each Bauer compressor block is rated to produce a standard volume of air per minute and by using this number and the air processing capability of the purification system it is possible to calculate the maximum operating hours before the cartridges need to be replaced. See Paragraph 4.1.7.1 for the method of determining this figure.

The ambient air temperature and its ability to cool the compressor will effect the operating life of the cartridge. See Paragraph 4.1.7.2 for the method of calculating this adjustment factor.

The optimum place to measure the temperature is at the inlet to the final separator as this best reflects the temperature of the air as it enters the chambers. Experience has shown that this temperature is approximately 18 °F (10 °C) above the ambient temperature. Therefore for the purpose of calculating cartridge operating life use the Ambient air Temperature plus 18 °F.

A form titled air Purification Cartridge Operating Hours is found in Paragraph 4.1.8.1 and in the Appendices. It is used for recording the ambient temperature, operating time and adjustment factor. It is suggested that it be copied, placed in a protective folder and kept with the unit to record the adjusted operating hours. An example of how this form is used is shown in Figure 4-5.

#### 4.1.7.1 Calculating the Maximum Cartridge Operating Hours

1. From the purification system data plate (See Figure 4-3) on the purification chamber determine the air Processed (cu.ft.)
2. From the paragraph titled Compressor Specifications in the instruction manual for your compressor unit determine the Charging Rate in SCFM of your compressor.
3. Divide the air Processed by the Charging Rate to obtain the Maximum Operating Time in minutes
4. Divide the Maximum Operating Time in minutes by 60 to obtain the Maximum Operating Hours.
5. Record the answer on the air Purification Cartridge Operating Hours form.

#### 4.1.7.2 Calculating the Adjusted Cartridge Operating Hours

1. Using the air Purification Cartridge Operating Hours form record the Date, Operating Hours and Ambient air Temperature plus 18 °F.
2. Using either the graph or the chart in Figure 4-4 determine the Correction Factor.
3. Divide the Operating Hours by the Correction Factor and record it under the column labeled Today.
4. Add the hours recorded in Today to the previous Total and record it as the current Total.
5. When the Total approaches the Maximum Operating Hours replace the Cartridges.

#### 4.1.8 Chambers

If consistent evidence shows that the maximum admissible number of load cycles has not yet been reached after five (5) years, BAUER Compressors recommends a visual inspection of the inner and outer sides of the pressure vessel.


If consistent evidence shows the maximum admissible number of load cycles has not yet been reached after ten (10) years A hydrostatic pressure test shall be executed. If the test is passed the chamber can be placed back in use for five (5) years. At the maximum number of load cycles or at fifteen (15) years the chambers must be replaced.



### WARNING

All aluminum purification chambers, separators, check valves and pressure maintaining valves must be replaced after 15 years of use.

**Figure 4-4** Correction Factor for Cartridge Operating Hours

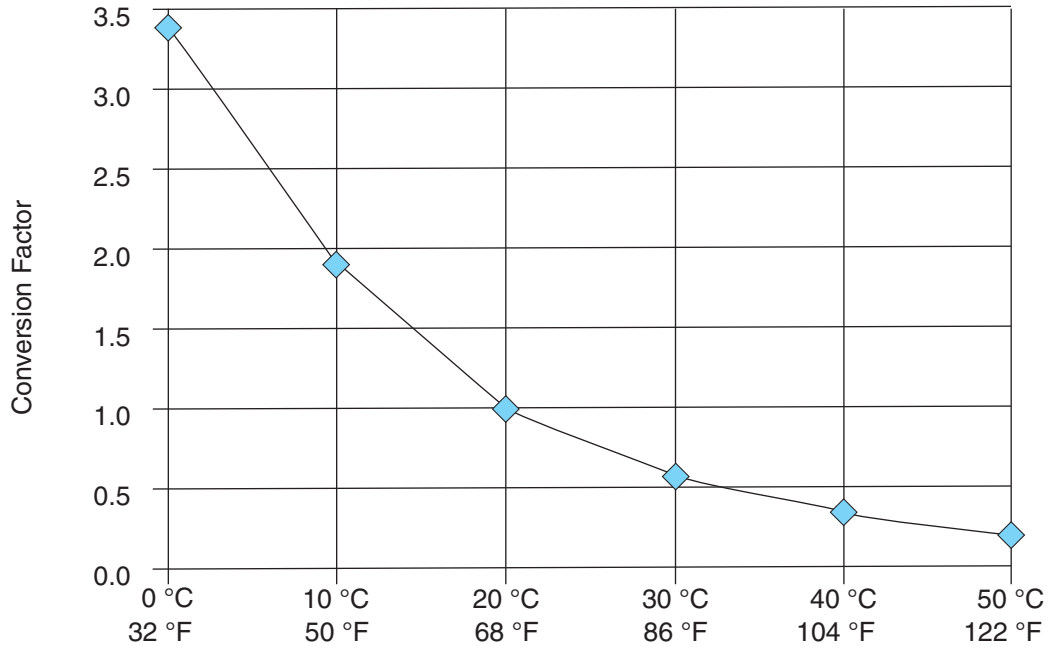

°C [(°F - 32) x 5/9]	°F [°C x 9/5 + 32]	Correction Factor
50	122	0.21
40	104	0.34
30	86	0.58
20	68	1.00
10	50	1.81
0	32	3.44

**Figure 4-5** Example Record of Adjusted Operating Hours

Date	Operating Hours	Ambient Temp. during Compression +18 °F	Correction Factor	Adjusted Cartridge Hours	
				Today	Total
10/19/04	8	92°F (33 °C)	0.5	16.00 $\left( \frac{\text{Op hrs}}{\text{Corr. factor}} \right)$	16.00
11/01/04	4	45°F (7.2 °C)	2.25	1.78	$\left( \frac{\text{Total hrs}}{\text{+Today hrs}} \right)$ 17.78



**4.2 1P5S Securus II® Purification System**

**4.2.1 P5S Securus II® Purification System Major Components**

The P5S Securus II® Purification System major components are an Oil and Water Separator, a Dryer Chamber and a Securus II® Purification Chamber. Figure 4-6 shows the functional interconnection of all the components.

**Figure 4-6** P5S Securus II® Purification System




1. Oil and Water Separator	5. Securus® Transmitter	8. Pressure Maintaining Valve
2. Condensate Drain	6. Securus® Chamber	9. Check Valves
3. Safety Valve	7. Pressure Sensor	10. Bleed Valve
4. Dryer Chamber		11. Pressure Gauges

### 4.3 Component Description

#### 4.3.1 Oil and Water Separator

	<h2 style="margin: 0;">WARNING</h2>
<p>The rapid de-pressurizing and re-pressurizing of the oil and water separator during condensate draining subjects it to metallurgical stresses. To prevent catastrophic failure with the possibility of damage, injury or death the oil and water separator (P/N 079416) must be replaced after a predetermined number of cycles.</p> <p>One load cycle equals one pressurization plus one de-pressurization.</p> <p>Units operating between 3,000 and 5,000 psi = 130,000 load cycles (32,500 hours of operation)</p> <p>Units operating between 5,000 and 6,000 psi = 55,000 load cycles (13,750 hours of operation)</p> <p>The Bauer recommended frequency of condensate draining is every fifteen minutes and is a balance between maximizing the life of the separator chamber and maintaining the quality of the delivered air.</p>	

The air leaving the final stage is cooled in the aftercooler to approximately 20 - 25 °F (10 -15 °C) above ambient temperature and then enters the oil and water separator. The oil and water separator works by means of a sintered metal filter which separates liquid oil and water particles from the compressed air.

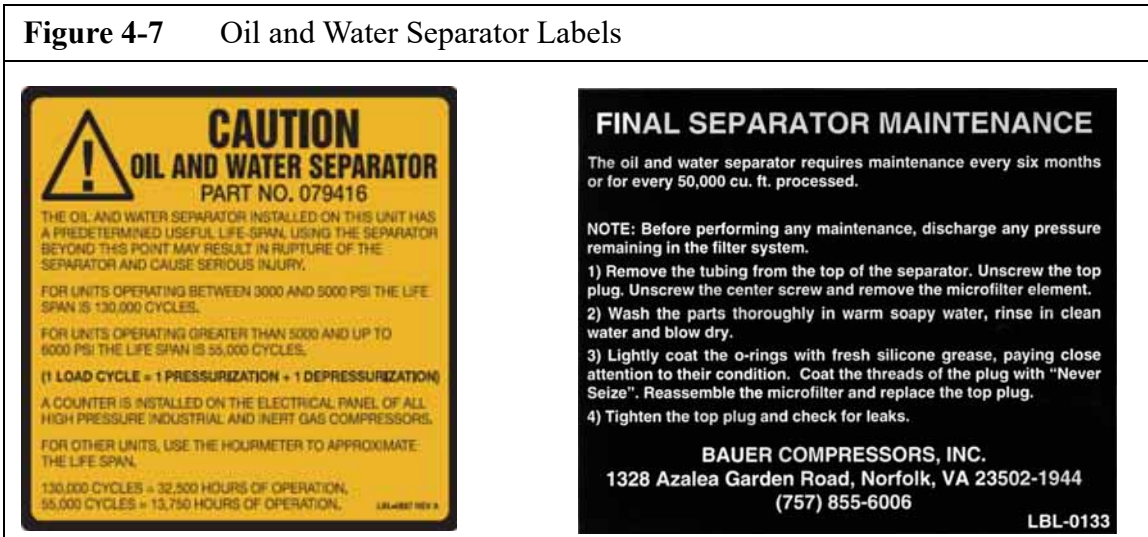

#### 4.3.2 Chamber

Each chamber is made up of an anodized aluminum housing and a filtering cartridge. There are two general types of filtering cartridges, drying or purifying. The cartridge type is determined by the ingredients packed in the cartridge. The chamber is named after the type of cartridge it contains, i.e. dryer chamber or purification chamber.

#### 4.3.3 Cartridge

##### 4.3.3.1 Cartridge Construction

The cartridge casing, top and bottom are aluminum and are packed with one or more of the following.

1. A catalyst to convert carbon monoxide to carbon dioxide.

2. Activated carbon which absorbs oil vapors effecting taste and odor.
3. Molecular sieve to absorb oil and water.

#### 4.3.3.2 Cartridge Handling

1. Never open the protective packaging a cartridge comes in prior to its actual use. The highly sensitive filter materials will absorb moisture from the atmosphere becoming saturated and useless.
2. Used cartridges must be disposed of in accordance with local regulations.

#### 4.3.4 Condensate Drain Valve

A manually operated valve used for maintenance and before start-up to drain the condensed liquids from the coalescing oil and water separator.

#### 4.3.5 Check Valves

Valves allowing compressed air to flow in only one direction. One is used to maintain pressure in the chamber when the compressor is not operating. The other check valve prevents back-flow from filled storage cylinders or tanks.

#### 4.3.6 Bleed Valve

A manually operated valve used to release the pressure in the chamber before maintenance.

#### 4.3.7 Pressure Maintaining Valve

The pressure maintaining valve ensures that pressure is built up in the system from the start of delivery, thus achieving constant optimum purification. It also assures proper working conditions for the final stage of compression.

#### 4.3.8 Safety Valve

The safety valve is located on the coalescing oil and water separator and acts as the safety valve for the final stage of the compressor.

#### 4.3.9 Securus II® Electronic Moisture Monitor System

The Securus II® Electronic Moisture Monitor System warns the operator in advance of expiration of the life of the cartridges. The Securus II® Transmitter receives signals concerning the condition of the drying agent inside the Securus® cartridge from the attached sensors and supplies the appropriate control signals whenever the preset threshold values have been reached.

##### 4.3.9.1 Securus® Cartridge

The Securus® Cartridge is packed with a catalyst which converts carbon monoxide to carbon dioxide, activated carbon which absorbs oil vapors, molecular sieve which absorbs oil and water and the sensor components of the Securus II® Electronic Moisture Monitor System.

##### 4.3.9.2 Securus II® Transmitter

The Securus II® Transmitter relays the operating condition of the Securus II® Electronic Moisture Monitor System to the operator control interface. The Securus II® issues a warning when the Securus® cartridge is approaching saturation, to warn the user to prepare to change the Securus® cartridge. Once the Securus® cartridge has reached total saturation the Securus II® monitor will issue an alarm condition to the operator interface and shut down the unit. Once the Securus® cartridge is replaced the compressor unit can be restarted.




## 4.4 Maintenance

### 4.4.1 Oil and Water Separator

To remove the sintered metal filter proceed as follows: (See Figure 4-8). Disconnect the power and shut off the inlet supply line if applicable.

1. De-pressurize the system by means of the bleed valve.
2. Remove the tubes connected to the side of the filter head (1).
3. Unscrew and remove the filter head.
4. Unscrew the sintered metal filter (2) from the filter head.
5. Remove the center screw (3) to remove the sintered metal filter.
6. Clean the sintered metal filter using hot soapy water. Blow dry with compressed air.
7. After cleaning the element, record the number of operating hours to ensure exact attention to the maintenance intervals.
8. Lubricate the threads and O-rings as well as the threaded part of the sintered metal filter with petroleum jelly. Apply sparingly.
9. Dry the inside of the filter housing with a clean cloth and check for corrosion before reinstalling the sintered metal filter.
10. In the event you discover corrosion, replace the corroded parts with new Bauer parts.
11. Reinstall the sintered metal filter assembly and filter head.
12. Replace all removed tubes, close all valves and check for leaks

**Figure 4-8** Oil and Water Separator

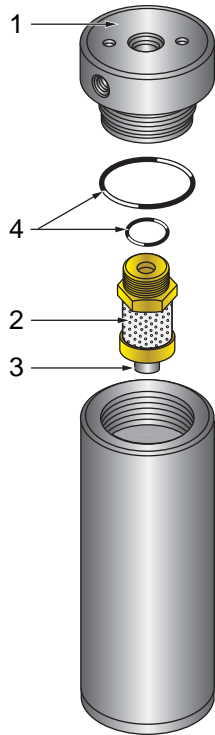


- |                          |                 |
|--------------------------|-----------------|
| 1. Filter Head           | 3. Center Screw |
| 2. Sintered Metal Filter | 4. O -rings     |

**Figure 4-9** Sintered Metal Filter Assembly



- |                    |                 |
|--------------------|-----------------|
| 1. Threaded Insert | 4. Outer Filter |
| 2. Filter Bottom   | 5. Filter Head  |
| 3. Inner Filter    |                 |

4.4.1.1 Removal of the Securus II® Transmitter.

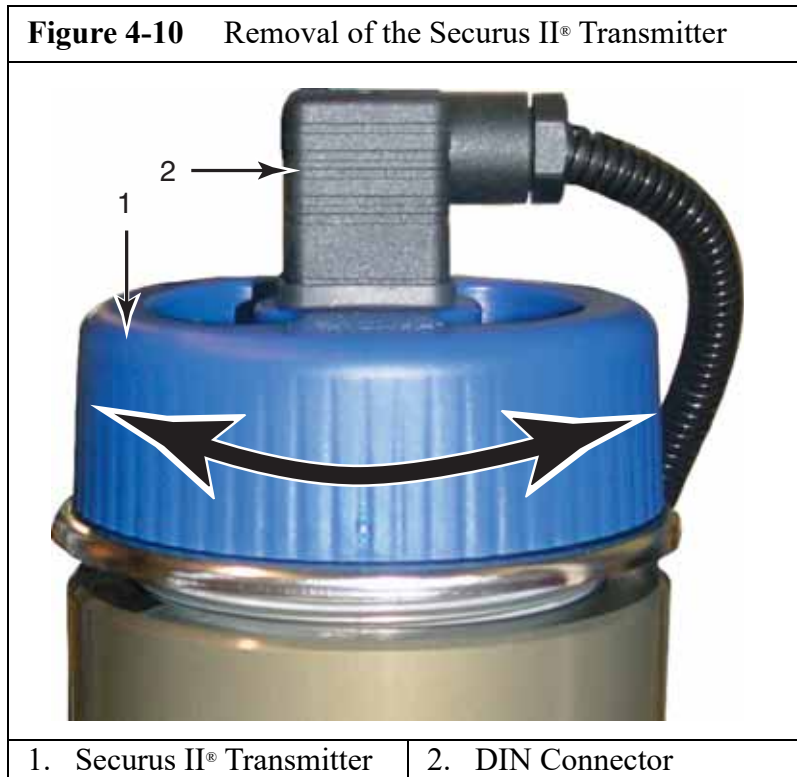


The Securus II® Transmitter is removed and replaced by rotating the blue plastic Securus II® Transmitter approximately ½ turn. It is not necessary to disconnect or remove the DIN Connector.

**NOTICE**

If the DIN Connector is removed, ensure that it is replaced in exactly the same position, otherwise electrical damage to the unit may occur.

4.4.2 Cartridge Replacement

To change the purification cartridge, proceed as follows. (See Figure 4-11)

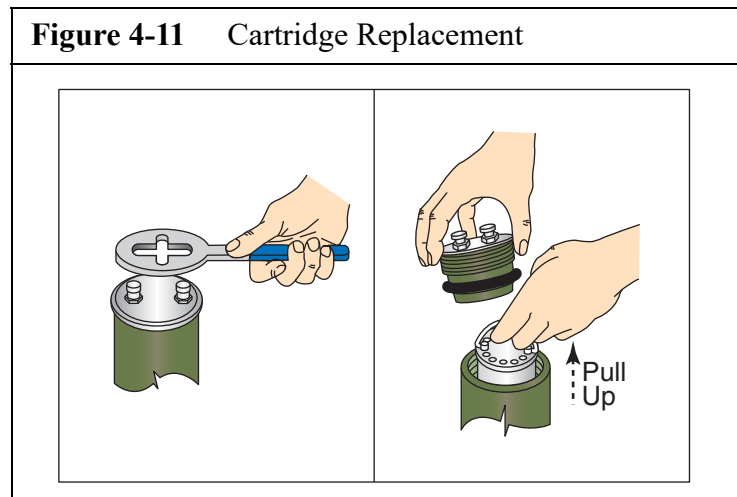

1. Disconnect the power and shut off the inlet supply line, if applicable.
2. De-pressurize the system by means of the bleed valve.
3. If the chamber is part of the Securus II® Moisture Monitor System, remove the Securus II® Transmitter. See Paragraph 4.4.1.1.
4. Unscrew the chamber head using the special wrench supplied.
5. Pull out the cartridge using the lifting ring on top of the cartridge.
6. Dry the inside of the chamber with a clean cloth and check for corrosion.
7. Replace all corroded parts with new Bauer parts.
8. Remove the shipping covering and the protective cap from the bottom of the cartridge.
9. Lubricate the O-rings with white petroleum jelly. Apply sparingly.
10. Install the new cartridge. Be sure the cartridge snaps into place.
11. Reinstall the chamber head.
12. Close the bleed valve, restore the power and reconnect the inlet supply line, if applicable.

#### 4.4.2.1 Leaking at the Safety Bore

1. Remove the cartridge following the steps in Paragraph 4.4.2.

### NOTICE

If air is detected bleeding out from the bottom of the chamber, the cartridge has not been installed properly or is missing. Follow the instructions in Paragraph 4.4.2.1

2. Install cartridge if missing.
3. Remove cartridge and inspect O-rings.
4. Replace O-rings if necessary.
5. Ensure protective caps and devices have all been removed.
6. Replace cartridge following steps 8. to 11. in Paragraph 4.4.2


4.5 Replacement Parts List

Figure 4-12 P5 Purification System Parts List




Item	Qty	Part No.	Description	Notes
1	1	079416	Oil and Water Separator	See Figure 4-13
2	—	—	—	
3	1	VAL-0169	Safety Valve	
4	1	080144	27" Dryer Chamber	See Figure 4-14
5	1	MNR-0042	Securus II® Transmitter	24 VDC
6	1	080145	Securus® Chamber	See Figure 4-15
7	1	SEN-XXXX	Pressure Sensor	Requested Final Pressure determines P/N
8	1	VAL-0053	Pressure Maintaining Valve	
9	2	VAL-0590	Check Valves	
10	1	VAL-0377	Bleed Valve	
11	2	GAG-0009	Pressure Gauge, 0 - 7,500 psi	1 gauge stock, 2nd is optional

**Figure 4-13** Oil and Water Separator Parts List

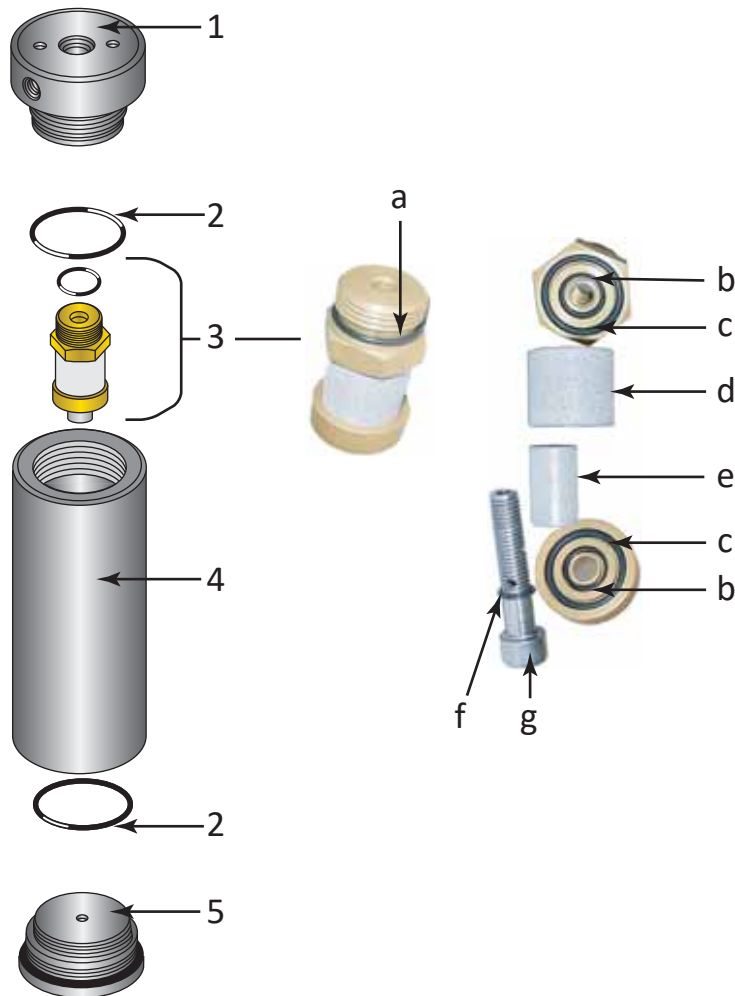


Item	Qty	Part No.	Description	Notes
◆	1	079416	Oil and Water Separator Assembly	
1	†	...	Separator Head	Available only with 079416
2	2	N04586	O-Ring	
3	1	061860	Sintered Metal Filter	
3a	1	N15133	O-Ring	
3b	2	N04496	O-Ring, small	
3c	2	N04385	O-Ring, large	
3d	1	061858	Sleeve Element, large	
3e	1	061859	Sleeve Element, small	
3f	1	N07091	O-Ring	
3g	1	061857	Screw	
4	†	...	Separator Housing	Available only with 079416
5	†	...	Bottom Plug	Available only with 079416

**Figure 4-14** 27” Chamber Assembly Parts List

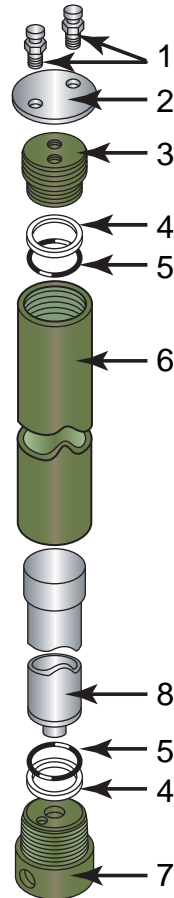

Item	Qty	Part No.	Description	Notes
◆	2	80144	Chamber Assembly	27”
1	2	012293	Tool Post Screw	
2	1	061237	Cover Plate	
3	†	...	Filter Head	Available only with 80144
4	2	N04736	Back-up Ring	
5	2	N04735	O-ring	
6	†	...	Filter Housing	Available only with 80144
7	†	...	Filter Bottom	Available only with 80144
8	1	058825	Dryer Cartridge	MS

**Figure 4-15** Securus II® Electronic Moisture Monitor System Parts List

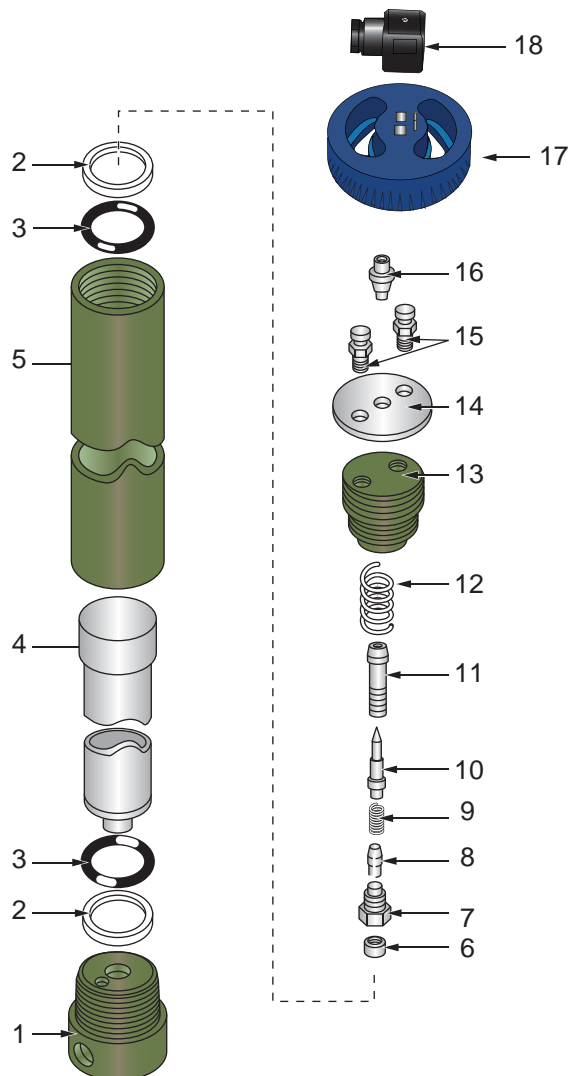

Item	Qty	Part No.	Description	Notes
◆	1	80145	Securus® Chamber Assembly	Replaces 1 P/N 80144 in P5S
1	†	...	Bottom Plug	Available only with 80145
2	2	N04736	Backup Ring	
3	2	N04735	O-ring	
4	1	060037	Securus® Cartridge	
5	†	...	Filter Body	Available only with 80145
6	1	059855	Nut	
7	1	059852	Drawback Screw	
8	1	059854	Loose Pin	
9	1	060062	Compression Spring	
10	1	059853	Fixed Pin	

**Figure 4-15 (cont.)**


## Securus II® Electronic Moisture Monitor System Parts List

<b>Item</b>	<b>Qty</b>	<b>Part No.</b>	<b>Description</b>	<b>Notes</b>
11	1	059851	Bolt	
12	1	002181	Compression Spring	
13	†	...	Filter Head	Available only with 80145
14	1	060135	Cover Plate	
15	2	012293	Tool Post Screw	
16	1	059850	Socket, RF type	
17	1	MNR-0042	Securus II® Transmitter	24 VDC
18	1	CON-0319	Securus II® Connector	

**CHAPTER 5: COMPRESSOR DRIVE; UNICUS 4I**

**5.1 Vertical Compressor Drive**

The compressor is driven by the drive motor through a V-belt. The direction of rotation, as seen facing the flywheel, is counterclockwise. Observe the arrow on the compressor block. Check the V-belt regularly for damage and wear. See Paragraph 5.2.2. Replace if necessary.

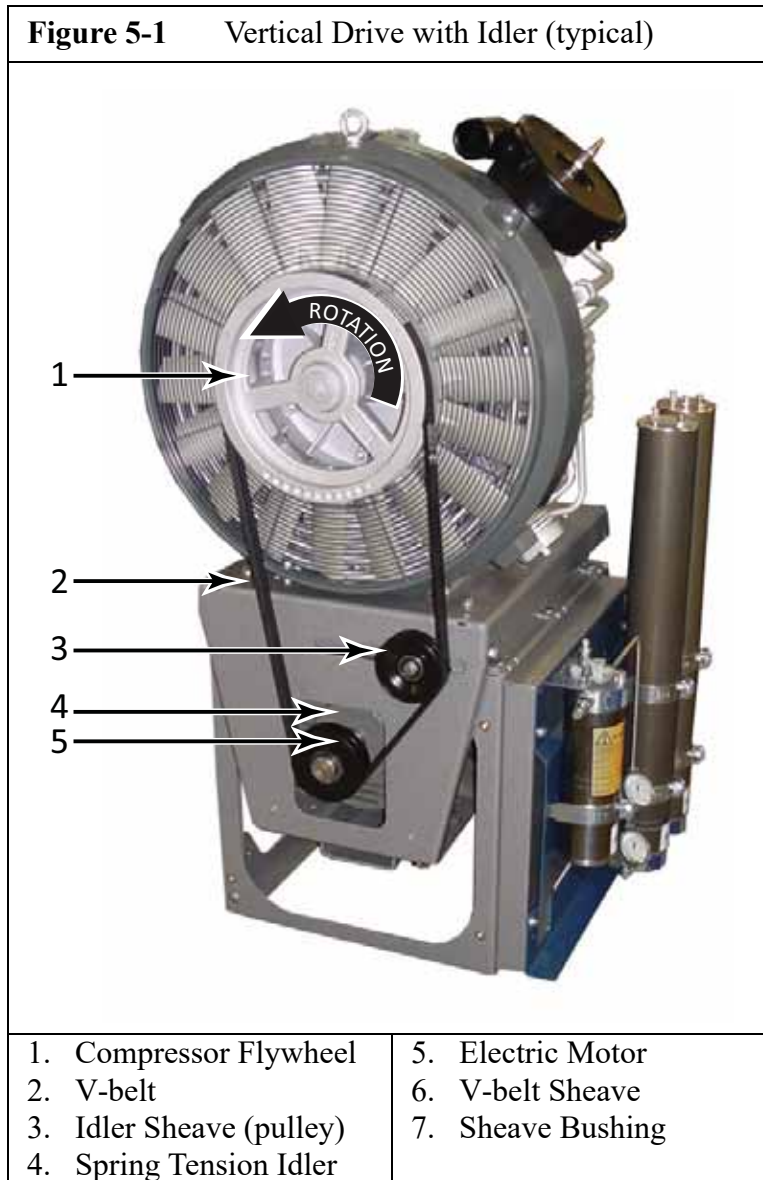



**5.2 Maintenance of the V-belt and Sheaves**

**5.2.1 Check The Sheaves.**

Before a new set of drive belts are installed, the condition of the sheaves should be checked. Dirty or rusty sheaves impair the drive’s efficiency and abrade the cover of the belts, which results in premature failure. Worn sheaves shorten belt life as much as 50%. If the grooves are worn to the point where the belt bottoms, slippage may result and the belts may burn. If the side walls are “dished out,” the bottom shoulder ruins the belt prematurely by wearing off the bottom corners.

**5.2.2 Check the V-belt**

Check the V-belt regularly for damage and wear. Replace if necessary. To adjust the V-belt tension first loosen the tensioning sheave block using TOO-0120. V-belt tension is adjusted with the tensioning bolt. Once the tension is correct retighten the tensioning sheave block.

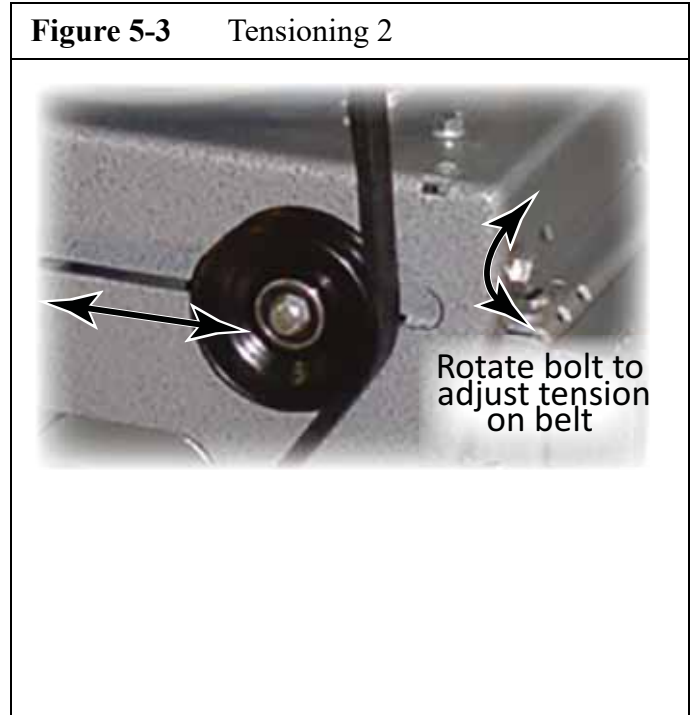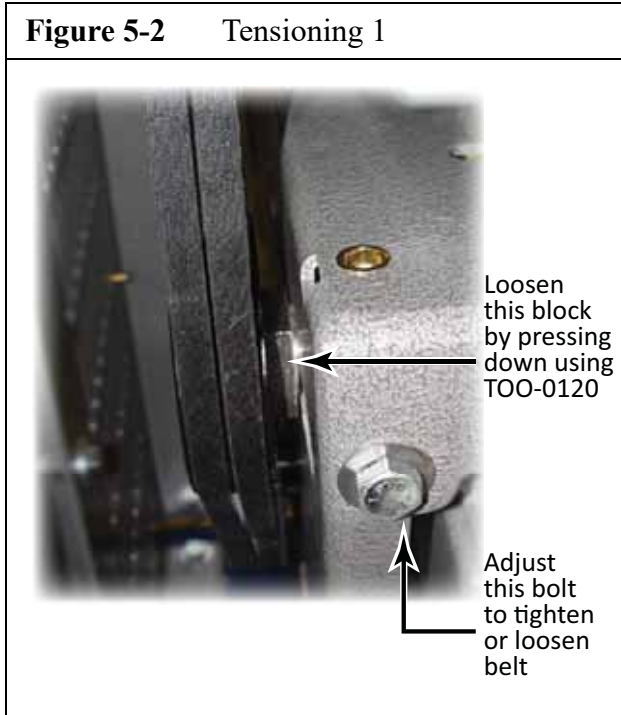

**5.2.3 Replacing the Belt**

To replace the belt use a ratchet or wrench to rotate the tensioning bolt to create slack in the belt. The belt should be slack enough to pull off of the flywheel and motor’s sheave. Replace with the correct replacement belt and tighten the tensioning bolt, making the belt tight.

**NOTICE**


Ensure the belt is tightened enough to maintain friction on the flywheel and sheave.

**5.2.4 Replacing the Sheave**

A gear puller can be used to remove the sheave and sheave bushing from the motor’s drive shaft. Ensure the drive shaft is clean then slide the new sheave onto the drive shaft. Bolt the sheave bushing onto the sheave then tap the feathered key into the key slot. Ensure the feathered key is snug with both the shaft and sheave. There should no play once the key is in place. The feathered key should run the entire length of the bushing and sheave key slots.

5.3 Replacement Part List

Figure 5-4 UNICUS 4i, Vertical Drive with Idler

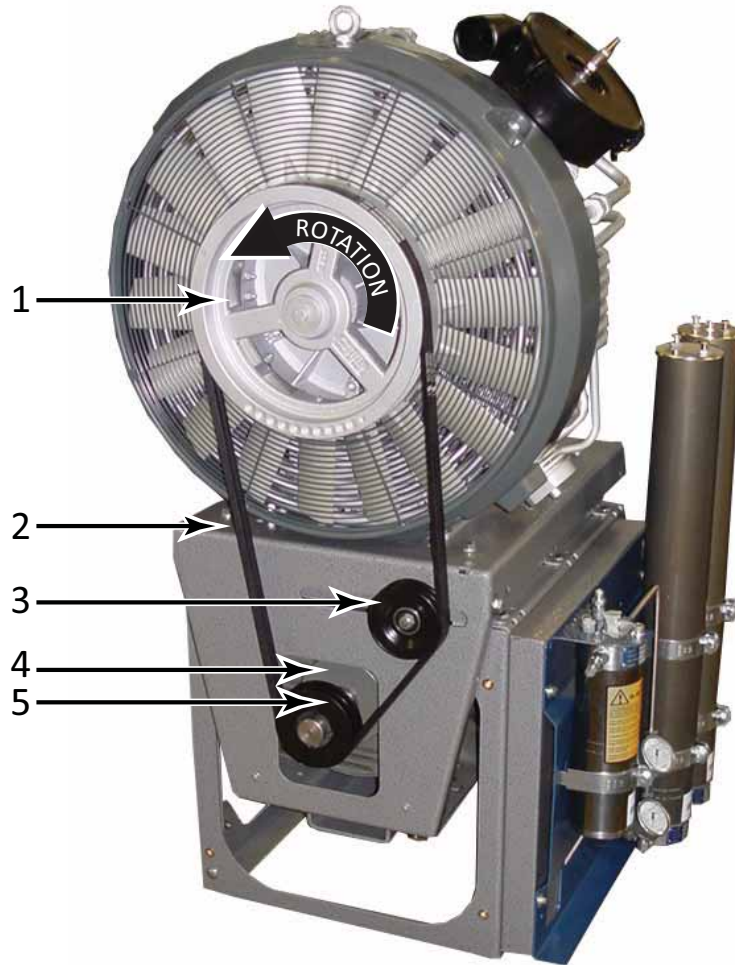

Item	Qty	Part No.	Description	Notes
◆				
1	1	IK 18.1 II	Compressor Block	
2	2	BET-0254	V-belt	
3	1	PLY-0012	Pulley, V-belt	
4	1	MTR-0514	Electric Motor	20 Hp, 3 Phase
5	1	SHE-0359	Sheave	2 groove
with	1	BUS-0191	Sheave Bushing	

## CHAPTER 6: ELECTRICAL PANEL, ASY-1191

### 6.1 Overview

The following instructions apply to units that use Electrical Panel, ASY-1191

**Figure 6-1** ASY-1191



The Electrical Panel provides logical control and safety shutdowns for the compressor equipment. All necessary time delays, counters, shutdowns, sequencing and safety features are incorporated into a proprietary software program permanently saved into PLC memory. The software program used in this Electrical Panel is based on the pressure and use of the compressor.

### 6.2 Electrical Panel

This Electrical Panel is designed for supply voltages from 208 VAC to 460 VAC, single or three phase and 50 Hz or 60 Hz. All supply voltage options are not available with each horsepower rating.

The basic panel components consist of a programmable logic Controller (PLC), Starter, Power Transformer, Fuses, Hour Meter, terminal strips for internal wiring and connectors for attachment to wire harnesses. The panel is built to match the horsepower, voltage, phase and frequency of the customer's requirements.

#### 6.2.1 Wiring Diagram


The wiring diagram for your specific Compressor Unit is stored inside the Electrical Panel. If a wiring diagram for your machine is not found inside the Electrical Panel, then please call Bauer Compressors Product Support Group for a replacement. Please have the serial number of the compressor available; it is written on a label (See Figure 6-2) inside the Electrical Panel door.

#### 6.2.2 Electrical Panel Interior Access

The interior of the Electrical Panel is accessed by using a coin or screwdriver to turn the latch on the front of the Electrical Panel.

### 6.3 AC Power Requirements


The Electrical Panel must be supplied with electricity of the correct voltage, phase, and frequency to ensure proper operation. Wiring and conduit selection must be in accordance with all national, state and local codes. The customer is responsible for providing a means of disconnection from the power source and protection from instantaneous short circuit. The Electrical Panel voltage and phase are displayed on the exterior of the Electrical Panel as well as being written on a label (See Figure 6-2) on the inside of the Electrical Panel door. In this example shown, the panel is wired for 230 volt, single phase, serial number 155210.

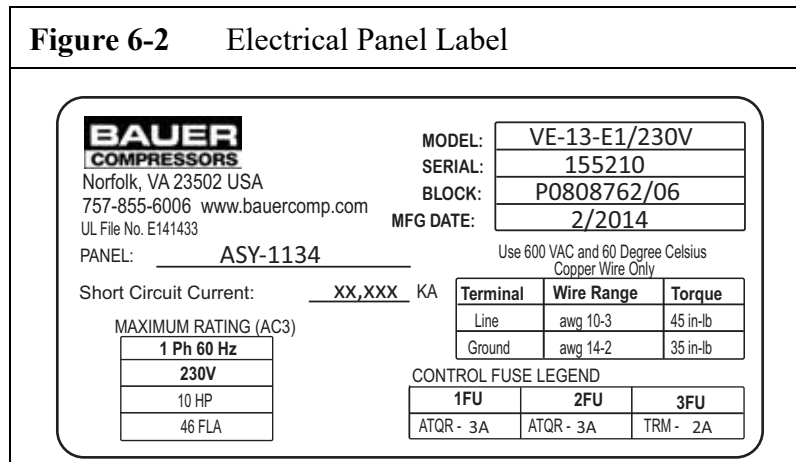


### 6.4 Electrical Panel Components

#### 6.4.1 Programmable Logic Controller (PLC)

The PLC is 24 I/O and 120 VAC. The data stored in RAM is protected for 100 hours, in event of a power loss.

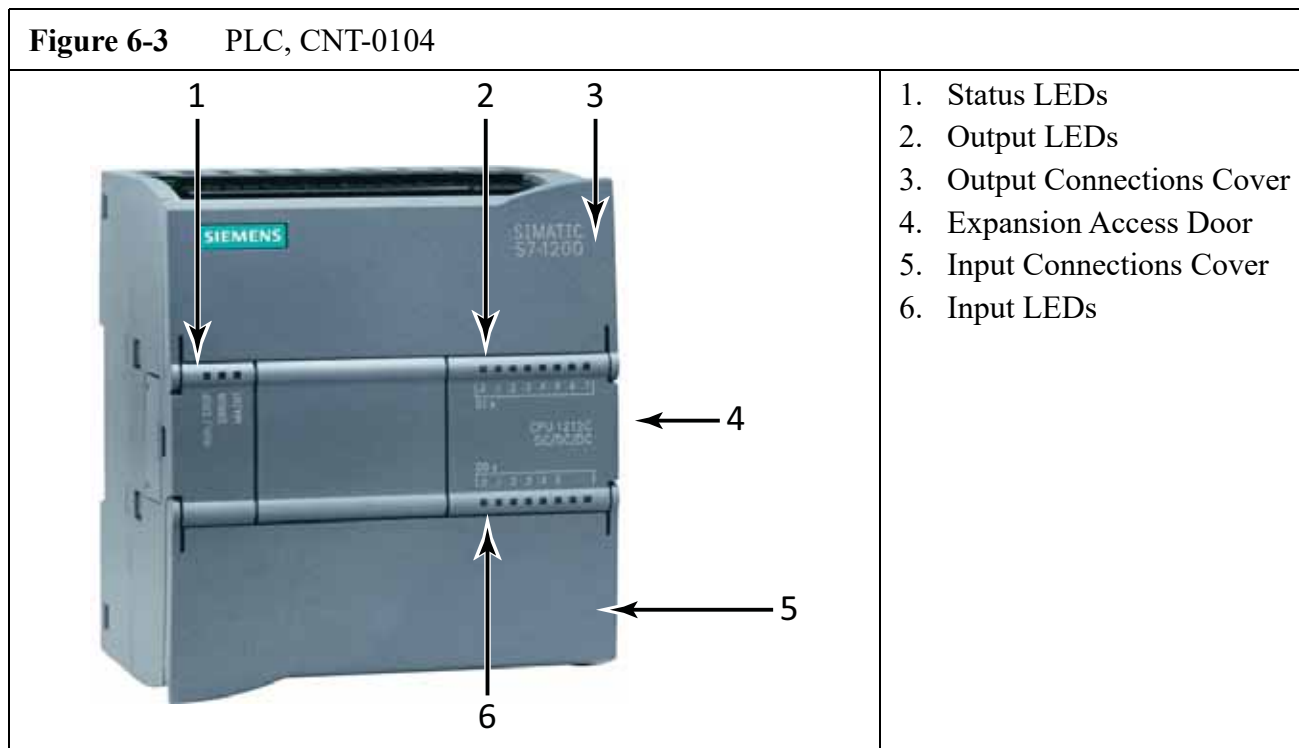

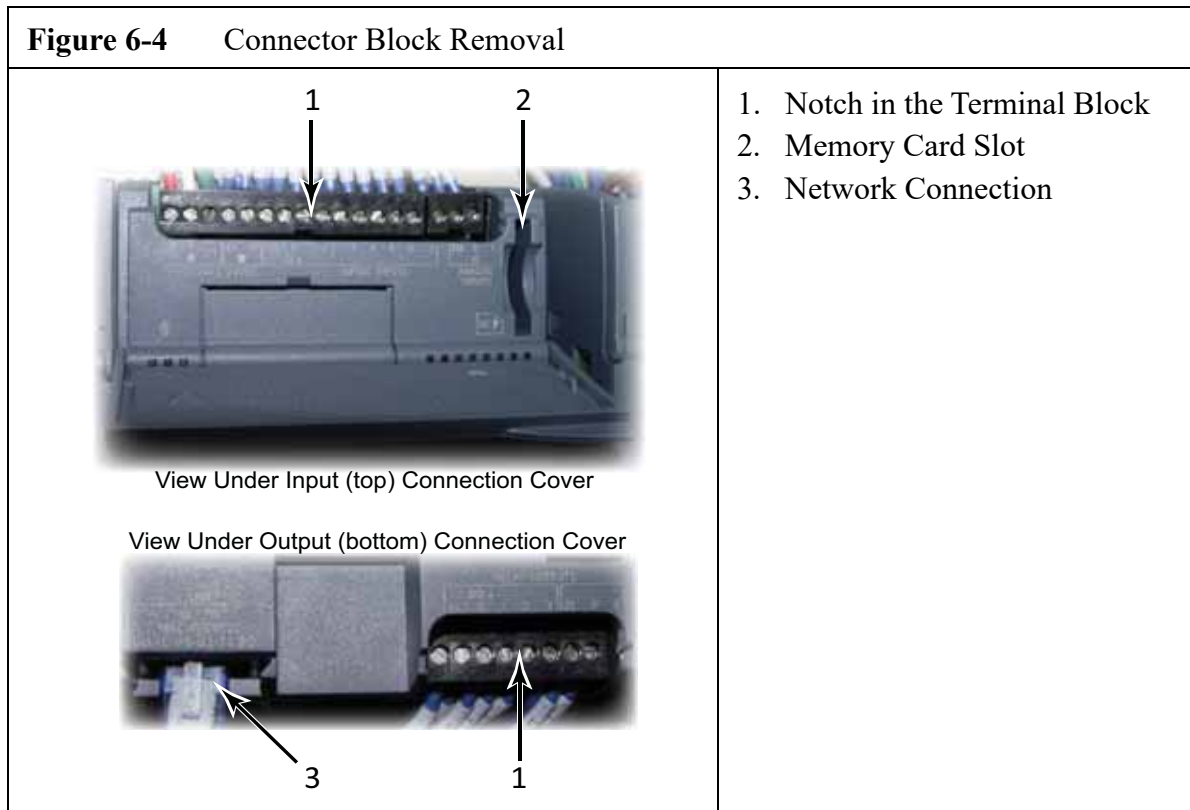

#### 6.4.1.1 Replacing the PLC

Replacing the PLC does not require removal of any wiring as the connections are made with push in Connector Blocks. To replace the PLC proceed as follows.

1. Turn off unit and disconnect from main power supply.
2. Lift the input connections cover. See Figure 6-3.
3. Insert a small flat bladed screwdriver in the notch in the back center of the terminal block. Gently pry the terminal block loose. See Figure 6-4.
4. Repeat Steps 2 and 3 for the to the terminal block on the output side of the PLC.
5. Unclip the PLC from the DIN rail by using a small flat bladed screwdriver to pull the DIN rail clip out until the PLC is free.
6. The terminal blocks are replaced by pushing them gently down onto corresponding pins until they click into place.
7. Restore power and operate the unit.

#### 6.4.1.2 Installing a New Program

The PLC program can be updated in two ways. If a Bauer technician is on-site, they will connect directly to the PLC using a notebook computer. Another method to install a new program is to use an external memory card. The memory card would be programmed at the Bauer factory and shipped either to the customer or to a authorized distributor.

### 6.4.1.3 Installing a Memory Card

To install or replace a memory card proceed as follows:

1. Turn off unit and disconnect from main power supply.
2. The memory card is keyed to fit only one way and requires minimal force to insert it.
3. Push the memory card into the slot until it snaps into place.
4. If the memory card is being retained in the PLC, restore power to the unit and operate as normal.
5. If the memory card is for a software update and is to be returned to Bauer or a distributor continue as follows.
6. Restore power to the unit.
7. After the software has initialized and the run screen is displayed, shutdown the unit and disconnect from the main power source.
8. Restore power to the unit again. After the software has initialized a second time and the run screen is displayed, shutdown the unit and disconnect from the main power source.
9. Remove the memory card and close the protective cover.
10. Restore power and operate the unit.

### 6.4.2 Hour Meter

The panel is equipped with an hour meter. The hour meter is not resettable and used to monitor the run hours of the compressor. .

**Figure 6-5** Hour Meter



### 6.4.3 Motor Starter.

See Figure 6-6. the XTC Contactor features a mechanically linked contacts. Auxiliary contacts are cross-stamped, which provide multi-point reliability in low current, low voltage applications.

#### 6.4.4 Overload Relay

See Figure 6-7. The overload relay provides thermal overload protection and its size will be based on the voltage and motor horsepower. The dial is set to the Full Load Amperage (FLA) of the electric motor at the factory. If the Overload Relay is replaced set the dial to the FLA listed on the motor nameplate or the label inside the Electrical Panel. The Overload Relay plugs into the Motor Starter.

**Figure 6-6** Motor Starter (typical)



**Figure 6-7** Overload Relay (typical)



#### 6.4.5 Power Supply

The Power Supply is a 24 Volt, 10 Amp Power Supply used to provide power to the communications modules and operator interface, SPL-0088..

**Figure 6-8** Power Supply



**6.5 Alarms**

The following paragraphs describe the warning and alarm conditions that are monitored and controlled by the Electrical Panel.

**6.5.1 Final Separator Warning**

The high pressure-breathing compressor is equipped with a final separator. This is a stainless steel vessel, approximately 3¾ inch diameter, located on the purification panel. To prevent fatigue failure of this vessel, the PLC program monitors the pressurization and de-pressurization cycles of this separator and will first issue a Warning, and then later an Alarm function.

The program is set up for a 90% warning and a 100% shutdown alarm for this counter feature. The program would be configured to reflect the following values when it is built.

<b>Table 6-1: Final Separator Warning and Shutdown Cycle Count</b>		
<b>Maximum Compressor Pressure</b>	<b>Warning</b>	<b>Shutdown</b>
5,000 psi	117,000 cycles	130,000 cycles
6,000 psi	49,500 cycles	55,000 cycles


When the warning is displayed, the unit will still continue to function properly, but will prompt the operator to contact Bauer Compressors to make arrangements to replace the separator. When the Alarm level has been achieved, the compressor will no longer function, and will require the replacement of the separator. When this is accomplished, the unit can be reactivated by making adjustments to the PLC software. Please contact Bauer Product Support for detailed instructions.

**WARNING**

Do not attempt to override this Separator Shutdown. This feature is provided to protect operating personnel from injury or death.

**6.5.2 Compressor High Temperature**

See Figure 6-9. The compressor high temperature switch is mounted on the high pressure compressor block, on the third, fourth or fifth stage head, depending on model. Under normal operating conditions, the switch is closed. On a high temperature condition, the compressor will shutdown and the alarm will be displayed on the Operator Interface.

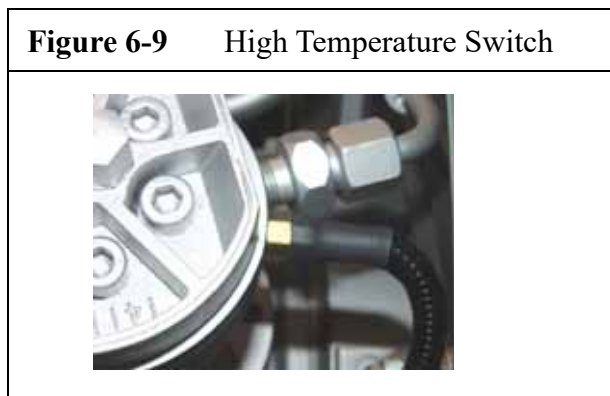


---

### 6.5.3 Compressor Low Oil Pressure

See Figure 6-10. The compressor Oil Pressure Sensor is located on the back of the compressor block, mounted with the oil pressure gauge. During start-up of the compressor, the oil pressure sensor is bypassed for a time period set in the program by **OIL PRESS TD** parameter. This allows the oil pressure to stabilize at operating pressure before the an alarm is sensed. After this initial time period, should the compressor lose oil pressure, the Oil Pressure Sensor will cause the alarm to be displayed on the Operator Interface.

6.6 Replacement Parts List

Figure 6-11 Electrical Panel, Interior

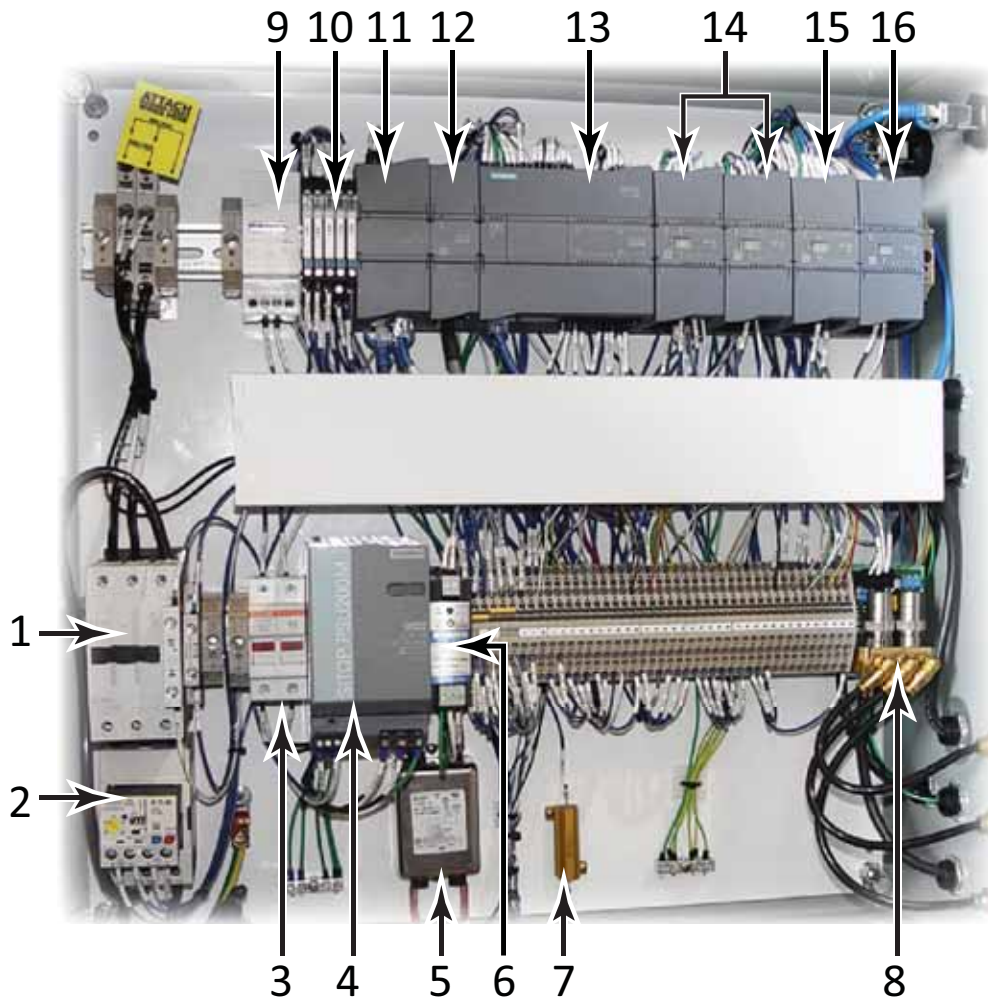

Item	Qty	Part No.	Description	Notes
◆	1	ASY-1191	Electrical Panel	Interior View
1	1	SRT-0317	Starter	65 Amps
2	1	RLY-0244	Overload Relay, Adjustable	32 - 65 Amp
3	1	HOL-0081	Fuse Holder, 2 Pole	30 Amp, 600 Volt
with	2	FUS-0166	Fuse, Time Delay	Class CC, 6 Amp
4	1	SPL-0088	Power Supply	10 amp, 24 VDC
5	1	FLR-0213	Line Noise Filter	AC
6	1	SPL-0108	DC to DC Converter	18 - 75 amp, 12 VDC to 24 VDC
7	1	SUR-0017	Surge Protector	50 W, 200 ohm
8	1	VAL-0365	Proportional Valve	mm1
9	1	HMR-0042	Hour Meter	10 - 27 VDC
10	5	RLY-0218	RV8H Series 6mm Interface	6 Amp, 24 VDC

**Figure 6-11 (cont.)**

Electrical Panel, Interior

<b>Item</b>	<b>Qty</b>	<b>Part No.</b>	<b>Description</b>	<b>Notes</b>
11	1	CNT-0102	Ethernet Switch	
12	1	CNT-0124	Communications Module	
13	1	CNT-0104	Siemens, CPU S7-1200	DC/DC/RLY, 1214C
14	2	CNT-0111	Analog Expansion Module	8 channel IN
15	1	CNT-0134	Digital Output Module	
16	1	CNT-0132	Analog Expansion Module	4 channel OUT

**CHAPTER 7: RFID OPTION****7.1 Description**

The UNICUS 4i may be supplied with the Radio Frequency Identification (RFID) option. The RFID option allows the user to affix RFID tags to the cylinders to be filled using the Unicus 4i. The RFID tag is imprinted with a serial number and a record is maintained each time the bottle is filled. The RFID tag maintains a database of when the bottle was filled, by which badge number, and to what pressure. .

**NOTICE**


Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate this equipment.

This product meets the applicable FCC Part 15 rules. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

To limit RF exposure, please ensure 4 inches (10 cm) of separation from the transmitter antennas at all times.

**7.2 Components**

The RFID system consists of; the RFID tags (on each cylinder), an antenna for each filling position, a proximity switch, 3 signal filters, and a RFID Reader.

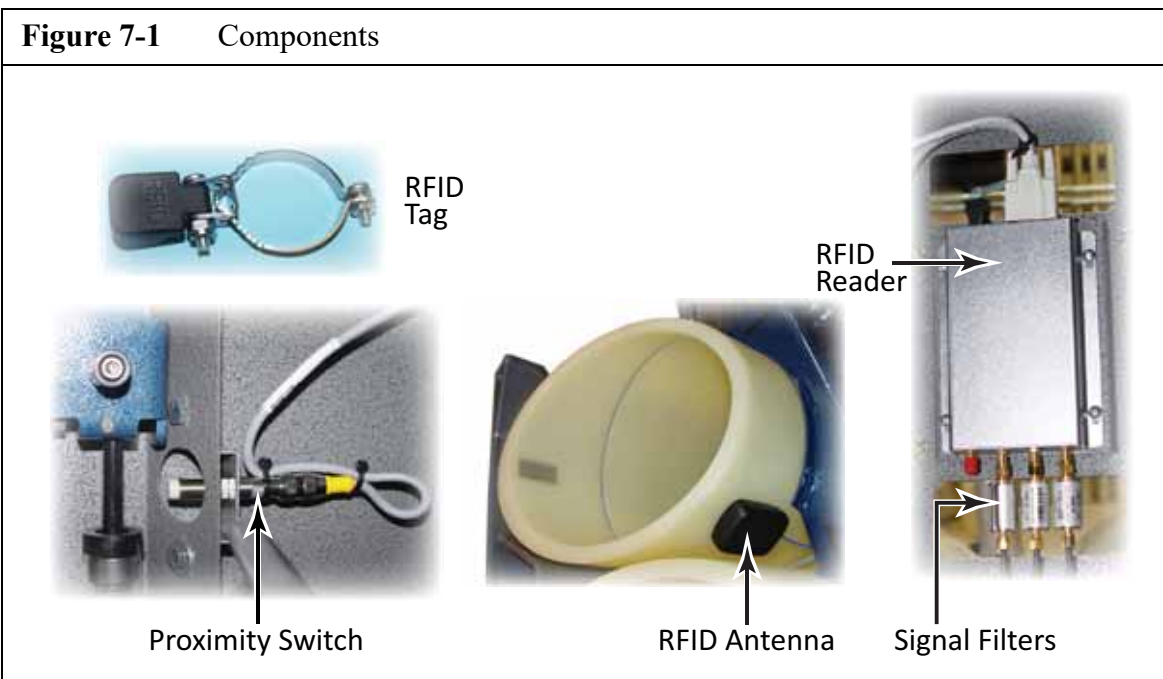


## 7.3 Functions

### 7.3.1 Assigning the Cylinder

Attach the RFID tags securely to each cylinder. Additional tags can be ordered in lots of 25. Place a cylinder with the RFID tag attached into the first position in the CFS. Someone with administrator privileges must log into the touch screen program (see operations instructions chapter). Once the administrator has logged in they need to press the CYLINDERS button on the main menu page. On the Cylinders screen press the ADD NEW button (See Figure 7-2). On the add new cylinder screen The administrator needs to enter the SCBA Serial number, the serial number they want to assign to the RFID tag, and the maximum pressure set point of the cylinder. The Initial Date, Next Hydro Date, and Expire Date will self fill with the present date. To change the date press the icon to the right of the box and enter the correct date. STATUS can be left as Active or changed to Expired by use of the drop down box. Press the check mark when all entries are completed. The above steps must be completed for each cylinder and RFID tag.

**Figure 7-2** Add New Cylinder

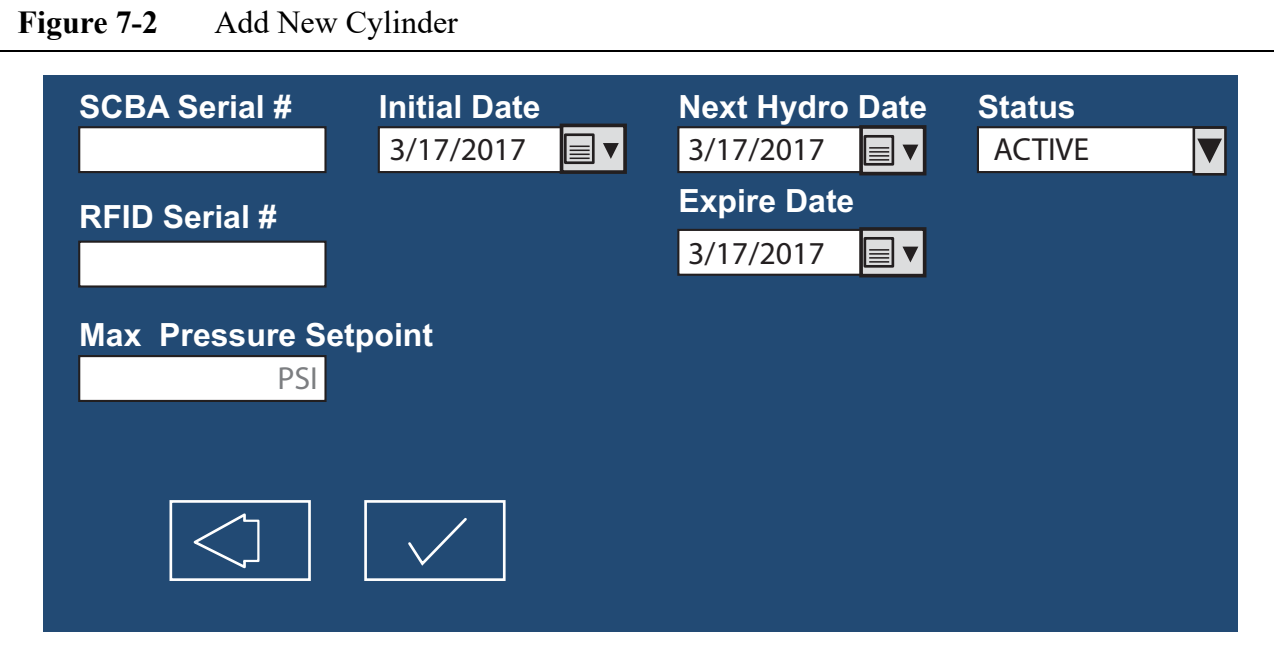

SCBA Serial #	Initial Date	Next Hydro Date	Status
<input type="text"/>	3/17/2017	3/17/2017	ACTIVE
RFID Serial #		Expire Date	
<input type="text"/>		3/17/2017	
Max Pressure Setpoint			
<input type="text"/> PSI			

Navigation buttons:


### 7.3.2 Filling the Cylinder with RFID Option

After the RFID tag has been serialized, anytime the cylinder is placed into the CFS of a Unicus 4i with the RFID option and the CFS door is closed (verified by the proximity switch), the RFID reader will read the tag. When the user goes to the fill cylinder screen the cylinder's information will already be filled in. The cylinder can be filled normally (see the Chapter 2). Once the cylinder is filled a record is kept in the PLC and written to the RFID tag. This allows the reports feature in the PLC to later recall the information and allows the information to be read off a cylinder from different RFID readers..

### 7.3.3 Kit-0585


When filling one or two bottles in the 3-position fill station, it is necessary to place bottle spacers, KIT-0585, in the remaining one or two empty bottle holders (See Figure 7-3). It is suggested to place bottles in fill positions from left to right so; if filling one bottle, place the bottle in fill position 1; if filling two bottles, place them in fill positions 1 and 2. After placing the bottles and bottle spacers in the bottle holders, toggle to the fill bottles screen. The RFID reader will see a RFID in each fill position. For each holder position the bottle spacer in place, select "No bottles" from the drop down menu and then press the "GO" button to the bottle in the holder positions 1 or 2.

**Figure 7-3** KIT-0585

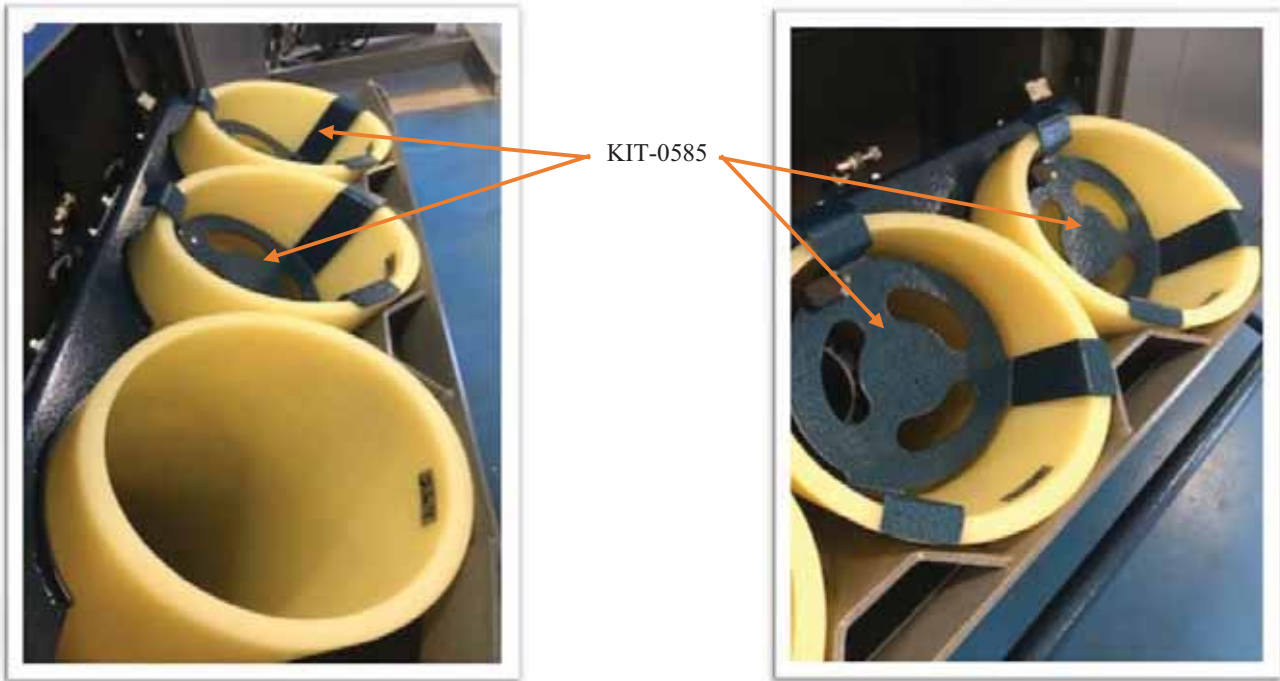


7.4 Replacement Parts List

Figure 7-4 RFID Assembly

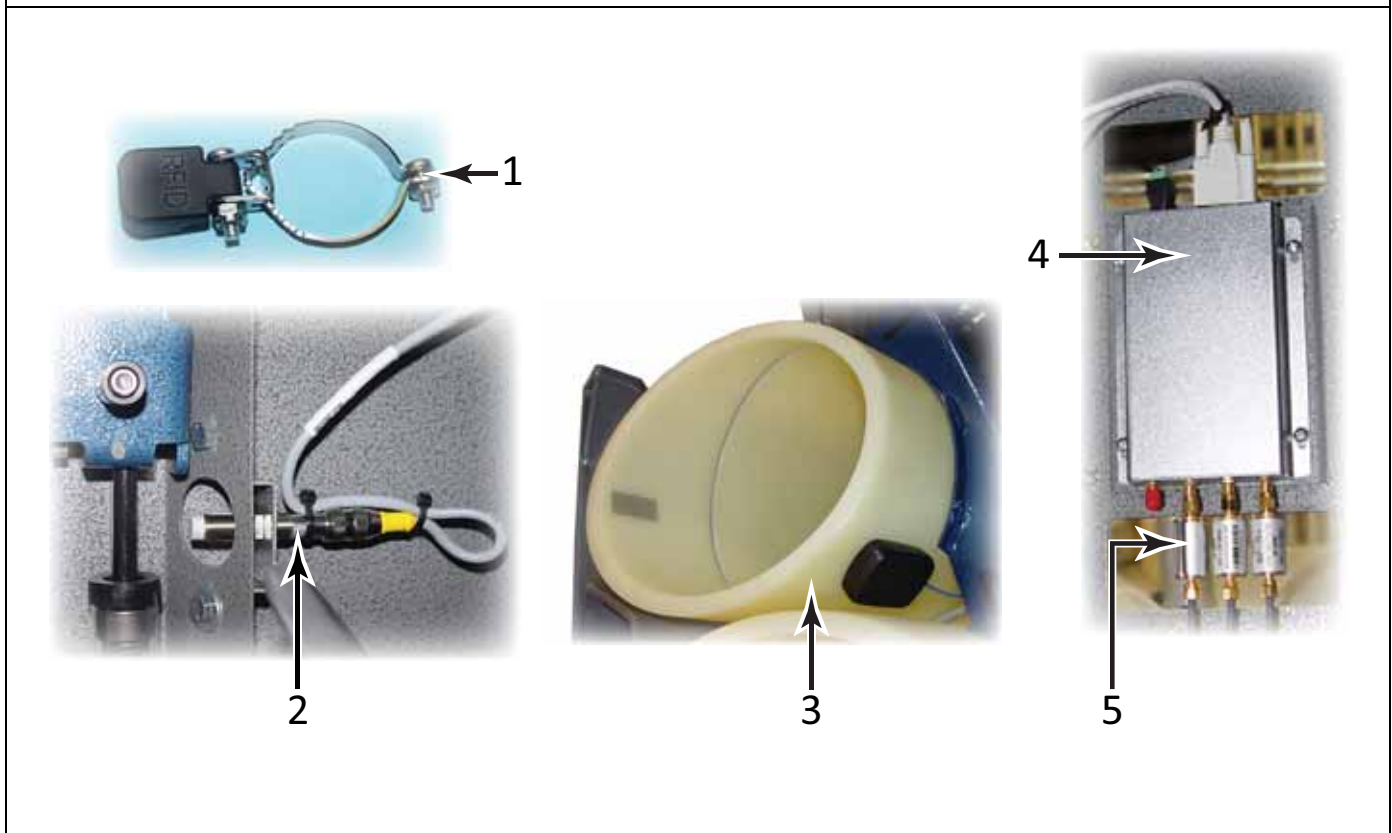

Item	Qty	Part No.	Description	Notes
1	1	KIT-0557	RFID Tag	25 tags per kit
2	1	SEN-0158	Proximity Switch	
3	3	ASY-8067	RFID Holder Assembly	replaces HOL-124 in CFS assembly
4	1	CNT-0192	RFID Reader/Writer	
5	3	FLR-0211	Signal Filter	

Figure 7-5 KIT-0585

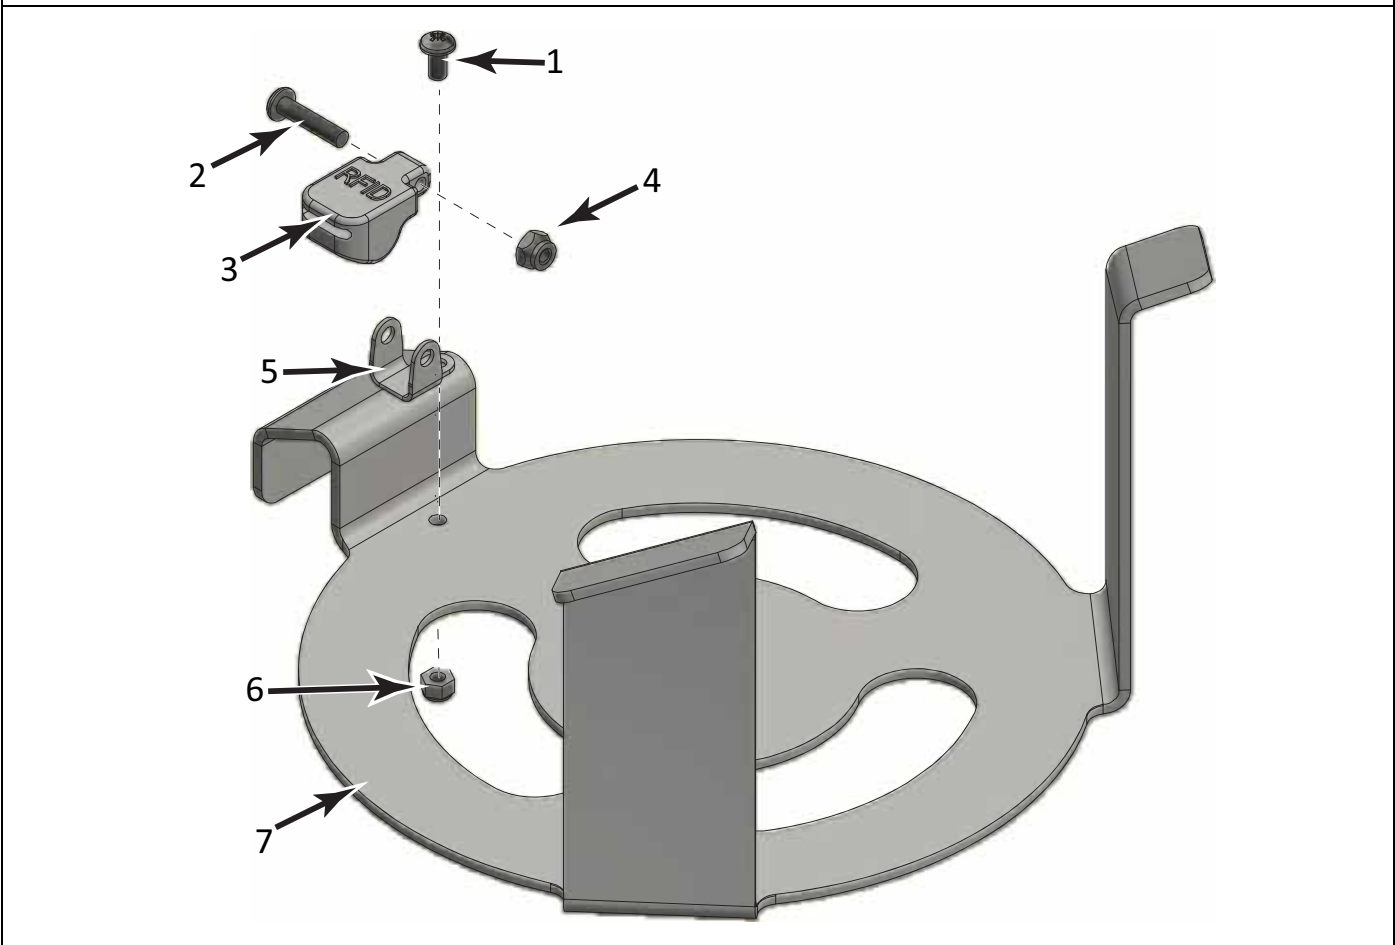


Item	Qty	Part No.	Description	Notes
1	1	SCR-0281	Pan Head Cap Screw	
2	1	SCR-0464SS	Pan Head Cap Screw	<i>stainless steel</i>
3	1	TAG-0003	RFID Tag	
4	1	NUGT-0284SS	Flex Lock Nut	<i>stainless steel</i>
5	1	BRK-1113	Bracket	

## CHAPTER 8: ENMET GAS MONITORS

### 8.1 Description

The gas monitors are a factory installed option which may have been ordered with your unit.

The oxygen (O), carbon monoxide (CO), and carbon dioxide (CO<sub>2</sub>) monitors sample the gas as it leaves the unit. The hydrogen sulfide (H<sub>2</sub>S) monitor samples the ambient air. The O, CO, and H<sub>2</sub>S monitors use an electrochemical sensor element to detect the targeted gas. The CO<sub>2</sub> monitor uses an infrared sensor to detect the CO<sub>2</sub>.

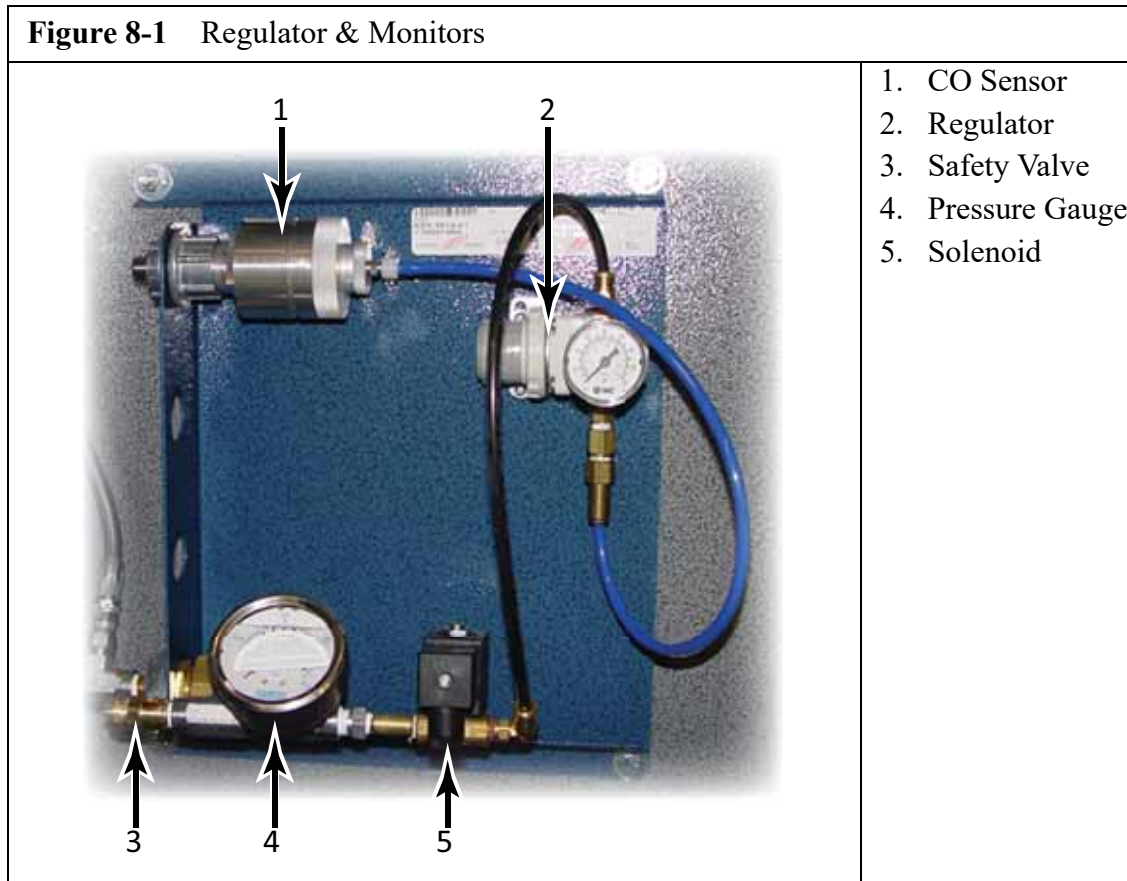

### 8.2 Operation

The Enmet monitors work automatically when enabled on the “Gas Sensors” portion of the program. The regulators reduces the pressurized air/gas to levels the monitors can use. When any of the sensors detect the set concentration of gas it activates an alarm condition and shuts down the compressor unit. Once the gas concentration has returned below the acceptable limit, the monitor will allow the unit to be restarted.

Assemble KIT-0439 before attempting to calibrate the sensor. To assemble the kit, attach one end of the clear hose to the regulator. Attach the white plastic adapter to the other end of the clear hose. When zeroing or calibrating, the clear regulator hose should be attached to the sensor in place of the blue hose which connects the sensor to the regulator. Zero the sensor first using the zero test gas. After pressing the **Sen-sor** button on the main menu of the touch screen follow the on screen instructions to zero the sensor.

Once the sensor is zeroed it can be calibrated using the 20 ppm CO gas. Again, follow the steps as presented on the touch screen to calibrate the sensor.

**Figure 8-2** Basic Calibration Kit & Test Gases



1. Calibrating Regulator (KIT-0439)

1. 20 ppm Carbon Monoxide Test Gas

2. Zero Test Gas

**NOTICE**

NFPA states that gas monitors must be calibrated on a 30 day cycle. For non-NFPA applications local, state and corporate codes must be referenced.

**8.3 Calibration**

Calibration is recommended quarterly or if the effectiveness of the sensor is in question. Before attempting to calibrate ensure you have the calibrating regulator, zero gas, and test gas at hand.

To calibrate a gas sensor, follow the steps below

- Close the isolation valve on the regulator assembly.
- Press the “Gas Sensor” button on the main menu screen.
- Select the gas sensor you wish to calibrate.
- On the sensor screen press the “Push to Calibrate” button.
- A screen will pop up to enter the password. Enter the password given to you by the distributor. Then push “OK”.
- Assemble the calibration regulator onto the zero gas.
- Disconnect the tube that enters the sensor and attach the calibration tube to the sensor.
- Open the gas valve on the zero gas and press the “Set to Zero” button. A countdown screen will appear. Once the count down is complete the “Set to Zero” button will reappear.
- Close the zero gas valve.
- Connect the span gas to the calibration regulator. Release the span gas by opening the valve on the calibration regulator.

**MNL-0021**

---

- Press the “Set Span” button. A countdown screen will appear. Once the countdown is complete the “Exit” button will appear.
- Close the span gas valve and disconnect the calibration hose from the sensor.
- Press the “Exit” button on the screen to complete the calibration process.
- Reconnect the compressor supply line to the port on the sensor.

**NOTICE**

Warranty for the GAS-TEK sensors is for 1 year from date of shipment.

8.4 Replacement Parts

Figure 8-3 Regulator and Monitors



Item	Qty	Part No.	Description	Notes
1	1	SEN-0134	CO Monitor, <i>Enmet</i>	(See Figure 8-4)
2	1	REG-0098	Pressure Regulator	set to 75 psig (5.17 barg)
3	1	VAL-0384	Safety Valve	@165 psig (11.4 barg)
4	1	GAG-0006W	Pressure Gauge	0 - 200 psig (14 barg)
5	1	VAL-0510	Solenoid, NC	8 W, 24 VDC

**Figure 8-4** Monitors



Item	Qty	Part No.	Description	Notes
1	1	SEN-0134*	Carbon Monoxide Monitor	
1	1	SEN-0135*	Oxygen Monitor	
1	1	SEN-0136*	Carbon Dioxide Monitor	
1	1	SEN-0137*	Hydrogen Sulfide Monitor	

\*Sensors 134 - 137 can be ordered new, or BCI also offers a sensor replacement program that utilizes refurbished sensors at a lower cost, but still carry the full 1-year Warranty. If a refurbished sensor is desired when ordering place the letter R after the part number. (e.g. **SEN-0134R**”).

**Figure 8-5** Calibration Components



Item	Qty	Part No.	Description	Notes
1	1	KIT-0439	Calibrating Regulator, Hose, & Adapter	
2	1	CYL-0016	CO Test Gas	20 ppm
3	1	CYL-0020	CO Test Gas, Zero Gas	0 ppm

## CHAPTER 9: CFS III MAINTENANCE

### 9.1 Description

The UNICUS 4i containment fill stations are designed and have been tested to offer the operator protection against the explosive force and resulting shrapnel should a cylinder fail during the filling operation.



### WARNING

If a cylinder fails during a filling operation, the Containment Fill Station must be considered damaged beyond repair and destroyed to prevent its ever being used again.

The fill station features fill hoses complete with bleed valves and SCBA fill adapters of choice, mechanical door interlock, and a fill control panel with individual pressure gauges.

### 9.2 Fill Station Air Flow

Refer to the Pneumatic Diagram DGM-1137, after the Appendix.

From the air inlet, compressed air flows to the Fill Pressure Regulator (R1) where the desired bottle fill pressure is set and maintained. The Regulator Inlet Pressure Gauge (P1) indicates the supply pressure to the Regulator (R1). The Regulator Outlet Pressure Gauge (P2) indicates this regulated pressure. The Fill Pressure Relief Valve (RV1) ensures against overfilling the bottle if the Fill Pressure Regulator (R1) fails.

The Door Interlock Valves (V1) are operated when the door is closed and the lock bar is in the down and locked position. This prevents the filling of bottles until the door is properly closed and locked.

When the Mechanical Door Interlock Valves (V1) are operated it allows compressed air to flow from the outlet of the Fill Pressure Regulator (R1) to the Fill Hoses (H1) via the Fill Hose Shut Off Valve (V2).

Fill Pressure Gauge (P3) is used to monitor the progress of the recharging operation.

The operator closes the Fill Hose Shut Off Valve (V2) when the bottle reaches the desired pressure, stopping the flow of air to the bottle.

The optional Fill Pressure Relief Valves (RV2) can be used to allow multiple fill pressures in the same CFS II.

Should the operator not close the Fill Hose Shut Off Valve (V2) when the bottle is full, the Relief Valve (RV2) will open, venting excess pressure.

When the recharging operation is complete the operator presses down on the Door Handle and opens the door which disengages the Mechanical Door Interlock Valves (V1) eliminating the possibility of the flow of compressed air to the bottles.

Before the bottles can be removed from the fill station the bottle valve must be closed and the pressure remaining in the Fill Hoses (H1) bled off by opening the Drain/Bleed Valve (V3).

### 9.3 Maintenance

#### 9.3.1 General Maintenance

Develop a regular program of visual inspection, looking for clogged drains and broken or missing parts.

### 9.3.2 Nonadjustable Valves

The condensate drain valve, bleed valve and check valves are not adjustable. The condensate drain valve and bleed valve have seats and seals which should be replaced if the valve leaks. Check valves are not adjustable or repairable and must be replaced if they malfunction.

### 9.3.3 Pressure Gauges

Observe the pressure gauges daily. If the readings of any of the gauges seem to be incorrect, bleed off all system pressure. Check that the gauges correctly read zero then reapply pressure to the system. If the reading is still incorrect contact Bauer Compressors for service. All broken or damaged gauges must be replaced immediately.

### 9.3.4 Safety Valves



The safety valve must be checked periodically for proper functioning.

1. Operate the compressor with the shut-off valve closed until the safety valve vents.
2. Note the pressure registered on the pressure gauge.

The safety valve is adjusted at the factory to the required pressure and does not normally require maintenance or readjustment. In case readjustment does become necessary, have the safety valve adjusted by a Bauer qualified technician (contact the Bauer service department for details) or return the valve to the factory.

### 9.3.5 Pneumatic Connections



## WARNING

Maintenance of pipe and tubing connections should not be attempted while the unit is under pressure. Serious injury or equipment damage will result if the connection fails or is loosened.

After determining that a pneumatic connection is leaking. Relieve compressed air pressure and tighten just firmly enough so that leakage is stopped (finger tight plus up to an additional  $\frac{1}{2}$  turn as necessary). Please note that the compression type coupling fittings are capable of exerting extreme force on the tubing and should not be tightened more than is required to seal the joint. To improve the sealing of the pipe connections and to facilitate installation, the following should be observed:

Apply a thin layer of Never-Seez® NSW7 or equivalent on the outside of the ferrule during assembly.

Lubricate the threads of the connector with Never-Seez® NSW7 or a similar PFTE base lubricant to facilitate future disassembly.

### 9.3.6 Bearings for Bottle Door Pivot

There is no need for relubrication under normal conditions.

If the setscrews should become loose, tighten as follows:

Setscrew diameter	Hex size	Recommended torque (inch lbs)
5/16"	5/32"	165

### 9.3.7 Pressure Hoses

The hoses should be inspected periodically for wear and damage. If a hose is worn or damaged, remove and replace it.

### 9.3.8 Door Gas Spring

A special tool, Spring Holder, TOO-0020 is required.



To remove and install a Door Gas Spring proceed as follows:

1. Place a piece of cardboard in the bottom of the door opening to protect the finish of the Door and Enclosure.
2. Remove the Door Stop and Mount from the inside rear of the Enclosure.
3. Lower the Door until it touches the cardboard.
4. Install the Spring Holder, TOO-0020 and raise the Door until the Holder is holding the Door Gas Spring.
5. Remove the nut on the lower mounting stud and remove the Door Gas Spring from the Door.
6. Lower the Door and allow it to rest on the cardboard.
7. Remove the nut on the upper spring mounting stud and remove the Door Gas Spring.
8. Install the replacement Door Gas Spring in the reverse order.

9.4 Replacement Parts List

9.4.1 CFS III Assemblies


Figure 9-3 CFS III Assembly



Item	Qty	Part No.	Description	Notes
1	3	HOL-0124 <sup>1</sup>	Bottle Holder	
2	1	DOR-0114	Door	
3	3	HOS-0145	Fill Whip	
4	1	HAN-0078	Handle	

1.Replaced by ASY-8067 if unit has RFID option


**Figure 9-4** Fill Whips & Brackets

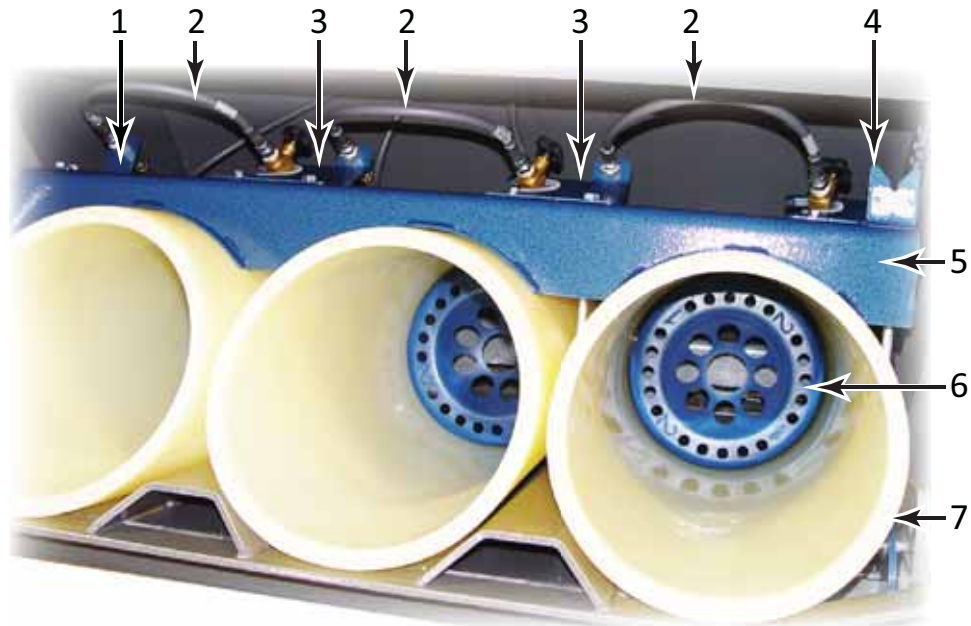

Item	Qty	Part No.	Description	Notes
1	1	MTS-0316	Hose Bracket	
2	3	HOS-0145	Fill Whip	1 per fill position
3	2	MTS-0315	Hose Bracket with Whip Holder	
4	1	HOL-0077	Fill Whip Holder with Door Interlock Actuator	
with	1	PLT-0396	Plastic Wear Plate	
5	1	CMP-0144	Bottle Holder Bracket	CFS III - 1
6	3	SPC-0118	Bottle Riser	1 per fill position
7	3	HOL-0124 <sup>1</sup>	Bottle Holder	1 per fill position


1. Replaced by ASY-8067 if unit has RFID option

**Figure 9-5** CFS III Door Lock Assembly

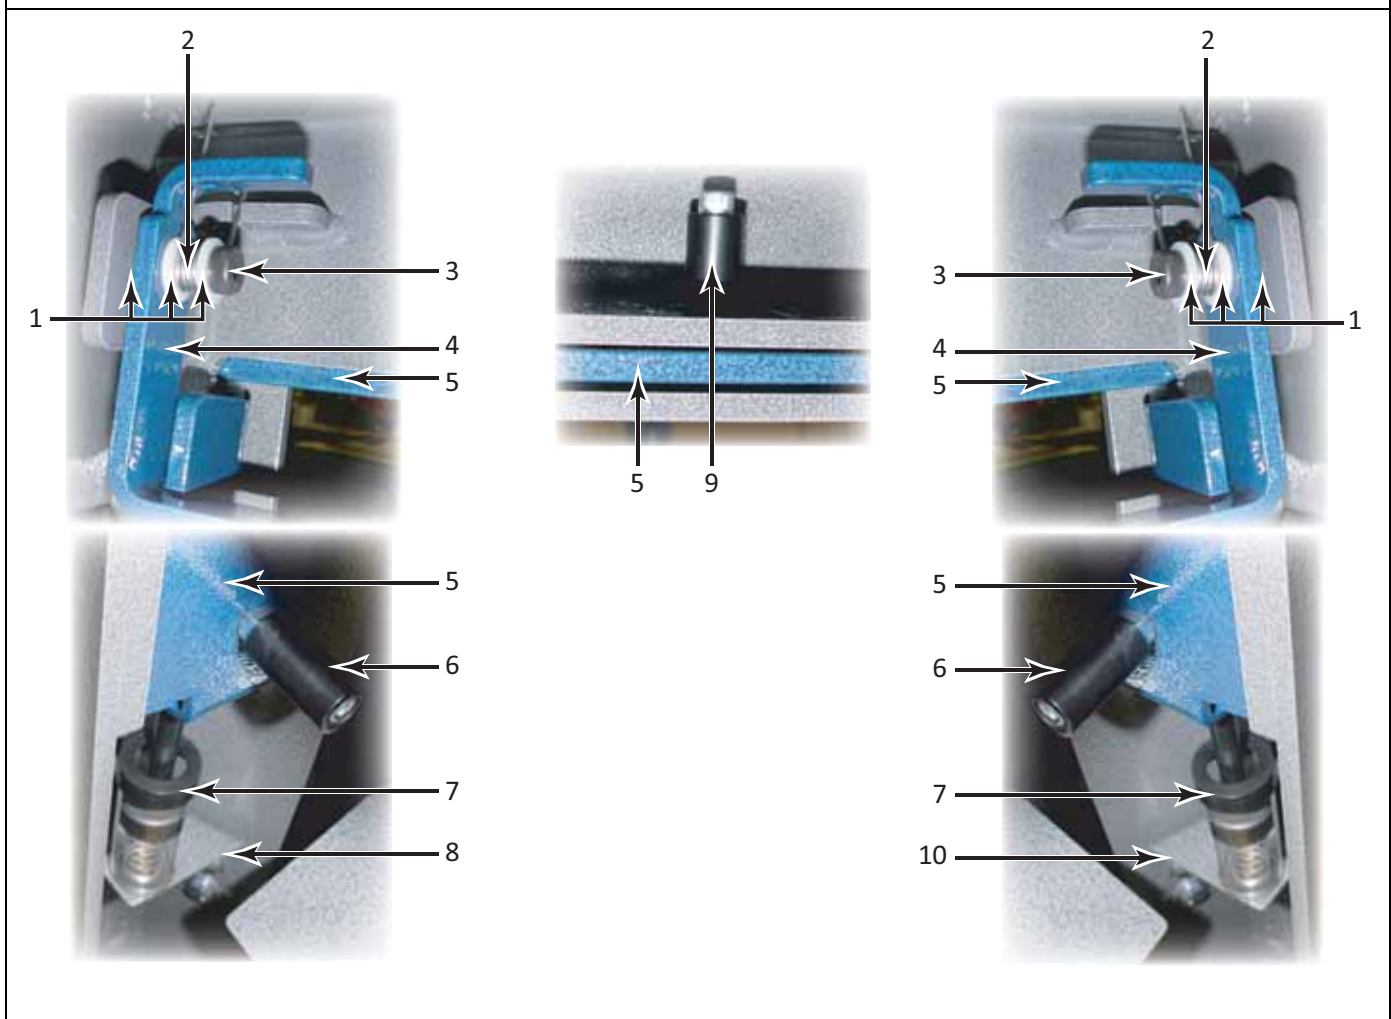


Item	Qty	Part No.	Description	Notes
1	6	—	Nylon Flat Washer	3/8"
2	2	SPG-0052	Torsion Spring	
3	2	—	Socket Head Shoulder Screw	3/8" x 7/8"
4	2	LCH-0048	Latch	
5	1	LCH-0090	Door Lock	
6	3	BUS-0153	Bushing	
7	2	CYL-0059	Damper	
8	1	BRK-0673	Cylinder Bracket	Right
9	1	BRK-0672	Cylinder Bracket	Left

**Figure 9-6** Door Handle, Pivot and Bracket

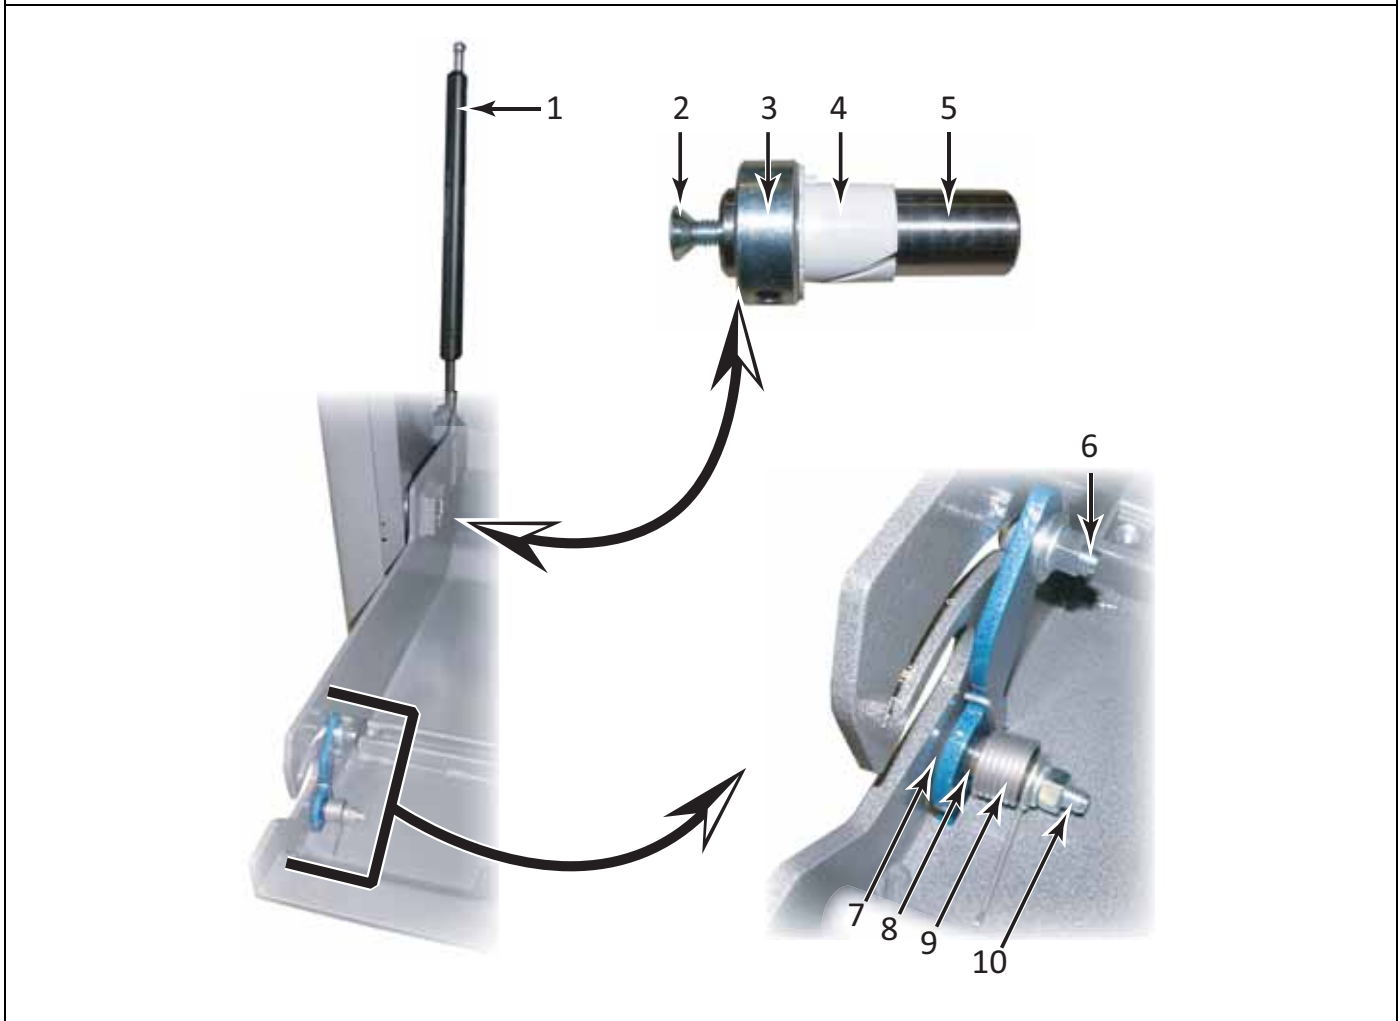

Item	Qty	Part No.	Description	Notes
1	1	SPG-0078	Gas Spring	
2	2		Flat Head Socket Cap Screw	5/16x18 x 3/4" UNC
3	2	CLR-0001	Collar	
4	2	BUS-0121	Bushing	
5	2	PIN-0047	Pin	
6	2		Socket Head Cap Screw	3/8-16 x 1" UNC
7	2		Washer, Nylon	5/8"
8	2	BUS-0122	Bushing	
9	1	SPG-0054	Spring	Right Side
NS	1	SPG-0053	Spring	Left Side
10	2		Socket Head Cap Screw	3/8-16 x 2" UNC


**Figure 9-7** CFS III Door Interlock

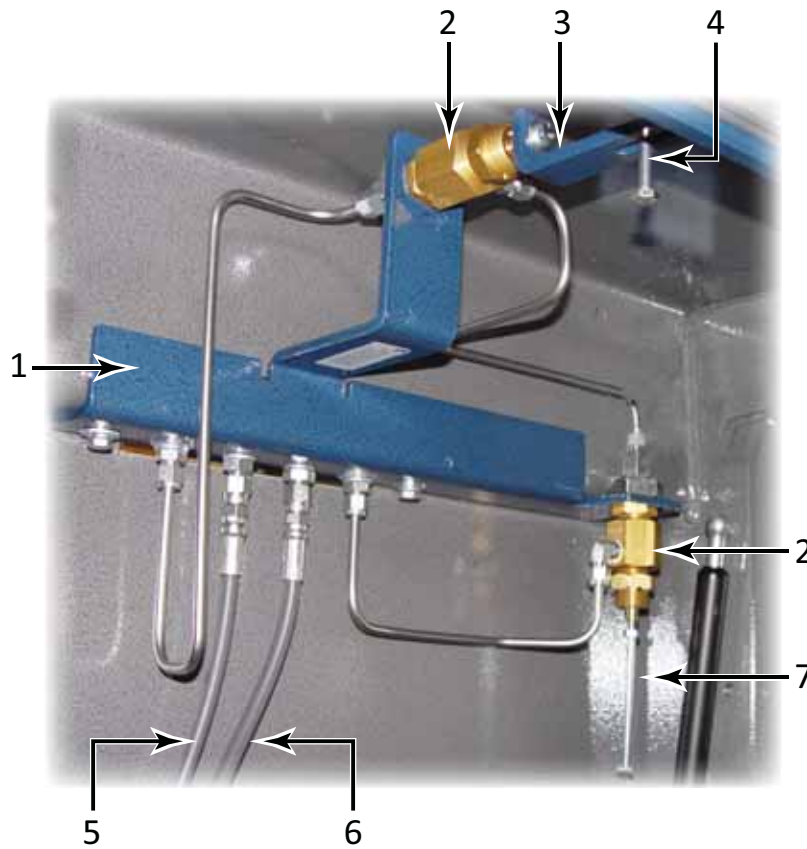

Item	Qty	Part No.	Description	Notes
1	1	BRK-0671	Bracket	
2	2	VAL-0130	Interlock Valve	
3	1	LEV-0025	Lever	
4	1	SCR-0078	Hex Head Cap Screw	1/4-20 x 4" UNC
5	1	HOS-0147	Hose, Left	
6	2	HOS-0146	Hose	
7	1	—	Hex Head Cap Screw	1/4-20 x 4 1/2" UNC


9.5 Fill Hose Assemblies

Figure 9-8 Standard Fill Hose Assemblies

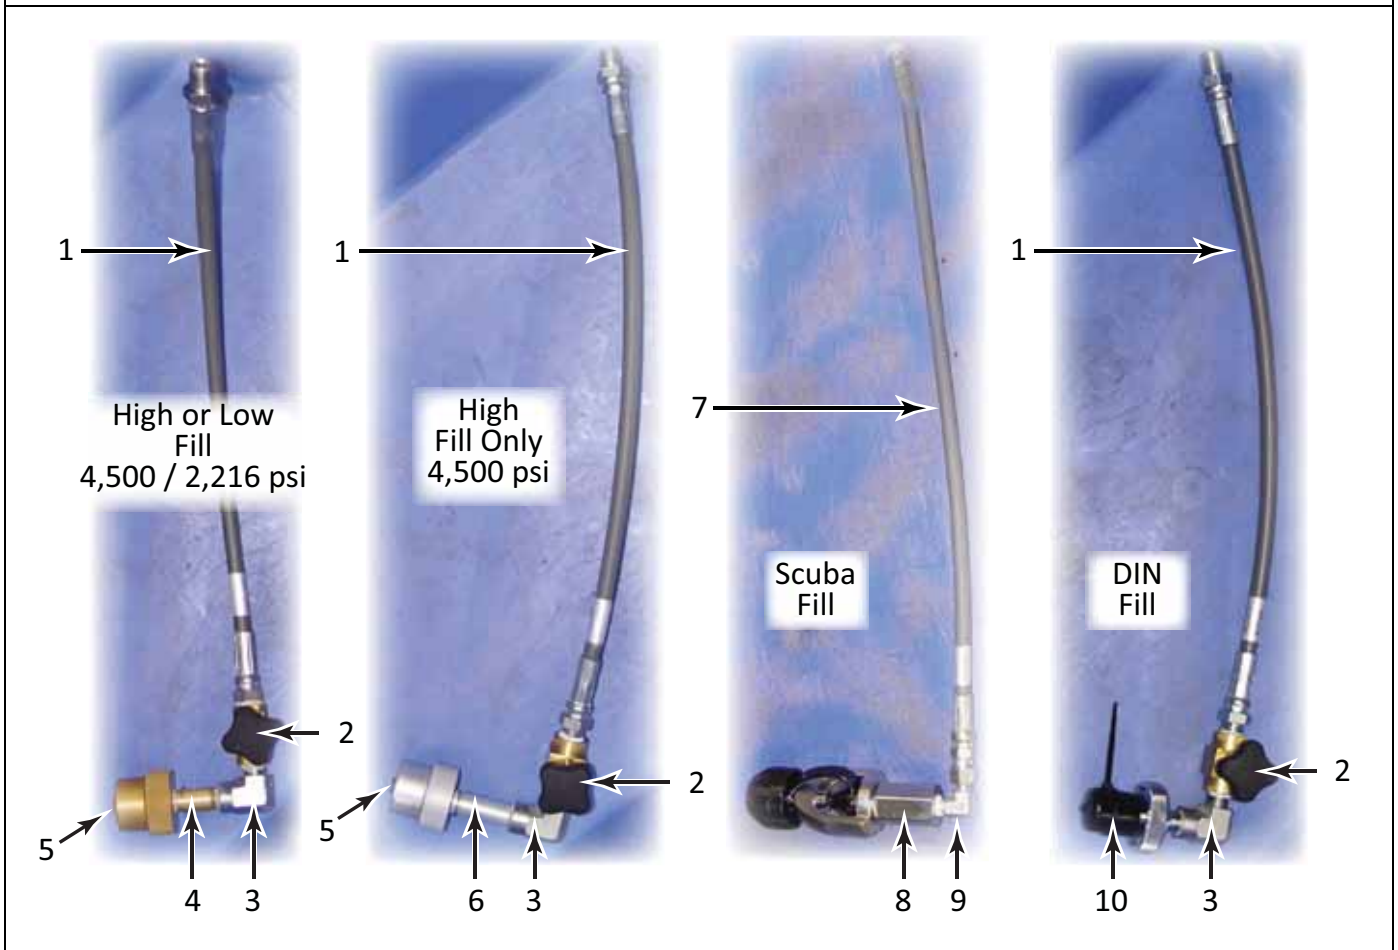

Item	Qty	Part No.	Description	Notes
1	1	HOS-0145	Fill Hose	25"
2	1	065126	Bleed Valve	
3	1	ELL-0018	Elbow	
4	1	ADP- 0112	Adapter	4,500 / 2,216 psi Cylinder
5	1	N04483	O-ring	
6	1	ADP-0113	Adapter	4,500 psi Cylinder
or	1	ADP-0015	Adapter, <i>Stainless Steel</i>	with NIP-0096
7	1	HOS-0150	Fill Hose, Scuba	27"
8	1	ELL-0031	Elbow	<i>scuba fill only</i>
9	1	YOK-0001	Scuba Fill Yoke with Bleed Valve	
10	1	ADP-0207	DIN Fill Adapter	4,350 psig (300 bar)

**Figure 9-9** Fill Whips with Options

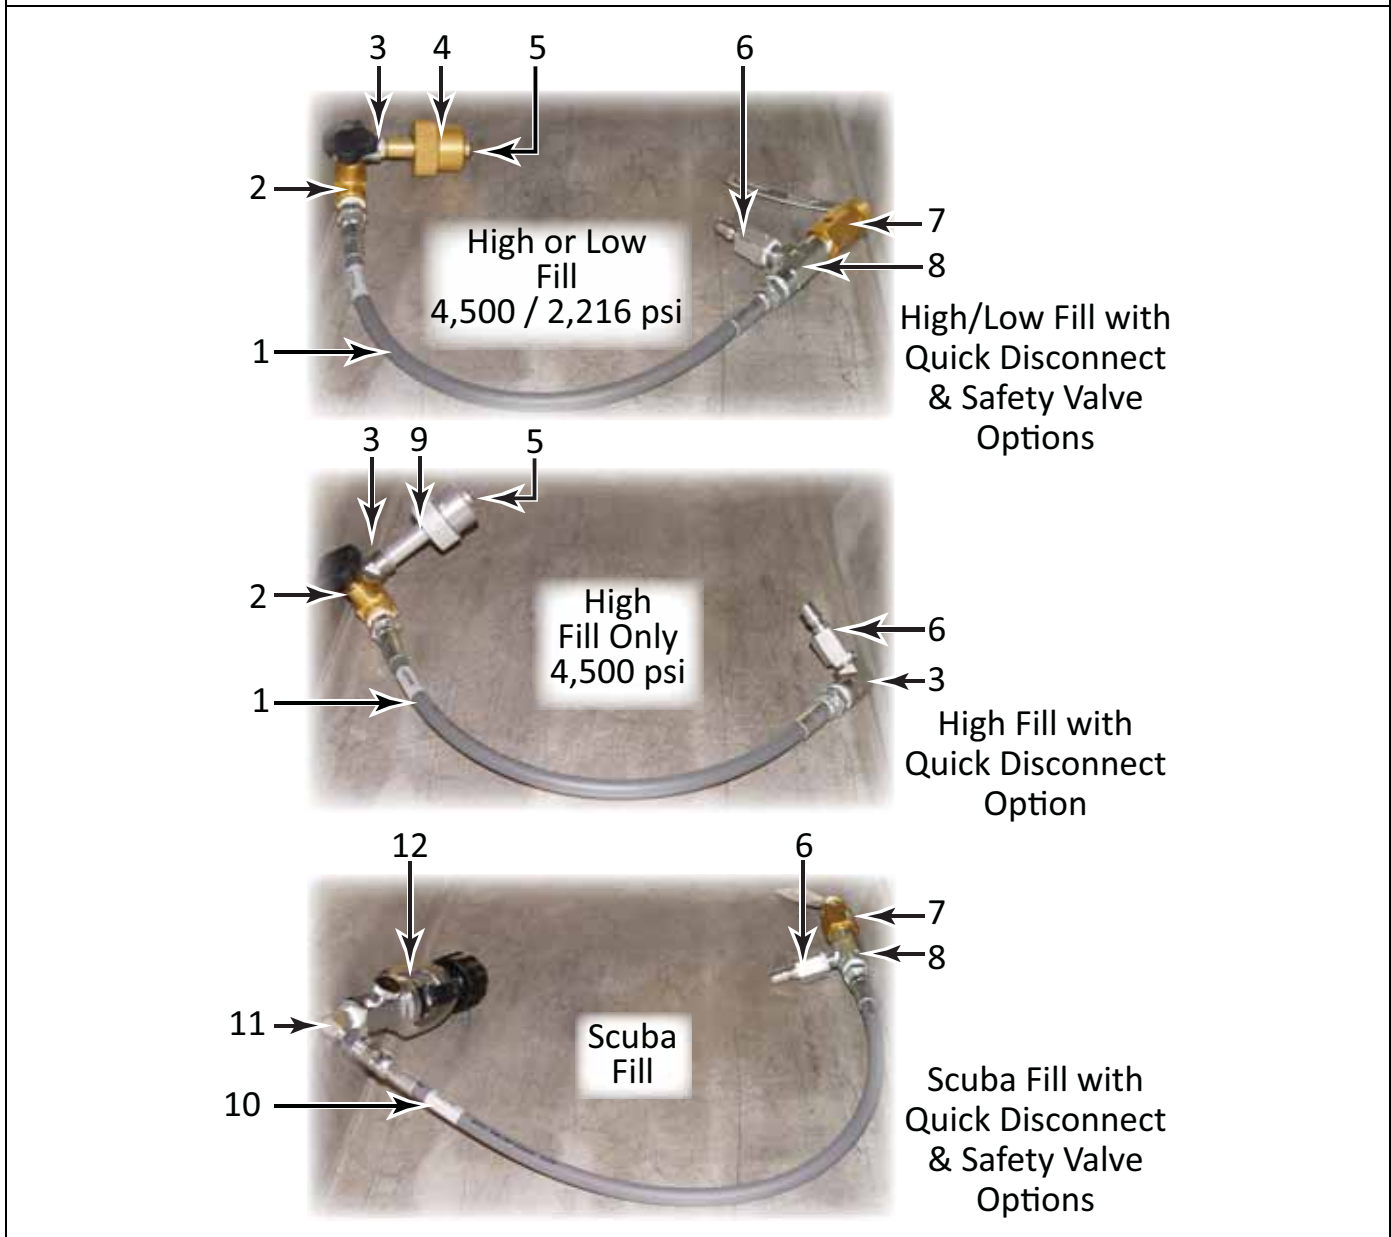

Item	Qty	Part No.	Description	Notes
1	1	HOS-0145	Fill Hose	
2	1	065126	Bleed Valve	
3	-	ELL-0018	Elbow	
4	1	ADP- 0112	Adapter	4,500 / 2,216 psi Cylinder
5	1	N04483	O-ring	
6	1	CON-0223	Quick Disconnect	
7	1	VAL-0169	Safety Valve	
8	1	TEE-0014	Tee	

**Figure 9-9 (cont.)** Standard Fill Hose Assemblies

Item	Qty	Part No.	Description	Notes
9	1	ADP-0113	Adapter	4,500 psi Cylinder with NIP-0096
or	1	ADP-0015	Adapter, <i>Stainless Steel</i>	
10	1	HOS-0150	Fill Hose, Scuba	
11	1	ELL-0031	Elbow	
12	1	YOK-0001	Scuba Fill Yoke with Bleed Valve	

**CHAPTER 10: UNICUS III HP AIR STORAGE**

**10.1 Bottle Specifications**

Storage systems are available to meet the code requirements of either the United Nations (UN) model regulations (ISO 9809-PART 2) or the American Society of Mechanical Engineers (ASME). Standard operating temperature range for storage systems is - 20 to 150 °F. Designs to - 40 °F are an available option.

**10.1.1 ISO/UN; ISO 9809-PART2 / United Nations**

These vessels are approved by the US Department of Transportation. The cylinders must be equipped with the proper cylinder valve and CGA recommended outlet. Retest period for ISO/UN cylinders is mandatory every ten (10) years.

Bauer can supply 5,000 psig and 6,000 psig ISO/UN systems complete with interpiping, pressure gauges, cylinder valves and check valve. Optional mounting racks are available.

Vessel	ISO / UN		
	4,500 psig	5,000 psig	6,000 psig
<b>Material</b>	Lightweight Steel Alloy		
<b>Volume</b>	437 cf @ 4,500 psig	472 cf @ 5,000 psig	510 cf @ 6,000 psig
<b>Working Pressure</b>	4,500 psig	5,000 psig	6,000 psig
<b>Test Pressure</b>	6,750 psig	7,500 psig	9,000 psig
<b>Diameter</b>	9.41”		
<b>Height</b>	55” with Valve	56” with Valve	
<b>Weight</b>	155 lbs	170 lbs	195 lbs
<b>Cylinder Valve</b>	Dual-Out ¼” NPTF	CGA 347	Dual-Out ¼” NPTF
<b>Finish</b>	Primer and Topcoat		

**10.1.2 ASME; American Society of Mechanical Engineers**

Each vessel should have a shut-off valve and an A.S.M.E. approved safety valve. Vessels with working pressures of 5,000 psig, have a safety factor of 4 to 1. Vessels with working pressures of 6,000 psig, have a safety factor of 3 to 1. Bauer can supply 5,000 psig and 6,000 psig A.S.M.E. storage systems complete with interpiping, pressure gauges, safety valves, cylinder valves and check valves. Optional mounting racks are available.

Vessel	ASME	
	5,250 psig	6,600 psig
<b>Material</b>	Steel ASME SA 372 Class V Type A AISI 4130	
<b>Volume</b>	424 cf @ 5,000 psig	481 cf @ 6,000 psig
<b>Working Pressure</b>	5,000 psig	6,000 psig
<b>Test Pressure</b>	7,875 psig	10,500 psig
<b>Diameter</b>	9 5/8"	
<b>Height</b>	55" without Valve	
<b>Weight</b>	400 lbs	
<b>Cylinder Valve</b>	Standard Valve Supplied	
<b>Finish</b>	Primer and Topcoat	

## 10.2 Description and Maintenance

### 10.2.1 Description

The air storage system consists of one (or more) D.O.T. or A.S.M.E. storage vessels with line valves, safety valves, interconnecting tubing, pressure gauges, check valves and mounting clamps.

D.O.T. vessels are approved by the Department of Transportation for portable usage. D.O.T. systems are available at 5,000 psi and 6,000 psi.

A.S.M.E. vessels conform to the American Society of Mechanical Engineers codes for permanent installation. These vessels have working pressures of 5000 psig, with a safety factor of 4 to 1; and 6,000 psig, with a safety factor of 3 to 1. A safety device is provided on each vessel to protect against excess pressure. It is preset at the factory and sealed. It should not be adjusted.

**Figure 10-1** UNICUS III Storage Systems

## 10.2.2 Maintenance

### 10.2.2.1 Storage Bottles

All storage bottles should be visually inspected internally every year. Every five (5) years, D.O.T. bottles must be hydro-tested.

Check local and state regulations regarding testing of ASME or D.O.T. bottles. Some states require an annual visual inspection, and hydro-testing requirements also differ from state to state.

### 10.2.2.2 Pressure Gauges

1. Observe the pressure gauges daily.
2. If the readings of any of the gauges seem to be incorrect, bleed off all system pressure.
3. Then, remove the gauge and check for wear and tear, accuracy and proper functioning by comparing it to a precision test gauge or a dead weight tester.
4. Replace all broken or damaged gauges immediately.

### 10.2.2.3 Tube Connections

Pipe connections (swivel nuts): Tighten just firmly enough so that leakage is stopped (finger tight plus up to an additional ½ turn as necessary). Please note that the compression type coupling fittings are capable of exerting extreme force on the tubing and should not be tightened more than is required to seal the joint.

To improve the sealing of the pipe connections and to facilitate installation apply a thin layer of Never-Seez® NSW or a similar PTFE base lubricant to the ferrule and the threads of the connector to facilitate future disassembly.

### 10.2.2.4 Safety Valve

**Figure 10-2** Safety Valve; VAL-0022



- Develop a regular program of visual inspection, looking for clogged drains and discharge pipe, dirt build-up in and around the valve seat, and broken or missing parts.
- Avoid excessive operation of the safety valve, as even one opening can provide a means for leakage. Safety valves should be operated only often enough to assure that they are in good working order.
- Do not paint, oil or otherwise cover any interior or working parts of any safety valve. They do not require any lubrication or protective coating to work properly.

### 10.2.2.5 Pressure Hoses

The hoses should be inspected periodically for wear and damage. If a hose is worn or damaged, remove and replace it.

### 10.3 Autocascade System


#### 10.3.1 General

The auto cascade system utilizes Siemens PLC technology to open and close valves from up to 4 storage banks. The auto cascade system opens storage banks as needed and allows the compressor to refill the depleted storage banks in a systematic order. The system replaces what previously required a human operator. It monitors the storage banks and open and closes the valves as needed, all automatically.

This section gives an overview of how the autocascade system functions.



**Figure 10-3** Autocascade System

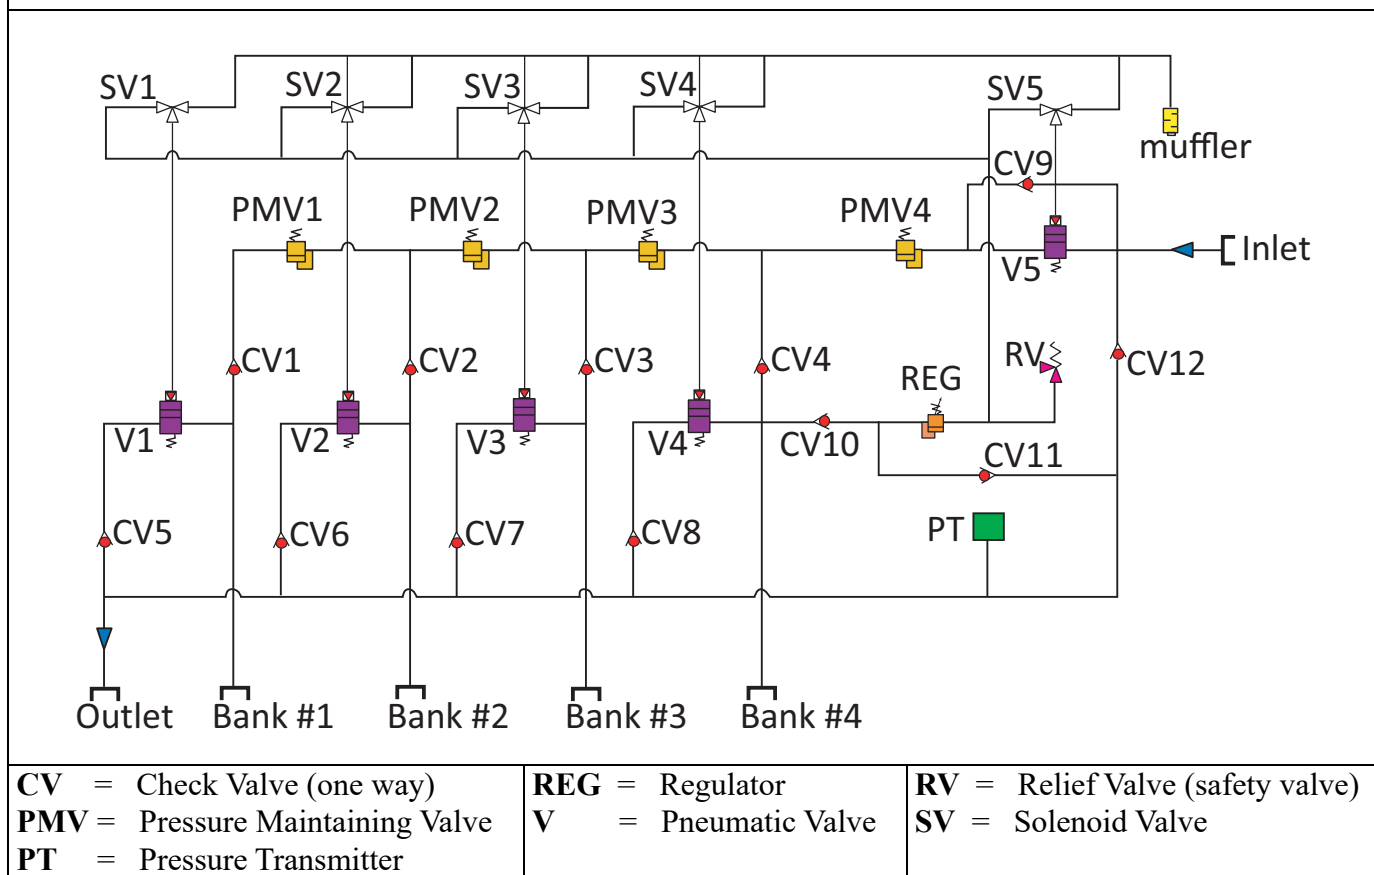

### **10.3.2 Electrical**

Siemens electronics are used for this application. The PLC monitors the Pressure Transmitter continuously and opens solenoid valves 1-5 as needed.

### **10.3.3 Filling the Storage Banks**

When the compressor begins delivering purified compressed air it is applied to the inlet of the first priority valve (5). It opens and begins filling the 1st storage bank (9). As this storage bank (9) fills, the pressure is applied to the inlet port of the 2nd priority valve(6). When the actuation pressure is reached, the 2nd priority valve opens and fills the 2nd storage bank (10). This same sequence of operations continues and allows the 3rd storage bank (11) to be filled by the 3rd priority valve (7) and 4th storage bank (12) to be filled by 4th priority valve (8). The actuation point of the priority valves is approximately 1,000 psi less than the cut off pressure of the compressors final pressure switch thus ensuring the storage banks are individually filled to the actuation pressure. Once all the storage banks are at this pressure the compressor then fills all the storage banks simultaneously to the compressor final pressure. When this pressure is reached the storage banks are fully charged and compressor shuts down.

### **10.3.4 Filling Bottles from the Storage Banks**

When the outlet is used for filling, the compressed air is drawn from the 4th storage bank. When the difference on the control ports of the 4th sequence valve falls below approximately 200 psi the valve is forced to the other position and compressed air begins flowing from the 3rd storage bank. The 3rd sequence valve controls the flow until the pressure differential is again less than 200 psi when it is forced to the other position and filling begins from the 2nd storage bank. Once again when the pressure differential drops below 200 psi the sequence valve moves to the other position and air flows from the 1st storage bank. When the pressure in the 1st storage bank drops to the cut on pressure of the compressor, the compressor starts and provides air directly to the outlet.

### **10.3.5 Manual Bypass**

The autocascade is equipped with a manual bypass in case of power failure or if the operator wishes to utilize the CFS straight from the storage cylinders and not using the compressor. The top gauge tells the pressure in the storage tanks. The valve on top must be opened by turning clockwise. The bottom valve is the regulator, used to set the pressure to fill the cylinders in the CFS. Push the bypass button on the solenoid for the storage bank to be used. The bottom gauge shows the pressure going to the CFS. Once one storage bank is emptied the next storage tank can be accessed by pushing the bypass button on that solenoid.

---







**CHAPTER 11:APPENDIX****11.1 Safety****11.1.1 General Safety Precautions**

- Read the operating manual before installing or operating this compressor unit. Follow appropriate handling, operation and maintenance procedures from the very beginning. The maintenance schedule contains measures required to keep this compressor unit in good condition. Maintenance is simple, but must be executed regularly to achieve safe operation, maximum efficiency and long service life.
- We recommend that all maintenance work be recorded in a service book, showing the date and details of the work carried out. This will help to avoid expensive repair caused by missed maintenance work. If it is necessary to make a Claim against the warranty, it will help to have proof that regular maintenance has been carried out and that the damage has not been caused by insufficient maintenance.
- This compressor unit must be installed, operated, maintained and repaired only by BAUER authorized, trained and qualified personnel. Information on BAUER training and becoming BAUER authorized can be accessed at (757)858-6006 or [productsupport@bauercomp.com](mailto:productsupport@bauercomp.com).
- Consult and follow all OSHA, NEMA, ASME and local regulations, laws and codes covering the installation and operation of this compressor and accessories before operating the unit.
- Do not operate this unit in excess of its rated capacity, speed, pressure, temperature, or otherwise than in accordance with the instructions contained in this manual. Operation of this unit in excess of the conditions set forth in this manual will subject the unit to limits which it may not be designed to withstand.
- Keep safety guards in place.
- Do not modify the compressor or its systems.
- Do not wear loose clothing around machinery. Loose clothing, neckties, rings, wrists watches, bracelets, hand rags, etc. are potential hazards.
- Provide adequate fire protection. Make sure fire extinguishers are accessible. Select alternate routes of escape and post such routes.
- Make sure you are equipped with all required safety equipment; hearing protection, safety glasses, hard hats, safety shoes and fire extinguisher.
- Visually inspect the unit before starting. Remove and or replace any loose or broken components, tools, valves, missing equipment, etc.
- Do not tamper with, modify, or bypass safety and shutdown equipment.
- Do not tighten or adjust fittings or connections under pressure.
- The use of plastic pipe or rubber hose in place of steel tube or iron pipe, soldered joints or failure to ensure system compatibility of flex joints and flexible hose can result in mechanical failure, property damage, and serious injury or death.
- The use of plastic or nonmetallic bowls on line filters without metal guards can be dangerous.
- Replace damaged fan blades promptly. Fan assemblies must remain in proper balance. An unbalanced fan can fly apart and create an extremely dangerous condition.

- Allow the compressor to cool before servicing. Whenever the compressor is shut down and overheating is suspected, a minimum period of 15 minutes must elapse before opening the crankcase. Premature opening of the crankcase of an overheated unit can result in an explosion.
- Incorrect placement of the inlet and pressure valves in a compressor cylinder head can cause an extremely dangerous condition. Refer to the appropriate section of this manual before installing or replacing valves.
- Before doing any work involving maintenance or adjustment, be sure the electrical supply has been disconnected, and the complete compressor system has been vented of all internal pressure. Failure to follow these warnings may result in an accident causing personal injury and/or property damage.
- Before working on the electrical system, be sure to disconnect the electrical supply from the system at the circuit breaker or other manual disconnect. Do not rely on the ON/OFF switch to disconnect the electrical supply.
- Installer must provide an earth ground and maintain proper clearance for all electrical components.
- All electrical installation must be in accordance with recognized national, state, and local electrical codes.
- Do not use gasoline, diesel fuel or other flammable products as a cleaning solution.
- A compressor which has been used for gas service is unsuitable for Gas applications. Should the purchaser and/or user proceed to use the compressor for Gas service after it has been used for gas, the purchaser and/or user assumes all liability resulting therefrom without any responsibility being assumed by Bauer Compressors, Inc. The purchaser is urged to include the above provision in any agreement for resale of this compressor.
- The use of repair parts other than those listed in this manual or purchased from Bauer Compressors, Inc. may create unsafe conditions over which Bauer has no control. Such unsafe conditions can lead to accidents that may be life-threatening, cause substantial bodily injury, and/or result in damage to the equipment. Therefore, Bauer Compressors, Inc. can bear no responsibility for equipment in which non-approved repair parts are installed.

**11.1.2 Safety Warning Labels**

Notes, labels and warning signs are displayed on the compressor unit according to model, application or equipment and may include any of the following.

	<p style="text-align: center;"><b>HOT SURFACES DO NOT TOUCH!</b></p> <p>Danger of burning if cylinders, cylinder heads, or pressure lines of individual compressor stages are touched.</p>
	<p style="text-align: center;"><b>HIGH VOLTAGE!</b></p> <p>Life threatening danger of electrical shock. Maintenance work on electric units or operating equipment should be carried out by a qualified electrician or by a person supervised by a qualified electrician according to electrical regulations.</p>
	<p style="text-align: center;"><b>AUTOMATIC COMPRESSOR CONTROL UNIT MAY START WITHOUT WARNING!</b></p> <p>Before carrying out maintenance and repGas work, switch off at the main switch and ensure the unit will not restart.</p>
	<p style="text-align: center;"><b>THE INSTRUCTIONS MUST BE READ BEFORE OPERATING THE UNIT!</b></p> <p>The instruction manual and all other applicable instructions, regulations, etc. must be read and understood by the operating personnel before using the machine.</p>
	<p style="text-align: center;"><b>HEARING PROTECTION MUST BE WORN!</b></p> <p>Hearing protectors must be worn when working on a machine which is running.</p>
	<p style="text-align: center;"><b>DIRECTION OF ROTATION!</b></p> <p>When switching on the machine, check the arrow on the compressor to ensure correct direction of rotation by the drive motor.</p>


## 11.2 Unpacking, Handling and Installation

### 11.2.1 Unpacking and Handling

This compressor unit is packaged according to the requirements for shipping via the requested type of carrier service. It is possible that the compressor unit could have been damaged during shipping. For this reason, we urge you to thoroughly examine the unit for possible damage and report any such damage to the shipping company immediately.

Care must be taken in unpacking the compressor unit. Serious damage could result by not checking for clearance between the item being unpacked and the packaging to be removed.

Handling of the unpacked unit should be performed using only the following devices. See Figure 11-1.

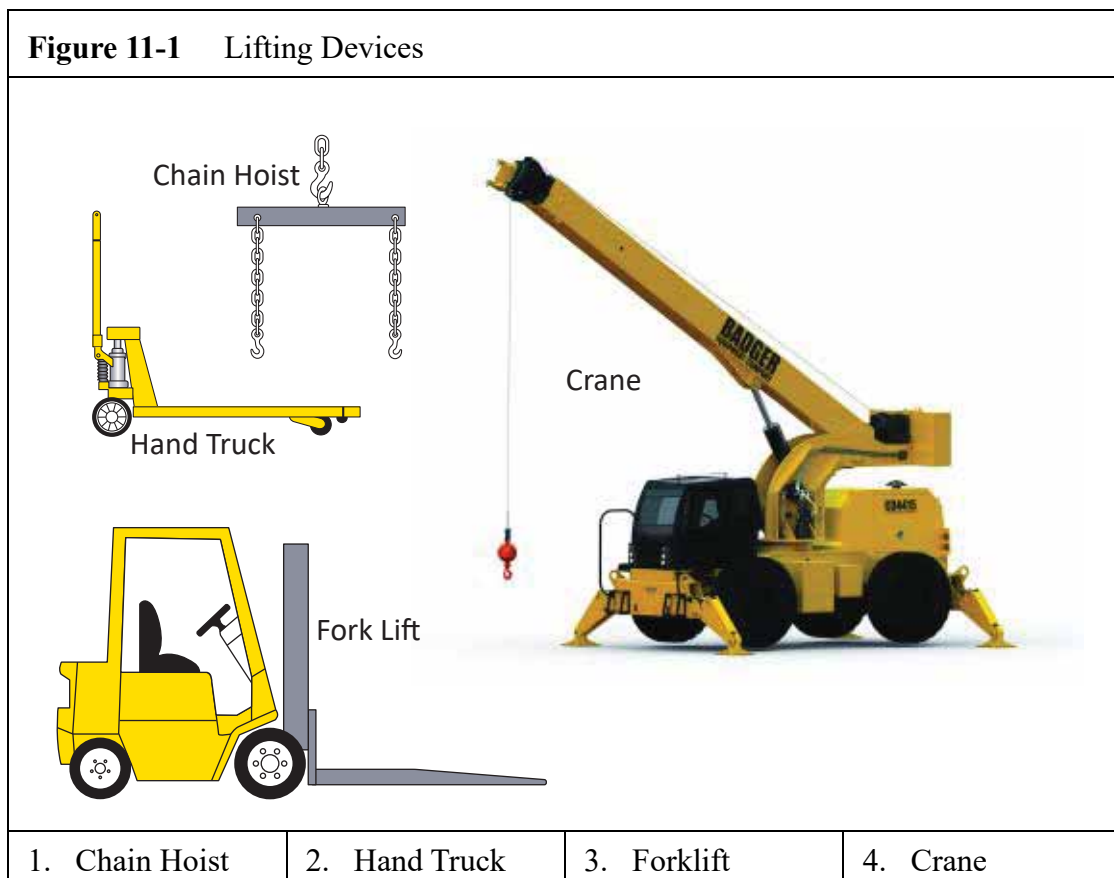

### WARNING

Be sure the lifting devices are capable of handling the weight of the unit (see Paragraph 1.4 for the approximate weight of the unit). Before lifting the unit, secure all loose or swinging parts to keep them from moving. Stay clear of lifted load.

The compressor unit may be furnished with one or more shipping braces for shipping and handling only. After installation and before operation, these braces must be removed entirely. Under no circumstances should the braces remain installed during operation or the manufacturer’s warranty for the compressor unit will be voided. All braces are tagged and labeled.

## 11.2.2 Installation of the Compressor Unit

### 11.2.2.1 General

The floor site must be capable of supporting the weight of the unit. Secure the compressor unit to the floor using ½” lag bolts. Position the unit so that it is level. Permissible inclination of the compressor unit is listed in Paragraph 1.4.




### CAUTION

The inclination values listed in Paragraph 1.4 are valid only if the oil level of the compressor is level with but does not exceed the upper mark of the oil dipstick or oil level sight glass.

If equipped with machine leveling feet, ensure the unit is leveled to prevent movement when operating. Raise the unit with a forklift or crane to raise the unit at the leveling foot. Loosen the locking nut and turn the leveling bolt clockwise to desired height. Lock the leveling foot in place with the provided hex-nut once the desired height is achieved. Set the unit back down on the floor and check adjusted height. If further adjustment is needed repeat.

**Figure 11-2** Leveling Feet

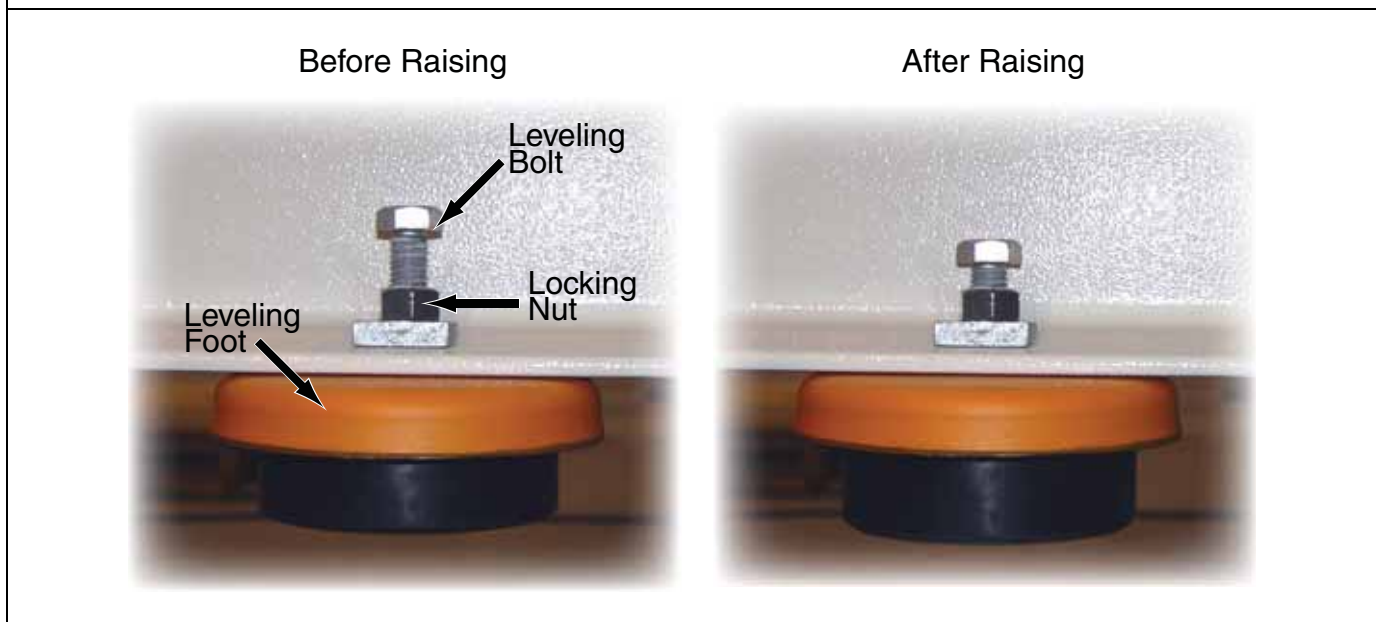

Ensure that the compressor Gas intake is supplied with fresh Gas. The intake Gas must not contain any exhaust fumes or flammable vapors such as paint solvents, which may cause an internal fire. Make sure that the intake Gas is unobstructed and moisture in the intake Gas is kept to a minimum. It is important that units draw in clean Gas. The quality of the incoming Gas determines the quality of the compressed Gas. This is important even for industrial Gas, as any incoming fumes will also be compressed and will increase the toxicity to anyone working with the compressed Gas.

If a remote control is provided, the unit must be equipped with a clearly visible plate warning the possibility of the unit starting. As an additional measure, anyone starting the unit by remote control must

make sure that no one is checking or operating the unit. For this purpose, a second warning plate should be provided at the remote control unit.



**AUTOMATIC COMPRESSOR CONTROL  
UNIT MAY START WITHOUT WARNING!**

Before carrying out maintenance and repair work, switch off at the main switch and ensure the unit will not restart.

Observe and maintain an ambient temperature range of 40 - 115 °F (5 - 45 °C).

The area in which the compressor unit is installed should be well lit and easily accessible to facilitate servicing and routine maintenance.

**11.2.2.2 Ventilation**

During normal compression, heat is generated by the compressor and by the drive motorengine. For Gas-cooled compressor units, this heat needs to be vented away by sufficient ventilation.

**11.2.2.2.1 Outdoor Installation**

It is recommended that all gasoline and diesel engine driven compressor units be installed outdoors. Electrically driven compressor units may be installed outdoors only if enclosed with weatherproof enclosure panels.

**11.2.2.2.2 Indoor Installation**

The best location to install the compressor unit indoors is against an outside wall with a suitably large Gas vent in front of the cooling fan. Additionally, it is necessary to position an exhaust opening in the opposite wall, close to the ceiling or in the ceiling.

As a basic rule of thumb, the room should be ventilated sufficiently so as to prevent the ambient room temperature from exceeding 105 °F (41 °C). Additional heat generating equipment or piping should be avoided or must be well insulated.

**11.2.2.2.3 Natural Ventilation**

Natural ventilation should only be used up to a maximum drive power of 20 Hp. Units with higher powered drives should incorporate forced ventilation. To determine the size of the required intake and exhaust openings for natural ventilation, refer to the following table:

Drive Hp	Intake and Exhaust Openings Dependent on Room Volume (V) and Height (h)					
	V = 1750 ft <sup>3</sup> h = 6.5 ft		V = 3500 ft <sup>3</sup> h = 10 ft		V = 7000 ft <sup>3</sup> h = 13 ft	
	Intake (ft <sup>2</sup> )	Exhaust (ft <sup>2</sup> )	Intake (ft <sup>2</sup> )	Exhaust (ft <sup>2</sup> )	Intake (ft <sup>2</sup> )	Exhaust (ft <sup>2</sup> )
3	1.3	1.1	...	...	...	...
5	3.2	2.7	1.3	1.1	...	...
7.5	4.5	3.8	2.6	2.2	1.3	1.1
10	9.7	8.1	6.5	5.4	2.6	2.2
15	14.5	12.4	9.7	8.1	5.8	4.8
20	20.6	17.2	15.6	12.9	9.7	8.1

**11.2.2.2.4 Forced Ventilation**

Forced ventilation should be utilized on units with drive power higher than 20 Hp. For units with lower powered drive natural ventilation may be used. To determine the size of the required intake and exhaust openings for forced ventilation, refer to the following table

Drive Hp	Intake & Exhaust Openings Dependent on Room Volume (V) and Height (h) <sup>a</sup>					
	V = 1750 ft <sup>3</sup> h = 8 ft		V = 3500 ft <sup>3</sup> h = 10 ft		V = 7000 ft <sup>3</sup> h = 13 ft	
	Intake (ft <sup>2</sup> )	Exhaust cfm	Intake (ft <sup>2</sup> )	Exhaust cfm	Intake (ft <sup>2</sup> )	Exhaust cfm
25	3.3	3,300	3.2	3,200	3.0	3,000
30	4.0	3,960	3.8	3,840	3.6	3,600
40	5.3	5,280	5.1	5,120	4.8	4,800
50	6.6	6,600	6.4	6,400	6.0	6,000
60	7.9	7,920	7.7	7,680	7.2	7,200
75	9.9	9,900	9.6	9,600	9.0	9,000
100	13.2	13,200	12.8	12,800	12.0	12,000
125	16.5	16,500	16.0	16,000	15.0	15,000
150	19.8	19,800	19.2	19,200	18.0	18,000

a. The intake sizes given in the above table are for a cooling Gas velocity of 1000 ft.min. Bauer recommends that the cooling Gas velocity be in the range of 600 ft. min. to 2000 ft.min.

**11.2.3 Intake Gas**

The quality of Gas produced by the compressor unit is directly related to the quality of Gas that is taken in by the compressor. Bauer compressors require clean, dry, shop Gas for optimal performance. The intake Gas source must be free of contaminants such as fumes, engine exhaust, and solvents. If the intake source will be piped in adhere to the following general rules:

- Use PVC or similar material that will not corrode and contaminate the incoming Gas.
- The entire run should be the same sized piping
- Install a moisture trap with a drain prior to the compressor inlet
- If using glue on the piping, allow sufficient time for the vapors to dissipate before using the compressor

**11.2.3.1 Inside Gas Source**

The location of the compressor and its Gas intake are significant to the quality of the Gas produced and the performance of the drying system. Locating the Gas intake near other heat producing equipment must be avoided when possible. A close proximity to water heaters, boilers, and such are potential contaminants to the quality of the processed Gas. Drying cartridge lifespans are dramatically reduced when the processed Gas's temperature is elevated. Inadequate ventilation reduces the ability of the compressor to cool itself or the Gas being compressed.

High levels of CO<sub>2</sub> are another cause of breathing Gas to become contaminated. CO<sub>2</sub> limits are 1,000 ppm. and most fresh Gas already contains about 330 ppm. A number of people inside poorly ventilated rooms can easily bring the CO<sub>2</sub> levels up to 600 ppm or more. If high levels of CO<sub>2</sub> are normally present at the compressor intake, increased ventilation may alleviate the problem. Moving the intake to an outside location is another viable solution.

**11.2.3.2 Outside Gas Source**

Moving a compressor’s Gas intake to an outside location can improve the quality of the processed Gas and increase the lifespan of the drying filters. Before moving a compressor’s intake to an outside location take into account the changing conditions that may occur around where the Gas intake will be. Other exhausts vents, vehicle or machinery exhausts and fumes may contaminate the Gas in the area you wish to place your Gas intake. Gas samples can be taken and submitted for laboratory analysis if there are any doubts in the Gas quality.

If your Gas source is located outside, inspect the inlet piping regularly to ensure nothing has obstructed or contaminated the Gas that is being taken in.

**11.2.4 Compressor Intake Piping**

It is best to keep intake piping as short and straight as possible. Minimum height should be 8 - 10 ft. The end of the piping should point downward to avoid precipitation. Nothing should be allowed to restrict the Gas flow.


Breathing Gas can often fail to meet CGA standards, unless procedures are taken to provide a fresh Gas source for the compressor intake. The inlet source should be the cleanest ambient Gas available. Factors to consider when installing compressor intake piping in a building are the length of pipe, the diameter, and the number of 90° bends. All intake pipes must have a bug screen on the inlet end to prevent birds, bugs, or large debris from entering the inlet system. A gooseneck end or water trap on the pipe will prevent water from entering the compressor system. See the following table for recommended inlet pipe diameter.

<b>Guideline for Intake Piping with Max. Four 90° bends</b>		
<b>Inlet Capacity</b>	<b>Distance</b>	<b>Pipe Diameter<sup>a</sup></b>
≤ 13 SCFM	≤50 ft	2”
	50 - 100 ft	3”
	100 - 150 ft	4”
13 - 30 SCFM	≤50 ft	3”
	50 - 100 ft	4”
	100 - 150 ft	5”
30 - 50 SCFM	≤50 ft	4”
	50 - 100 ft	5”
	100 - 150 ft	6”

a. Add 1” of pipe diameter if the number of 90° bends exceeds four

### 11.2.5 Installation Procedures

1. Use PVC pipe for ease of installation.
2. Ensure pipe is attached securely to the wall.
3. Terminate the PVC pipe 3 to 5 ft from the compressor intake with a stub reducer the same size as the compressor inlet housing pipe.

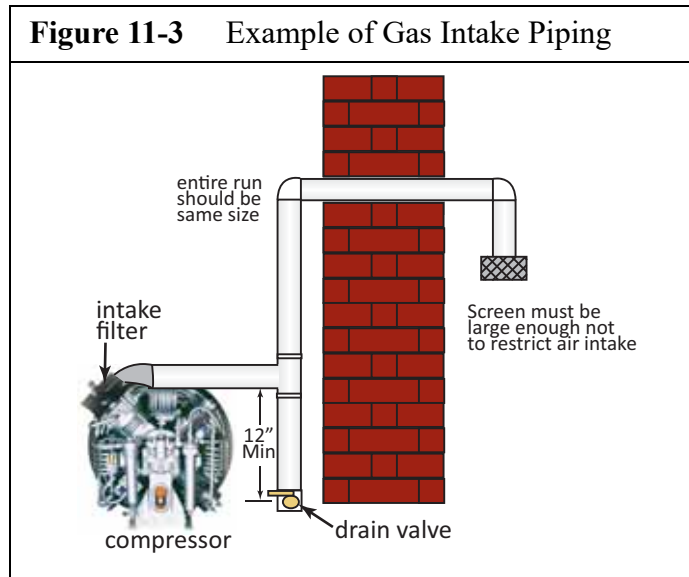

### 11.2.6 Electrical Installation

#### 11.2.6.1 Electric Drive

When making the electrical connections to the system, the following instructions are mandatory:


- Comply with all local, state and federal regulations concerning electrical installation.
- Arrange for the electrical connections to be made by a certified electrician only.
- Ensure that the motor voltage, control unit voltage, and frequency conform with the main voltage and frequency. Do not connect the compressor unit to a voltage other than the one specified on the nameplate.
- Provide all necessary cables and main fuses and a master disconnect switch. The fuse protection for the compressor must be carried out in compliance with local, state and national electrical regulations.

#### 11.2.6.2 Electrical Supply

The machine is factory wired according to order. If the voltage is to be changed, consult the factory for instructions and necessary parts.

For standard models the only customer wiring necessary is from the customer supplied disconnect switch to the compressor unit electrical enclosure. All wiring should be done by a licensed electrician familiar with national, state and local electrical codes.

The label shown in Figure 11-4 indicates where the incoming power is connected to the compressor unit electrical enclosure. This label must be removed before using the equipment.

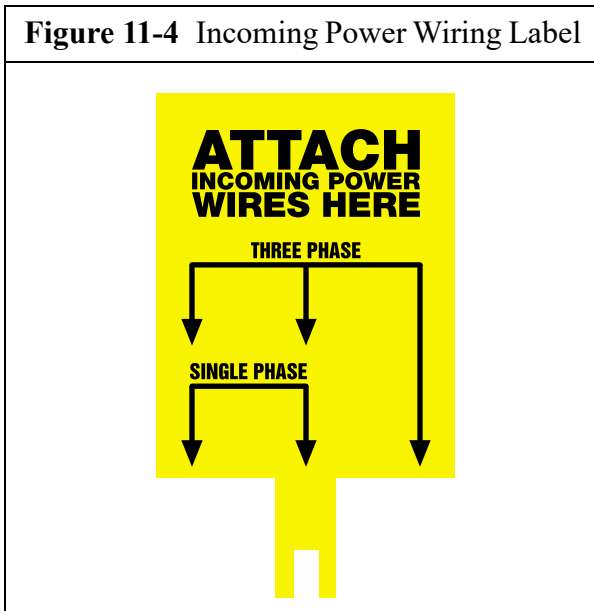

The use of improperly sized wire can result in sluggish operation, unnecessary tripping of overload relays and/or blowing of fuses. The following tables are provided as a guide for proper wire size

1 PHASE									
Motor Hp	Full Load Amps			Fuse Amps <sup>a</sup>			Minimum Wire Size <sup>b</sup>		
	120 V	208 V	230 V	120 V	208 V	230 V	120 V	208 V	230 V
2	24	13.2	12	30	20	17.5	10	...	14
3	34	18.7	17	50	30	25	8	10	10
5	56	30.8	28	80	50	40	4	8	8
7.5	80	44	40	100	70	60	3	8	8
10	...	55	50	...	90	60	...	6	6

- a. Dual element time delay fuse Amps.
- b. Normal Copper wire with THW, THWN, or XHHW insulation.

**3 PHASE**

Motor Hp	Full Load Amps			Fuse Amps <sup>a</sup>			Minimum Wire Size <sup>b</sup>		
	208 V	230 V	460V	208 V	230 V	460V	208 V	230 V	460V
2	7.5	6.8	3.4	12	10	5.6	14	14	14
3	10.6	9.6	4.8	17.5	15	8	14	14	14
5	16.7	15.2	7.6	25	25	12	10	12	14
7.5	24.2	22	11	40	30	17.5	8	10	14
10	30.8	28	14	50	40	20	8	8	12
15	46.2	42	21	60	60	30	6	6	10
20	59.4	54	27	90	80	40	4	4	8
25	74.8	68	34	100	100	50	3	4	8
30	88	80	40	125	100	60	2	3	8
40	114	104	52	175	150	80	1/0	1	6
50	143	130	65	200	200	100	3/0	2/0	4
60	169	154	77	250	200	100	4/0	3/0	3
75	211.2	192	96	300	300	150	300 mcm <sup>c</sup>	250 mcm	1
100	273	248	124	400	350	175	500 mcm	350 mcm	20
125	343.2	312	156	500	400	200	700 mcm	600 mcm	30
150	396	360	180	600	500	250	900 mcm	700 mcm	40
175	—	—	203	—	—	300	—	—	300 mcm

- a. Dual element time delay fuse Amps.
- b. Normal Copper wire with THW, THWN or XHHW insulation.
- c. mcm = 1,000 circular mils

In the above tables, all values are based on 2011 NEC articles 430 and 310 (NFPA 70). These values are provided as a general guide; however, the information given on the motor nameplate supersedes the above information.

**11.2.7 Pneumatic Leaks**

Each unit is tested prior to leaving the manufacturing facility. All loose or leaking fittings are tightened prior to shipping. During the shipping process pneumatic connections may work loose and leaks may develop. Ensure each unit is leak tested prior to being placed in full operational usage.



## WARNING

Never tighten or adjust fittings or connections under pressure. Always de-pressurize first.

### 11.3 Long Term Storage

#### 11.3.1 General

If the compressor unit will be out of service for more than six months, it should be preserved in accordance with the following instructions:

1. Make sure that the compressor is kept indoors in a dry, dust-free room.
2. Cover the compressor with plastic sheets only if no condensation will form under the sheet.
3. Remove the sheet from time to time and clean the outside of the unit.
4. If this procedure cannot be followed, or if the compressor will be out of service for more than 24 months, please contact Bauer Product Support for special instructions.

#### 11.3.2 Preparations

Prior to preserving the compressor unit, it must be run until warm, i.e., up to the specified service pressure. Operate the unit for approximately 10 minutes, then carry out the following checks.

1. Check all pipes, filters and valves (including safety valves) for leakage.
2. Tighten all couplings, as required.
3. After 10 minutes, open the outlet valve and operate the compressor at adjusted minimum pressure using the pressure maintaining valve for approximately 5 minutes.
4. After the 5 minutes, shut the compressor unit down and completely drain all separators and filters. Close all valves.
5. Remove filter heads and lubricate the threads with petroleum jelly.

##### 11.3.2.1 Units Equipped with a Filter System

1. Ensure that cartridges remain in the drying system chambers. This will prevent oil from entering the outlet lines as a result of preservation procedures.
2. Remove the drying inlet tubing completely.

#### 11.3.3 Preserving the Compressor

1. Operate the compressor again and slowly spray approximately 0.35 oz. (10 cc) of oil into the inlet port while the compressor is running. Keep the shut-off valve and the condensate drain valves open.
2. After spraying the oil into the inlet port, run the compressor unit for an additional 5 minutes before shutting the compressor unit down.

3. Close the shut-off valve and condensate drain valves.
4. Close the inlet port with a dust cap and/or tape.

#### **11.3.4 Preventive Maintenance During Storage**

Operate the compressor once every six months as follows:

1. Remove the dust cap from the inlet port and install the inlet filter.
2. Open the outlet valve and allow the system to run approximately 5 minutes until there is outflow from the valve and oil is visible in the sight glass of the oil regulating valve.
3. Shut down the compressor.
4. Open the condensate drain valves, de-pressurize the unit, then close the drain valves again.
5. Remove the intake filter and replace the dust cap on the inlet port.

#### **11.3.5 Lubrication Oils for Preservation**

1. After prolonged storage periods, the oil will age in the compressor crankcase. The oil must be drained at least every 24 months and replaced with fresh oil.
2. The stated period can only be attained when the crankcase is sealed during the preservation period in accordance with the preservation requirements.
3. After changing the oil, the compressor must be operated according to the instructions above.
4. Check the lubrication of the compressor during the every-six-month brief operation.
5. The oil pump is functioning properly when oil can be seen flowing through the sight glass of the oil pressure regulator or if the oil pressure gauge indicates the prescribed pressure.

#### **11.3.6 Reactivating the Compressor Unit**

1. Remove any dust cap or tape from the inlet port and install an intake filter cartridge.
2. Change the oil, ensuring proper oil level when refilled.
3. The motor must be thoroughly dry before applying power.
4. For units with a drying system, change all cartridges.
5. Run the compressor with open outlet valve for approximately 10 minutes. Check for proper operation of the lubricating system.
6. After 10 minutes, close the shut-off valve and run the system up to final pressure until the final pressure safety valve vents. On compressor units with a compressor control system, raise the pressure switch setting the switch above normal limits to override the pressure switch. Be sure to reset the switch after checking.
7. Check the interstage safety valves for leakage.
8. Establish the cause of any faults and remedy.
9. Stop the unit when it is running properly. The compressor is then ready for operation.



<b>Weekly or as required.</b>	<b>Para.</b>	<b>Date</b>	<b>Signature</b>

<b>500 Operating Hours.</b>	<b>Para.</b>	<b>Date</b>	<b>Signature</b>

<b>1,000 Operating Hours.</b>	<b>Para.</b>	<b>Date</b>	<b>Signature</b>

<b>2,000 Operating Hours.</b>	<b>Para.</b>	<b>Date</b>	<b>Signature</b>

<b>3,000 Operating Hours.</b>	<b>Para.</b>	<b>Date</b>	<b>Signature</b>

<b>Annually.</b>	<b>Para.</b>	<b>Date</b>	<b>Signature</b>

<b>Biennially. (Every two years)</b>	<b>Para.</b>	<b>Date</b>	<b>Signature</b>






**11.5 Reference Data**

**11.5.1 Tightening Torque Values**

1. Unless otherwise specified in text, the torque values in Table 1 apply.
2. The indicated torque values are valid for bolts in greased condition.
3. Self locking nuts must be replaced on reassembly
4. Pipe connections (swivel nuts) should be tightened just enough so that leakage is stopped. Not more than finger tight plus up to an additional half turn.

<b>Table 11-1: Torque Values</b>		
<b>Bolt or Screw</b>	<b>Size</b>	<b>Max. Torque</b>
Hex and Socket Head	1/4 in (6 mm)	7 ft-lb. (9.5 N m)
Hex and Socket Head	5/16 in (8 mm)	18 ft-lb. (24.4 N m)
Hex and Socket Head	3/8 in (10 mm)	32 ft-lb. (43.4 N m)
Hex and Socket Head	1/2 in. (12 mm)	53 ft-lb. (71.9 N m)
Hex and Socket Head	9/16 in (14 mm)	85 ft-lb. (115.3 N m)
Hex and Socket Head	5/8 in (16 mm)	141 ft-lb. (191.2 N m)

**11.5.2 Torque Sequence Diagrams**

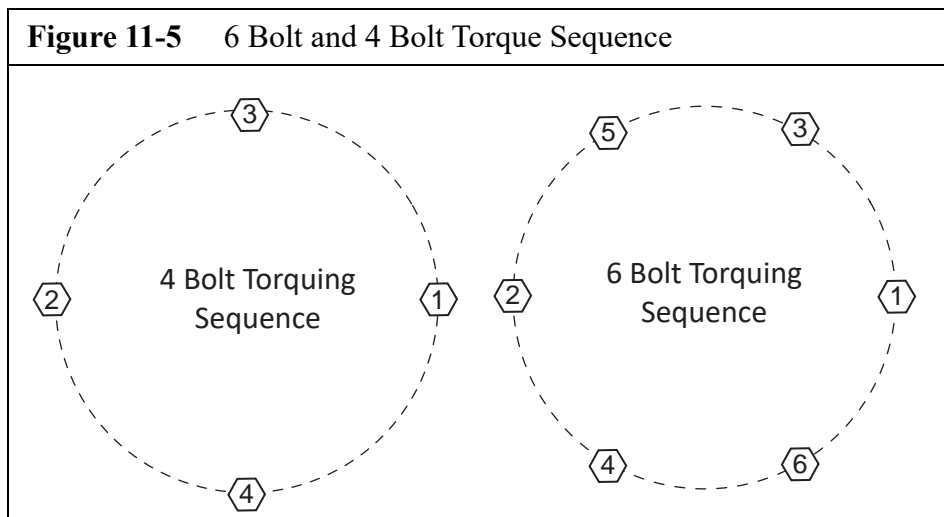

**11.5.3 Conversion Formulas**

$^{\circ}\text{F} = 9/5 \text{ }^{\circ}\text{C} + 32$

$\text{psi} = \text{bar} \times 14.5$

$^{\circ}\text{C} = 5/9 \times (^{\circ}\text{F} - 32)$

$\text{bar} = \text{psi} \times 0.0689$

### 11.5.4 Approved Lubricants Chart

Unless otherwise specified in text, use the lubricants in Table 2.

<b>Table 11-2: Lubricant Chart</b>	
<b>Usage</b>	<b>Lubricants</b>
O-rings, rubber and plastic parts; filter housing threads, sealing rings	Parker Super "O" Lube
Bolts, nuts, studs, valve parts, Copper gaskets and tube connection parts (threads, cap nut and compression rings)	Never-Seez® NSWT, Pipe Dope or teflon tape
Paper gaskets	DOW Corning 732 or equivalent silicone compound applied on both sides before assembly,
High temperature connections	DOW Corning 732 or equivalent temperature resistant compound,
Tube connection ferrules,	Never-Seez® NSWT

### 11.5.5 Glossary of Abbreviations and Acronyms

AC	Activated Charcoal, removes odor and taste
ACD	Automatic Condensate Drain
ASME	American Society of Mechanical Engineers
CW	Clock Wise
CCW	Counter-Clockwise
CGA	Compressed Gas Association
DIN	Deutsches Institut für Normung (≈ ASME)
DOT	Department of Transportation
E1	single phase electrical supply (Electric 1)
E3	three phase electrical supply (Electric 3)
HP	Hopcalite, a chemical catalyst which converts carbon monoxide to carbon dioxide
IAW	In Accordance With
MS	Molecular Sieve, removes moisture
NEC	National Electrical Code
NEMA	National Electrical Manufacturers Association
NFPA	National Fire Protection Association
OSHA	Occupational Safety & Health Administration
ODP	Open Drip-proof (motor)
OEM	Original Equipment Manufacturer
PLC	Programmable Logic Controller
PMV	Pressure Maintaining Valve
SC	Securus® moisture sensing device

**11.6 Additional Documents****11.6.1 Diagrams and Drawings**

Any included drawings, wiring diagrams, pneumatic flow diagrams, etc., will be bound next to the back cover in a hard copy manual or included as a separate file on a CD.

**11.6.2 Other Documents**

OEM Manuals and other Bauer manuals may be included in the documentation shipping package.

## CORRECTIONS & COMMENTS

In an effort towards constant improvement, the Documentation section of Bauer Compressors, Inc. would like to give you the opportunity to suggest improvements or corrections to this manual. If you find any inaccuracies or have suggestions feel free to E-mail us at: *documentation@bauercomp.com*, or fill out the form below and mail it to us:

**Submitters Contact Information:**

**Unit Information:**

Name: \_\_\_\_\_

Model: \_\_\_\_\_

Address: \_\_\_\_\_

Serial#: \_\_\_\_\_

(number & street)

Block#: \_\_\_\_\_

\_\_\_\_\_

(city, state \ zip)

E-mail: \_\_\_\_\_

MFG Date: \_\_\_\_\_

(optional)

Inaccuracies: page# \_\_\_\_\_ figure# \_\_\_\_\_ paragraph# \_\_\_\_\_

---

---

---

---

---

---

Suggested Corrections: \_\_\_\_\_

---

---

---

---

---

---

Additional Comments: \_\_\_\_\_

---

---

---

---

---

---

fold here



place  
postage  
here

**Bauer Compressors, Inc.**  
**Attn: Documentation**  
**1328 Azalea Garden Rd.**  
**Norfolk, VA 23502-1944**

fold here



tape or glue here